

Contents

00	Technical data	1
1	Technical data	1
1.1	Running gear	1
1.2	Steering	1
2	Proper disposal procedures for oil-filled and gas-filled components	2
2.1	Discharging air spring struts	2
2.2	Discharging accumulator	3
2.3	Draining power steering rack	3
3	Shock absorbers	5
3.1	Checking shock absorbers on shock tester	5
3.2	Maximum values "a" in mm	6
4	Positioning vehicle on lifting platform and setting down on wheels	7
4.1	Raising and lowering vehicle when air spring system has / has not been opened	7
40	Front suspension	8
1	General notes on front axle	8
1.1	Contact corrosion	8
1.2	General notes	8
1.3	Repairing threads in longitudinal member	9
1.4	Raising wheel bearing housing to reference position before tightening bolts	9
1.5	Exploded view of front axle	12
2	Mounting bracket, upper links, air spring strut	13
2.1	Exploded view of mounting bracket, upper links, air spring strut	13
2.2	Removing and installing air spring strut	16
2.3	Charging air spring strut	20
2.4	Servicing air spring strut	22
2.5	Eliminating indentations in boot	25
2.6	Removing and installing mounting bracket	25
2.7	Removing and installing front upper link	26
2.8	Removing and installing front and rear upper links	28
2.9	Renewing bushes for front and rear upper links	30
3	Subframe, engine cross member, coupling rod, anti-roll bar	32
3.1	Exploded view of subframe, engine cross member, coupling rod, anti-roll bar	32
3.2	Removing and installing subframe	35
3.3	Removing and installing coupling rod	42
3.4	Removing and installing anti-roll bar	43
4	Track control link, guide link, vehicle level sender	45
4.1	Exploded view of track control link, guide link, vehicle level sender	45
4.2	Removing and installing track control link	47
4.3	Renewing bush for track control link	49
4.4	Removing and installing guide link	53
4.5	Renewing bush (65 mm Ø) for guide link	55
4.6	Renewing bush (75 mm Ø) for guide link	58
4.7	Removing and installing vehicle level sender	60
5	Wheel bearing housing, wheel bearing unit	61
5.1	Exploded view of wheel bearing housing, wheel bearing unit	61
5.2	Removing and installing wheel bearing housing	63
5.3	Removing and installing wheel bearing unit	64
5.4	Renewing wheel bearing	66
6	Front and rear cross members, body brace	69
6.1	Exploded view of front and rear cross members, body brace	69
6.2	Removing and installing front and rear cross members	69



6.3	Removing and installing body brace	70
7	Drive shaft	73
7.1	Removing and installing drive shaft	73
7.2	Exploded view of drive shaft with peened triple roller joint AAR 3300 i and outer constant velocity joint (100 mm dia.)	76
7.3	Dismantling and assembling peened triple roller joint AAR 3300 i	79
7.4	Servicing outer constant velocity joint (100 mm dia.)	86
7.5	Dismantling, checking and assembling outer constant velocity joint	87
42	Rear suspension	89
1	General notes on rear axle	89
1.1	Contact corrosion	89
1.2	General notes	89
1.3	Repairing threads in longitudinal member	90
1.4	Raising wheel bearing housing to reference position before tightening bolts	90
1.5	Exploded view of rear axle	94
2	Subframe - front-wheel drive	95
2.1	Exploded view of subframe - front-wheel drive	95
2.2	Removing and installing subframe - front-wheel drive	97
3	Subframe - four-wheel drive	105
3.1	Exploded view of subframe - four-wheel drive	105
3.2	Removing and installing subframe - four-wheel drive	108
4	Anti-roll bar, transverse link, track rod, coupling rods, trapezium link, vehicle level sender	116
4.1	Exploded view of anti-roll bar, transverse link, track rod, coupling rods, trapezium link, vehicle level senders	116
4.2	Removing and installing anti-roll bar	119
4.3	Removing and installing transverse link	121
4.4	Removing and installing track rod	123
4.5	Removing and installing coupling rod (for anti-roll bar)	124
4.6	Removing and installing coupling rod (for track rod/trapezium link)	126
4.7	Removing and installing trapezium link	127
4.8	Removing and installing vehicle level sender	130
5	Air spring strut, wheel bearing housing, wheel bearing unit, bonded rubber bush for wheel bearing housing	131
5.1	Exploded view of air spring strut, wheel bearing housing, wheel bearing unit, bonded rubber bush for wheel bearing housing	131
5.2	Eliminating indentations in boot	134
5.3	Removing and installing air spring strut	135
5.4	Charging air spring strut	138
5.5	Servicing air spring strut	140
5.6	Removing and installing wheel bearing housing	143
5.7	Removing and installing wheel bearing unit	146
5.8	Renewing wheel bearing	147
5.9	Renewing bonded rubber bush for wheel bearing housing	152
6	Drive shaft	157
6.1	Removing and installing drive shaft	157
6.2	Exploded view of drive shaft with 88 mm \varnothing outer constant velocity joint and 108 mm \varnothing inner constant velocity joint	162
6.3	Servicing drive shaft with 88 mm \varnothing outer constant velocity joint	165
6.4	Exploded view of drive shaft with 100 mm \varnothing outer constant velocity joint and 108 mm \varnothing inner constant velocity joint	174
6.5	Servicing drive shaft with 100 mm \varnothing outer constant velocity joint	177
43	Self-levelling suspension	187
1	Operation of self-levelling suspension	187

1.1	Possible level settings	187
1.2	Setting vehicle level	187
1.3	Jacking mode	187
1.4	Towing mode	188
1.5	Shipping mode	188
2	Connecting VAS 5051 A and selecting functions	190
3	Servicing self-levelling suspension (adaptive suspension)	192
3.1	Electrical/electronic components - overview and fitting locations	192
3.2	Removing and installing front vehicle level senders	194
3.3	Removing and installing rear vehicle level senders	195
3.4	Removing and installing front body acceleration senders G341 and G342	197
3.5	Removing and installing rear body acceleration sender G343	198
3.6	Removing and installing adaptive suspension control unit J197	199
3.7	Re-adapting adaptive suspension control unit	200
3.8	Checking body acceleration signals from front/rear body acceleration senders	200
3.9	Bleeding or charging system	200
3.10	Re-adapting reference position (default position)	201
4	Self-levelling suspension (adaptive air suspension)	202
4.1	Overview of air pipes	202
4.2	Servicing air pipe	206
4.3	Renewing connection piece	211
4.4	Removing and installing solenoid valve block	213
4.5	Exploded view of air supply unit (vehicles with 6-cylinder and 8-cylinder petrol engines)	215
4.6	Removing and installing air supply unit (vehicles with 6-cylinder and 8-cylinder petrol engines)	218
4.7	Exploded view of air supply unit (vehicles with 6-cylinder and 8-cylinder diesel engines, 10-cylinder and 12-cylinder petrol engines)	221
4.8	Removing and installing air supply unit (vehicles with 6-cylinder and 8-cylinder diesel engines, 10-cylinder and 12-cylinder petrol engines)	223
4.9	Removing and installing accumulator	234
44	Wheels, tyres, vehicle geometry	237
1	General information on wheels and tyres	237
2	Servicing Tyre Pressure Monitoring System	238
2.1	General notes	238
2.2	Overview of Tyre Pressure Monitoring System components	238
2.3	Removing and installing Tyre Pressure Monitoring System control unit J502	239
2.4	Removing and installing front reception aerials	240
2.5	Removing and installing rear reception aerials	241
3	Operation of Tyre Pressure Monitoring System	243
4	Wheel alignment	244
4.1	General information on wheel alignment	244
4.2	Explanatory notes on production control numbers (PR nos.)	245
4.3	Test requirements:	246
4.4	Preparations required before calibration/adjustment of driver assist systems	247
4.5	Preparations for measurement	247
4.6	Wheel runout compensation	249
4.7	Checking centre position of steering rack	249
4.8	Assignment of adapters to running gear versions (for wheel alignment)	249
4.9	Sequence of operations for checking and adjusting wheel alignment	249
4.10	Moving vehicle to initial position for wheel alignment (running gear 1BK, 2MA and 2MB)	250
4.11	Wheel alignment specifications	251
4.12	Centralising camber at front wheels	251
4.13	Adjusting camber at rear wheels	253
4.14	Adjusting toe setting at rear wheels	254



4.15	Adjusting toe-in curve at front wheels	254
4.16	Raising vehicle with running gear 1BK, 2MA and 2MB	255
4.17	Adjusting toe-constant "S"	256
4.18	Adjusting toe setting at front wheels	256
5	Adaptive Cruise Control (ACC)	257
5.1	Exploded view of sensor for adaptive cruise control G550	257
5.2	General information on ACC	258
5.3	Adjustment procedure using ACC setting device VAS 6190	258
5.4	Adjustment procedure using ACC setting device VAS 6430	265
5.5	Removing and installing sensor for adaptive cruise control G550	271
6	Lane departure warning (Audi lane assist)	274
6.1	General notes on lane departure warning function	274
6.2	Calibration procedure	275
6.3	Removing and installing lane departure warning control unit J759 and backlight masking screen	282
48 - Steering		283
1	Steering wheel with airbag	283
1.1	Exploded view of steering wheel with airbag	283
1.2	Removing and installing steering wheel with airbag	284
2	Steering column	285
2.1	Exploded view of steering column	285
2.2	Handling and transporting steering column	286
2.3	Removing and installing steering column	287
2.4	Electrical adjustment of steering wheel position	291
2.5	Checking steering column for damage	291
2.6	Easy-entry facility for vehicles with seat memory	292
3	Power steering rack	293
3.1	Exploded view of power steering rack	293
3.2	Centralising steering	295
3.3	Removing and installing power steering rack (LHD vehicles)	296
3.4	Removing and installing power steering rack (RHD vehicles)	305
3.5	Servicing power steering rack	315
3.6	Removing and installing servotronic solenoid valve N119	318
3.7	Adjusting power steering rack	319
3.8	Removing and installing track rod ball joint	319
3.9	Removing and installing track rods	321
4	Checking fluid level, bleeding steering system and checking for leaks	325
4.1	Checking power steering fluid level (all engine versions except V8 diesel and V10 and W12 petrol engines)	325
4.2	Checking power steering fluid level (V8 diesel and V10 and W12 petrol engines only)	326
4.3	Bleeding steering system after repairs	329
4.4	Checking steering system for leaks	330
5	Power steering pump, hydraulic pipes and hoses, fluid reservoir (vehicles with 6-cylinder diesel engine)	331
5.1	Exploded view (vehicles with 6-cylinder diesel engine)	331
5.2	Checking delivery pressure of power steering pump (vehicles with 6-cylinder diesel engine)	334
5.3	Removing and installing power steering pump (vehicles with 6-cylinder diesel engine)	336
5.4	Installation position of suction hoses at power steering pump and fluid reservoir (vehicles with 6-cylinder diesel engine)	343
6	Power steering pump, hydraulic pipes and hoses, fluid reservoir (vehicles with 6-cylinder MPI petrol engine)	345
6.1	Exploded view (vehicles with 6-cylinder MPI petrol engine)	345
6.2	Checking delivery pressure of power steering pump (vehicles with 6-cylinder MPI petrol engine)	348

6.3	Removing and installing power steering pump (vehicles with 6-cylinder MPI petrol engine)	351
6.4	Installation position of suction hoses on power steering pump and fluid reservoir (vehicles with 6-cylinder MPI petrol engine)	357
7	Power steering pump, hydraulic pipes and hoses, fluid reservoir (vehicles with 6-cylinder FSI petrol engine)	358
7.1	Exploded view (vehicles with 6-cylinder FSI petrol engine)	358
7.2	Checking delivery pressure of power steering pump (vehicles with 6-cylinder FSI petrol engine)	361
7.3	Removing and installing power steering pump (vehicles with 6-cylinder FSI petrol engine)	363
7.4	Installation position of suction hoses on power steering pump and fluid reservoir (vehicles with 6-cylinder FSI petrol engine)	370
8	Power steering pump, hydraulic pipes and hoses, fluid reservoir (vehicles with 8-cylinder diesel engine)	372
8.1	Exploded view (vehicles with 8-cylinder diesel engine)	372
8.2	Checking delivery pressure of power steering pump (vehicles with 8-cylinder diesel engine)	376
8.3	Removing and installing power steering pump (vehicles with 8-cylinder diesel engine)	380
8.4	Installation position of suction hoses at power steering pump and fluid reservoir (vehicles with 8-cylinder diesel engine)	386
9	Power steering pump, hydraulic pipes and hoses, fluid reservoir (vehicles with 8-cylinder MPI petrol engine)	388
9.1	Exploded view (vehicles with 8-cylinder MPI petrol engine)	388
9.2	Checking delivery pressure of power steering pump (vehicles with 8-cylinder MPI petrol engine)	391
9.3	Removing and installing power steering pump (vehicles with 8-cylinder MPI petrol engine)	394
9.4	Installation position of suction hoses on power steering pump and fluid reservoir (vehicles with 8-cylinder MPI petrol engine)	402
10	Power steering pump, hydraulic pipes and hoses, fluid reservoir (vehicles with 8-cylinder FSI petrol engine)	403
10.1	Exploded view (vehicles with 8-cylinder FSI petrol engine)	403
10.2	Checking delivery pressure of power steering pump (vehicles with 8-cylinder FSI petrol engine)	406
10.3	Removing and installing power steering pump (vehicles with 8-cylinder FSI petrol engine)	410
10.4	Installation position of suction hoses at power steering pump and fluid reservoir (vehicles with 8-cylinder FSI petrol engine)	415
11	Power steering pump, hydraulic pipes and hoses, fluid reservoir (vehicles with 10-cylinder petrol engine)	417
11.1	Exploded view (vehicles with 10-cylinder petrol engine)	417
11.2	Checking delivery pressure of power steering pump (vehicles with 10-cylinder petrol engine)	421
11.3	Removing and installing power steering pump, vehicles with 10-cylinder petrol engine	426
11.4	Installation position of suction hoses at power steering pump and fluid reservoir (vehicles with 10-cylinder petrol engine)	431
12	Power steering pump, hydraulic pipes and hoses, fluid reservoir (vehicles with 12-cylinder petrol engine)	432
12.1	Exploded view (vehicles with 12-cylinder petrol engine)	432
12.2	Checking delivery pressure of power steering pump (vehicles with 12-cylinder petrol engine)	435
12.3	Removing and installing power steering pump, vehicles with 12-cylinder petrol engine	439
12.4	Installation position of suction hoses at power steering pump and fluid reservoir (vehicles with 12-cylinder petrol engine)	449