

Contents

27 - Starter, current supply, CCS	1
1 Contact corrosion	1
2 Battery	2
2.1 Battery - general notes	2
2.2 Maintenance-free batteries	2
2.3 Disconnecting and connecting battery	2
2.4 Removing and installing battery	3
2.5 Checking battery	6
2.6 Preparations before measuring no-load voltage	6
2.7 Charging battery	6
2.8 Preparations before charging battery	6
2.9 Preparations for back-up power supply of battery	7
2.10 Removing and installing battery cut-off relay J655	8
2.11 Removing and installing battery isolation igniter N253	8
2.12 Removing and installing energy management control unit J644	8
3 Removing and installing alternator	10
3.1 Vehicles with 3.0 ltr. MPI engine	10
3.2 Vehicles with 2.8 ltr. and 3.2 ltr. FSI engine	14
3.3 Vehicles with 3.7 ltr. and 4.2 ltr. MPI engine	17
3.4 Vehicles with 4.2 ltr. FSI engine	20
3.5 Vehicles with 5.2 ltr. FSI engine	24
3.6 Vehicles with 6.0 ltr. MPI engine	26
3.7 Vehicles with 3.0 ltr. TDI engine	30
3.8 Vehicles with 4.0 ltr. TDI engine	34
3.9 Vehicles with 4.2 ltr. TDI engine	47
4 Checking and servicing alternator	61
4.1 Checking alternator	61
4.2 Servicing alternator	61
5 Removing and installing starter	62
5.1 Vehicles with 2.8 ltr. FSI, 3.0 ltr. MPI and 3.2 ltr. FSI engine	62
5.2 Vehicles with 3.7 ltr. and 4.2 ltr. MPI engine	63
5.3 Vehicles with 4.2 ltr. FSI engine	67
5.4 Vehicles with 5.2 ltr. FSI engine	72
5.5 Vehicles with 6.0 ltr. MPI engine	74
5.6 Vehicles with 3.0 ltr. TDI engine	77
5.7 Vehicles with 4.0 ltr. TDI engine	78
5.8 Vehicles with 4.2 ltr. TDI engine	80
90 - Gauges, instruments	83
1 Instrument cluster	83
1.1 Removing and installing instrument cluster	83
1.2 Pin assignment at multi-pin connectors on instrument cluster	85
1.3 Pin assignment on fuel gauge senders	86
1.4 Pin assignment at coolant temperature sender G62	87
1.5 Removing and installing radio-controlled clock receiver J489	95
1.6 Removing and installing garage door operation control unit J530	95
2 Cigarette lighter, socket	96
2.1 Removing and installing cigarette lighter U1	96
2.2 Removing and installing rear cigarette lighter U9	98
2.3 Removing and installing rear cigarette lighter U9 - vehicles with rear Climatronic operating and display unit E265	99
2.4 Removing and installing cigarette lighter illumination bulb L28	100



2.5	Removing and installing 12 V socket U18 / U19 in long centre console	100
2.6	Removing and installing 12 V socket U5 in luggage compartment - vehicles up to 06.2004	102
2.7	Removing and installing 12 V socket U5 in luggage compartment - vehicles from 06.2004 onwards	103
2.8	Renewing 12 V socket U5 - vehicles from 06.2004 onwards	103
3	Horn	105
3.1	Removing and installing horn and dual tone horn H1	105
4	Data bus diagnostic interface	107
4.1	Data bus diagnostic interface J533	107
4.2	Data bus diagnostic interface J533 - overview	107
4.3	Removing and installing data bus diagnostic interface J533	108
4.4	Connector at data bus diagnostic interface J533	109
92	Windscreen wash/wipe system	111
1	Contact corrosion	111
2	Windscreen wiper system	112
2.1	Moving windscreen wipers to service position	112
2.2	Renewing wiper blade	112
2.3	Removing and installing wiper arms	113
2.4	Adjusting wiper arms	114
2.5	Removing and installing wiper motor with wiper motor control unit J400	115
2.6	Renewing wiper motor with wiper motor control unit J400	118
3	Windscreen washer system	120
3.1	Removing and installing washer fluid reservoir	120
3.2	Removing and installing washer jets - vehicles up to 08.2007	121
3.3	Removing and installing washer jets - vehicles from 09.2007 onwards	121
3.4	Adjusting washer jets	122
4	Headlight washer system	123
4.1	Removing and installing headlight washer jets	123
4.2	Adjusting washer jets	123
4.3	Removing and installing washer fluid reservoir	123
5	Washer fluid hoses	124
94	Lights, bulbs, switches - exterior	125
1	Contact corrosion	125
2	Halogen headlights	126
2.1	Halogen headlights - exploded view	126
2.2	Removing and installing headlights	127
2.3	Adjusting headlights	128
2.4	Preparations for headlight bulb replacement	129
2.5	Renewing bulb for dipped beam headlights	132
2.6	Renewing bulb for main beam headlights	133
2.7	Renewing bulb for side lights	134
2.8	Renewing bulb for turn signal	135
2.9	Renewing headlight holders	136
2.10	Adapting headlights for driving on the left or right side of the road	136
3	Halogen headlights (USA vehicles)	138
3.1	Halogen headlights - exploded view	138
3.2	Removing and installing headlights	139
3.3	Adjusting headlights	140
3.4	Preparations before working on headlights	141
3.5	Renewing bulb for dipped beam headlights	142
3.6	Renewing bulb for main beam headlights	143
3.7	Renewing parking light bulb	144

3.8	Renewing bulb for turn signal	145
3.9	Renewing headlight holders	146
4	Gas discharge headlights	147
4.1	Safety precautions when handling gas discharge bulbs	147
4.2	Gas discharge headlight with cornering light/static cornering light - exploded view	147
4.3	Removing and installing headlights	149
4.4	Adjusting headlights	150
4.5	Preparations for headlight bulb replacement	152
4.6	Renewing gas discharge bulb	158
4.7	Removing and installing starter unit for gas discharge bulb - vehicles up to 08.2007	159
4.8	Removing and installing starter unit for gas discharge bulb - vehicles from 09.2007 onwards	161
4.9	Renewing bulb for main beam headlights	162
4.10	Renewing bulb for daytime running light	164
4.11	Renewing LED light	165
4.12	Renewing bulb for static cornering light	165
4.13	Renewing bulb for side lights - vehicles without static cornering light	166
4.14	Renewing bulb for side lights - vehicles with static cornering light	167
4.15	Removing and installing main and dip beam switch-over solenoid N347 / N348	169
4.16	Removing and installing swivel module position sensor G474 / G475	169
4.17	Renewing bulb for turn signal	169
4.18	Removing and installing dynamic cornering light control motor V318 / V319	170
4.19	Removing and installing headlight range control motor V48 / V49	170
4.20	Removing and installing gas discharge bulb control unit J343 / J344	172
4.21	Removing and installing output module for headlight J667 / J668	172
4.22	Renewing headlight holders	174
4.23	Adapting headlights for driving on the left or right side of the road - vehicles with adjustment lever	174
4.24	Adapting headlights for driving on the left or right side of the road - vehicles without adjustment lever	175
5	Gas discharge headlights - USA vehicles	177
5.1	Safety precautions when handling gas discharge bulbs	177
5.2	Gas discharge headlights - exploded view	177
5.3	Removing and installing headlights	179
5.4	Adjusting headlights	180
5.5	Preparations before working on headlights	182
5.6	Renewing gas discharge bulb	185
5.7	Removing and installing starter unit for gas discharge bulb - vehicles up to 08.2007	186
5.8	Removing and installing starter unit for gas discharge bulb - vehicles from 09.2007 onwards	187
5.9	Renewing bulb for main beam headlights	188
5.10	Renewing bulb for daytime running light	190
5.11	Renewing LED light	191
5.12	Renewing parking light bulb	191
5.13	Removing and installing main and dip beam switch-over solenoid N347 / N348	192
5.14	Removing and installing swivel module position sensor G474 / G475	192
5.15	Renewing bulb for turn signal	192
5.16	Removing and installing dynamic cornering light control motor V318 / V319	193
5.17	Removing and installing headlight range control motor V48 / V49	193
5.18	Removing and installing gas discharge bulb control unit J343 / J344	195
5.19	Removing and installing output module for headlight J667 / J668	195
5.20	Renewing headlight holders	196
6	Side marker light (USA vehicles)	198
6.1	Removing and installing side marker light	198
6.2	Renewing side marker light bulb	199
7	Fog lights - vehicles up to 08.2007	201

7.1	Removing and installing fog lights - Audi A8	201
7.2	Renewing fog light bulb - Audi A8 up to 09.2004	201
7.3	Renewing fog light bulb - Audi A8 from 10.2004 onwards	202
7.4	Removing and installing fog lights - Audi S8	202
7.5	Renewing fog light bulb - Audi S8	203
7.6	Adjusting fog lights	204
8	Fog lights - vehicles from 09.2007 onwards	205
8.1	Removing and installing fog lights	205
8.2	Renewing fog light bulb	205
8.3	Adjusting fog lights	206
9	Turn signal repeaters - vehicles up to 08.2007	207
9.1	Removing and installing turn signal repeater	207
10	Turn signal repeaters - vehicles from 09.2007 onwards	208
10.1	Turn signal in exterior mirror - exploded view	208
10.2	Removing and installing exterior mirror turn signal bulb L131 / L132	208
11	Entry light in exterior mirror - vehicles up to 08.2007	212
11.1	Removing and installing entry light in exterior mirror W52 / W53	212
12	Entry light in exterior mirror - vehicles from 09.2007 onwards	214
12.1	Entry light in exterior mirror - exploded view	214
12.2	Removing and installing entry light in exterior mirror W52 / W53	214
13	Exterior door handle lighting	218
13.1	Removing and installing exterior door handle lighting	218
14	Outer tail light cluster - vehicles up to 08.2007	219
14.1	Outer tail light cluster - exploded view	219
14.2	Removing and installing outer tail light cluster	220
14.3	Removing and installing LED printed circuit boards for tail light cluster	220
14.4	Removing and installing tail light control unit	221
14.5	Aligning tail light cluster with body contour	221
15	Outer tail light cluster - USA vehicles up to 08.2007	223
15.1	Outer tail light cluster - exploded view	223
15.2	Removing and installing outer tail light cluster	224
15.3	Removing and installing LED printed circuit boards for tail light cluster	224
15.4	Removing and installing tail light control unit	225
15.5	Aligning tail light cluster with body contour	225
16	Outer tail light cluster - vehicles from 09.2007 onwards	227
16.1	Outer tail light cluster - exploded view	227
16.2	Removing and installing outer tail light cluster	228
16.3	Aligning tail light cluster with body contour	228
17	Inner tail light cluster - vehicles up to 08.2007	230
17.1	Inner tail light cluster - exploded view	230
17.2	Removing and installing inner tail light cluster	230
17.3	Removing and installing bulb for reversing light and rear fog light	231
17.4	Removing and installing LED printed circuit boards and tail light control unit	232
17.5	Aligning tail light cluster with body contour	232
18	Inner tail light cluster - USA vehicles up to 08.2007	233
18.1	Inner tail light cluster - exploded view	233
18.2	Removing and installing inner tail light cluster	233
18.3	Removing and installing bulb for reversing light and rear fog light	234
18.4	Removing and installing LED printed circuit boards and tail light control unit	235
18.5	Aligning tail light cluster with body contour	235
19	Inner tail light cluster - vehicles from 09.2007 onwards	236
19.1	Inner tail light cluster - exploded view	236
19.2	Removing and installing inner tail light cluster	236
19.3	Removing and installing bulb for reversing light	237

19.4	Removing and installing bulb for rear fog light	238
19.5	Aligning tail light cluster with body contour	239
20	High-level brake light	240
20.1	Removing and installing high-level brake light	240
21	Number plate light	241
21.1	Removing and installing number plate light - vehicles up to 08.2007	241
21.2	Removing and installing number plate light - vehicles from 09.2007 onwards	241
22	Steering column switch module	242
22.1	Steering column switch module - exploded view	242
22.2	Removing and installing steering column switch module	243
22.3	Removing and installing return ring with slip ring	244
22.4	Removing and installing steering angle sender G85	246
22.5	Removing and installing steering column electronics control unit J527	246
22.6	Pin assignment at steering column electronics control unit J527 (front)	247
22.7	Pin assignment at steering column electronics control unit J527 (reverse side)	249
22.8	Removing and installing turn signal switch E2	250
22.9	Removing and installing cruise control system switch E45	251
22.10	Removing and installing intermittent wiper switch E22	251
23	Entry and start authorisation switch E415	253
23.1	Removing and installing entry and start authorisation switch E415	253
23.2	Pin assignment at entry and start authorisation switch E415	254
24	Parking aid	255
24.1	Parking aid - overview	255
24.2	Removing and installing parking aid control unit J446 (vehicles up to 11.2005)	256
24.3	Removing and installing parking aid control unit J446 (vehicles from 11.2005)	257
24.4	Removing and installing front parking aid warning buzzer H22 - 8-channel parking aid	257
24.5	Removing and installing rear parking aid warning buzzer H15	257
24.6	Removing and installing front parking aid senders - vehicles with twin grille	258
24.7	Removing and installing front parking aid senders - vehicles with single-frame radiator grille	260
24.8	Removing and installing rear parking aid senders	260
25	Automatic headlight range control	262
25.1	Automatic headlight range control - overview	262
25.2	Removing and installing control unit for headlight range control J431	262
96 - Lights, bulbs, switches - interior		264
1	Contact corrosion	264
2	Lights and switches in dash panel	265
2.1	Removing and installing buttons in instrument cluster trim	265
2.2	Removing and installing light switch	266
2.3	Removing and installing steering column adjustment switch E167	266
2.4	Removing and installing switches in dash panel	267
2.5	Removing and installing glove compartment light	268
2.6	Removing and installing glove compartment light switch E26	268
2.7	Removing and installing footwell light (front)	268
3	Lights and switches in front doors	270
3.1	Removing and installing bulb for door opener light	270
3.2	Removing and installing mirror adjustment switch E43	270
3.3	Removing and installing operating unit for window regulator in driver door E512	272
3.4	Removing and installing window regulator switch in front passenger door E107	273
3.5	Removing and installing driver side interior locking switch E150 / front passenger side interior locking switch E198	273
3.6	Removing and installing interior door lighting strip	274
3.7	Removing and installing switch panel with rear lid remote release button E233 and fuel tank flap release button E319	275

3.8	Removing and installing driver seat/front passenger seat memory operating unit E97 / E277	276
3.9	Removing and installing emergency-off button E190 / E466 for driver seat/front passenger seat memory operating unit	278
3.10	Removing and installing front passenger seat adjustment switch E157	279
3.11	Removing and installing door contact switch	280
3.12	Removing and installing door warning lamp and entry light	281
4	Lights and switches in rear doors	282
4.1	Removing and installing bulb for door opener light	282
4.2	Removing and installing rear left/rear right window regulator switch, in door E52 / E54	282
4.3	Removing and installing interior door lighting strip	283
4.4	Removing and installing background light in storage compartment in door	284
4.5	Removing and installing rear left interior locking switch E273 / rear right interior locking switch E274	285
4.6	Removing and installing door contact switch	285
4.7	Removing and installing door warning lamp and entry light	285
5	Lights and switches in centre console	287
5.1	Removing and installing light for centre console (front)	287
5.2	Removing and installing entry and start authorisation button E408 or driver identification control unit J589	287
5.3	Removing and installing front seat heating switches	289
5.4	Removing and installing rear seat heating switches	289
6	Lights and switches in seats and luggage compartment	290
6.1	Removing and installing footwell light (rear)	290
6.2	Removing and installing luggage compartment lights	290
6.3	Removing and installing button to close rear lid in luggage compartment E406	291
6.4	Removing and installing contact switch in lock cylinder for rear lid, anti-theft system and central locking system F124	291
7	Lights and switches in roof trim	292
7.1	Removing and installing vanity mirror light	292
7.2	Removing and installing front interior light with roof electronics control unit J528 - vehicles up to 08.2007	292
7.3	Removing and installing front interior light with roof electronics control unit J528 - vehicles from 09.2007 onwards	293
7.4	Renewing bulbs for interior light (front)	295
7.5	Removing and installing garage door operating unit E284	296
7.6	Renewing bulbs for reading light (front)	296
7.7	Removing and installing LED for background light (front)	296
7.8	Removing and installing rear interior light/reading light with rear operating unit for roof module E467 - vehicles up to 08.2007	296
7.9	Renewing rear interior light bulb - vehicles up to 08.2007	297
7.10	Renewing rear reading light bulb - vehicles up to 08.2007	298
7.11	Removing and installing rear interior light/reading light with rear operating unit for roof module E467 - vehicles from 09.2007 onwards	298
7.12	Renewing rear interior light bulb - vehicles from 09.2007 onwards	299
7.13	Renewing rear reading light bulb - vehicles from 09.2007 onwards	300
7.14	Removing and installing LED for background light (rear)	300
7.15	Removing and installing illuminated vanity mirror (rear)	300
7.16	Removing and installing vanity mirror light (rear)	301
8	Components on interior mirror	302
8.1	Removing and installing light sensor G399	302
8.2	Removing and installing humidity sender G355 - vehicles without lane departure warning	302
8.3	Removing and installing humidity sender G355 - vehicles with lane departure warning	304
9	Immobiliser	307
10	Entry and start authorisation system	308
10.1	Entry and start authorisation system - overview	308

10.2	Keyless entry system - overview	309
10.3	Exterior door handle for keyless entry system - exploded view	310
10.4	Removing and installing front exterior door handle switches F272 / F273	311
10.5	Removing and installing rear exterior door handle switches F274 / F275	311
10.6	Removing and installing interior aerial 1 for entry and start authorisation R138	311
10.7	Removing and installing entry and start authorisation control unit J518	312
10.8	Removing and installing interior aerial 2 for entry and start authorisation R139	313
10.9	Removing and installing interior aerial 3 for entry and start authorisation R154	313
10.10	Removing and installing luggage compartment aerial for entry and start authorisation R137	314
10.11	Removing and installing rear bumper aerial for entry and start authorisation R136	314
11	Anti-theft alarm with ultrasonic interior monitor	315
11.1	Removing and installing sender/receiver module for interior monitoring system G303 or G305	315
11.2	Removing and installing anti-theft/tilt system control unit J529	315
11.3	Removing and installing alarm horn H12	315
11.4	Removing and installing interior monitoring deactivation switch E183 and alarm system off switch E217	316
12	Lane change assist	318
12.1	Lane change assist - overview	318
12.2	Removing and installing button for lane change assist E530	318
12.3	Removing and installing lane change assist warning lamp in exterior mirror K233 / K234	319
12.4	Removing and installing lane change assist control unit J769 / J770	321
12.5	Calibrating lane change assist - test equipment layout	321
12.6	Calibrating lane change assist control unit J769 / J770	322
13	Towing bracket	329
13.1	Socket for towing bracket	329
13.2	Removing and installing trailer detector control unit J345	329
97 - Wiring		330
1	Contact corrosion	330
2	Component protection	331
3	Relay carriers, fuse carriers (engine compartment)	332
3.1	Removing and installing electronics box (plenum chamber)	332
3.2	Removing and installing relay and fuse holder in electronics box (plenum chamber)	335
4	Relay carriers, fuse carriers (vehicle interior)	338
4.1	Removing and installing fuse holder in dash panel (left-side)	338
4.2	Removing and installing CAN separating connector (left-side) T46a	339
4.3	Unplugging door separating connector (left-side)	340
4.4	Removing and installing onboard supply control unit J519	340
4.5	Removing and installing relay and fuse carrier behind dash panel (left-side)	341
4.6	Removing and installing electronics box (driver's side)	341
4.7	Removing and installing fuse holder at dash panel (right-side)	342
4.8	Removing and installing CAN separating connector (right-side) T46b	343
4.9	Unplugging door separating connector (right-side)	344
4.10	Removing and installing main fuse holder, A-pillar (right-side)	345
4.11	Removing and installing relay carrier in front footwell (right-side)	346
4.12	Removing and installing onboard supply control unit 2 J520	346
4.13	Removing and installing voltage converter for background lighting (driver's/front passenger's door)	347
4.14	Removing and installing voltage converter for rear left/right door background lighting	348
5	Relay carriers, fuse carriers (luggage compartment)	349
5.1	Removing and installing fuse holder in luggage compartment (left-side)	349
5.2	Removing and installing relay and fuse holder in luggage compartment (right-side)	350
5.3	Removing and installing heated windscreen control unit J505	351



6	Repairing wiring harnesses and electrical connectors	353
7	Repairing connector housings and electrical connectors	354
8	Releasing and dismantling connector housings	355
9	Cleaning contact surfaces with contact surface cleaning set VAS 6410	356
10	Repairing aerial wires	357
11	Fibre optic cables	358
12	Vehicle diagnostic, testing and information systems	359