

## Contents

<b>27 - Starter, current supply, CCS</b>	<b>1</b>
<b>1 Battery</b>	<b>1</b>
1.1 Basic information on the battery	1
1.2 Battery types	1
1.3 Warnings and safety precautions	3
1.4 Battery terminal screw connection	5
<b>2 Checking battery</b>	<b>6</b>
2.1 Test sequence	6
2.2 Visual inspection	8
2.3 Checking colour indicator of magic eye	9
2.4 Checking battery using vehicle diagnostic tester	10
2.5 Battery tester with printer VAS 6161	11
2.6 Battery tester with printer VAS 5097 A	17
2.7 Current draw test	23
2.8 Checking open-circuit voltage of battery, stock vehicles	24
<b>3 Charging battery</b>	<b>26</b>
3.1 Charging battery	26
3.2 Service charging	27
3.3 Totally discharged batteries	27
<b>4 Alternator</b>	<b>29</b>
4.1 Checking alternator	29
4.2 Bosch alternator up to 2000 - assembly overview	30
4.3 Bosch alternator from 2001 onwards - assembly overview	30
4.4 Removing and installing voltage regulator - Bosch alternator from 2001 onwards	31
4.5 Bosch alternator from 2007 onwards - assembly overview	32
4.6 Removing and installing voltage regulator - Bosch alternator from 2007 onwards	33
4.7 Checking carbon brushes - all types of Bosch alternators from 2001 onwards	34
4.8 Valeo alternator up to 2000 - assembly overview	34
4.9 Valeo alternator from 2001 onwards - assembly overview	35
4.10 Removing and installing voltage regulator - Valeo alternator from 2001 onwards	36
4.11 Checking carbon brushes - Valeo alternator from 2001 onwards	38
4.12 Removing and installing voltage regulator - Valeo alternator from 2007 onwards	38
4.13 Checking carbon brushes - Valeo alternator from 2007 onwards	39
4.14 Hitachi alternator - assembly overview	41
4.15 Removing and installing voltage regulator - Hitachi alternator	42
4.16 Checking carbon brushes - Hitachi alternator	44
4.17 Removing and installing poly V-belt pulley without freewheel	44
4.18 Removing and installing poly V-belt pulley with freewheel	45
4.19 Checking poly V-belt pulley with freewheel	52
<b>92 - Windscreen wash/wipe system</b>	<b>53</b>
<b>1 Washer fluid hoses</b>	<b>53</b>
1.1 Disconnecting and connecting washer fluid hose connectors	53
1.2 Servicing a smooth washer fluid pipe	55
1.3 Servicing a washer fluid hose with corrugated tube	56
<b>94 - Lights, bulbs, switches - exterior</b>	<b>59</b>
<b>1 Safety information for handling gas discharge bulbs</b>	<b>59</b>
<b>96 - Lights, bulbs, switches - interior</b>	<b>61</b>
<b>1 Immobiliser</b>	<b>61</b>
1.1 General notes	61
1.2 Defective transponder or loss of key	61



1.3	Renewing reader coil .....	61
1.4	Procedure for renewing lock set .....	62
<b>2</b>	<b>Towing bracket .....</b>	<b>63</b>
2.1	Removing and installing socket for towing bracket - version 1 .....	63
2.2	Removing and installing socket for towing bracket - version 2 .....	65
2.3	Removing and installing socket for towing bracket - version 3 .....	67
2.4	Removing and installing socket for towing bracket - version 4 .....	69
<b>97 - Wiring</b>	<b>.....</b>	<b>72</b>
<b>1</b>	<b>Vehicle diagnostic, testing and information systems .....</b>	<b>72</b>
1.1	Connecting vehicle diagnostic tester .....	72
<b>2</b>	<b>Repairing wiring harnesses and connectors .....</b>	<b>74</b>
2.1	General information on repairs to the vehicle electrical system .....	74
2.2	Wiring harness repair set .....	77
2.3	Description of tools .....	80
2.4	Repairing wiring harnesses .....	86
2.5	Repairing fibre optic cables .....	100
2.6	Repairing aerial wires .....	114
2.7	Repairing connector housings and electrical connectors .....	127
2.8	Releasing and dismantling connector housings .....	129
<b>3</b>	<b>Contact surface cleaning set VAS 6410 .....</b>	<b>131</b>
3.1	Using contact surface cleaning set VAS 6410 .....	131
<b>4</b>	<b>ESD (electrostatic discharge) workplace VAS 6613 .....</b>	<b>139</b>
4.1	Using ESD workplace VAS 6613 .....	139