

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Routing and attaching pipes/hoses and wiring</b> .....	<b>1</b>
<b>2 Contact corrosion</b> .....	<b>2</b>
<b>68 - Interior equipment</b> .....	<b>3</b>
<b>1 Shelves / trim panels</b> .....	<b>3</b>
1.1 Exploded view of glove box/knee bolster .....	3
1.2 Removing and installing glove box/knee bolster .....	5
1.3 Removing and installing glove box lid .....	7
1.4 Removing and installing cushioning mechanism for glove box lid/knee bolster .....	9
1.5 Exploded view of storage compartment/knee bolster (driver's side) .....	9
1.6 Removing and installing storage compartment/knee bolster (driver's side) .....	10
1.7 Removing storage box from storage compartment and installing .....	11
1.8 Removing and installing steering column trim .....	12
1.9 Removing and installing coin holder .....	13
<b>2 Removing and installing centre console without extension</b> .....	<b>16</b>
2.1 Centre console without extension - overview of fitting locations .....	16
2.2 Exploded view of centre console without extension .....	18
2.3 Removing and installing centre console .....	19
2.4 Removing and installing floor covering rod (rear and front) .....	29
2.5 Removing and installing air conditioner operating unit (front) .....	29
2.6 Removing and installing ashtray (front) .....	31
2.7 Renewing trim for ashtray (front) .....	32
2.8 Removing and installing cigarette lighter (front) .....	33
2.9 Removing and installing trim for centre console with multimedia operating unit .....	33
2.10 Removing and installing front centre console cup holder .....	34
2.11 Removing and installing rear vent (2-zone climate control) .....	35
2.12 Removing and installing trim for rear centre console (rear vent, 2-zone climate control) ..	37
2.13 Removing and installing rear cigarette lighter (rear vent, 2-zone climate control) .....	37
2.14 Removing and installing storage compartment (rear) .....	38
2.15 Renewing trim for storage compartment (rear) .....	38
2.16 Removing and installing centre console storage compartment (one-piece centre armrest) .....	39
2.17 Removing and installing centre console storage compartment (split centre armrest) .. .	39
2.18 Removing and installing rear vent (4-zone climate control) .....	41
2.19 Removing and installing rear air conditioner operating unit (4-zone climate control) .....	43
2.20 Removing and installing rear cigarette lighter (rear vent, 4-zone climate control) .....	44
2.21 Removing and installing trim for rear centre console (rear vent, 4-zone climate control) ..	44
2.22 Removing and installing rear air distributor and rear air duct (2 and 4-zone climate control) .....	45
2.23 Removing and installing rear vent warm air and cold air flap control motor (left-side/right- side) .....	46
2.24 Removing and installing rear centre console temperature sensor (left-side/right-side) .. .	47
2.25 Removing and installing centre console bracket, centre armrest bracket and bracket for air conditioner operating unit/ashtray (front) .....	47
<b>3 Removing and installing centre console with extension</b> .....	<b>49</b>
3.1 Centre console with extension - overview of fitting locations .....	49
3.2 Exploded view of centre console with extension .....	50
3.3 Removing and installing centre console with extension .....	51
3.4 Removing and installing extension for centre console .....	59
3.5 Removing and installing cup holder unit with small storage compartment lid .....	61
3.6 Removing and installing small storage compartment .....	61
3.7 Removing and installing lid for cup holder and small storage compartment .....	62

3.8	Removing and installing frame for cup holder unit with small storage compartment lid	62
3.9	Removing and installing large storage compartment	63
3.10	Removing and installing sliding cover for large storage compartment	64
3.11	Removing and installing sockets in large storage compartment	64
3.12	Removing and installing bracket for centre console extension	65
3.13	Bracket for centre console extension (front)	67
3.14	Bracket for centre console extension (rear)	68
3.15	Removing and installing rear air distributor and rear air duct	68
3.16	Removing and installing intermediate piece for air duct	70
3.17	Removing and installing rear vent and rear Climatronic operating and display unit	71
3.18	Removing and installing centre console storage compartment (split centre armrest)	72
<b>4</b>	<b>Front centre armrest (one-piece)</b>	<b>75</b>
4.1	Removing and installing centre armrest (one-piece)	75
4.2	Dismantling and assembling centre armrest (one-piece)	77
4.3	Removing and installing bracket for centre armrest	78
4.4	Removing and installing centre armrest stop	79
4.5	Removing and installing carrier for centre armrest	80
4.6	Removing and installing padding for centre armrest (one-piece)	81
4.7	Removing and installing cover panel for centre armrest (one-piece)	82
4.8	Removing and installing gas strut for centre armrest	82
<b>5</b>	<b>Front centre armrest (split)</b>	<b>84</b>
5.1	Removing and installing centre armrest (split)	84
5.2	Removing and installing lower support (split centre armrest)	85
5.3	Dismantling and assembling centre armrest (split)	86
5.4	Removing and installing cover panel for centre armrest (split)	87
5.5	Removing and installing padding for centre armrest (split)	87
5.6	Removing and installing split centre armrest storage compartment	88
5.7	Removing and installing lower cover panel for centre armrest (split)	88
5.8	Removing and installing trim	89
5.9	Removing and installing storage compartment light	90
5.10	Separating centre armrest (split)	90
<b>6</b>	<b>Interior mirror</b>	<b>92</b>
6.1	Removing and installing interior mirror	92
6.2	Checking operation of automatic anti-dazzle interior mirror	93
<b>69</b>	<b>Passenger protection</b>	<b>94</b>
<b>1</b>	<b>Safety regulations and test methods for pyrotechnic, electrical and mechanical components of the restraint system</b>	<b>94</b>
1.1	General safety regulations	95
1.2	Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	96
1.3	Additional safety regulations for side airbag	97
1.4	Additional safety regulations for curtain airbag	97
1.5	Safety regulations for crash sensors (pressure sensors) for front side airbag	98
1.6	Additional safety regulations for working on seat occupied sensor for front passenger's airbag deactivation - country-specific	98
1.7	Procedure for dealing with seat occupied sensor for front passenger's airbag deactivation following a crash - country-specific	99
1.8	Replacing pyrotechnic, electrical and mechanical components of restraint system following an accident	99
1.9	Checking airbag fastening elements following an accident	101
1.10	Accident not involving airbag triggering	101
1.11	Checking seat belts	102
1.12	Checking webbing	102
1.13	Checking automatic belt retractor (locking action)	103
1.14	Visual inspection of buckle	104

1.15	Functional test of buckle	104
1.16	Checking guide fittings and latch plate	104
1.17	Checking fastening elements and anchorage points following an accident	104
1.18	Checking child seat restraint function for additional child seats (not for driver's seat belt) - country-specific	105
1.19	Checking child seat anchors after an accident (Isofix, Top Tether)	105
1.20	Checking belt-fastened sensor for rear three-point seat belts with belt tensioner	105
<b>2</b>	<b>Seat belts</b>	<b>106</b>
2.1	Seat belt anchorage points (block diagram)	106
2.2	Outer floor panel anchorage point	107
2.3	Removing and installing three-point seat belt	107
2.4	Removing and installing belt height adjuster	109
2.5	Removing and installing rear three-point seat belt	109
2.6	Removing and installing third rear three-point seat belt (fixed rear seat backrest)	111
2.7	Removing and installing rear outer floor panel anchorage point	113
2.8	Removing and installing rear outer floor panel anchorage point with electrically operated individual seats	114
2.9	Centre floor panel anchorage points	114
2.10	Removing and installing centre floor panel anchorage points (buckle) with electrically operated individual seats	116
2.11	Replacing belt buckle	116
2.12	Replacing buckle for seat-occupied sensor for front passenger's airbag deactivation (country-specific)	116
<b>3</b>	<b>Servicing airbag</b>	<b>118</b>
3.1	General view of fitting locations	118
3.2	Removing and installing airbag control unit (J 234)	119
3.3	Removing and installing battery cut-off relay J655	120
3.4	Removing and installing battery isolation igniter N253	121
<b>4</b>	<b>Servicing driver side airbag N95</b>	<b>123</b>
4.1	Removing and installing driver side airbag unit N95	123
4.2	Removing and installing steering wheel	126
4.3	Removing and installing airbag coil connector and return ring with slip ring F138	128
<b>5</b>	<b>Servicing front passenger side airbag N131</b>	<b>130</b>
5.1	Removing and installing front passenger side airbag N131	130
5.2	Removing and installing key operated switch to deactivate front passenger side airbag E224	132
5.3	Service installation of key operated switch to deactivate front passenger side airbag E224	133
5.4	Removing and installing „PASSENGER AIRBAG OFF“ lamp K145	134
<b>6</b>	<b>Servicing side airbags</b>	<b>135</b>
6.1	Removing and installing front side airbag	135
6.2	Removing and installing rear side airbag	137
6.3	Removing and installing rear side airbag (individual electrically operated rear seat)	139
<b>7</b>	<b>Servicing curtain airbag</b>	<b>142</b>
7.1	Removing and installing curtain airbag	142
7.2	Removing and installing rear deformation element (Saloon)	144
7.3	Removing and installing rear deformation element (vehicles with long wheelbase)	145
7.4	Removing and installing front deformation element	147
<b>8</b>	<b>Removing and installing knee airbag</b>	<b>149</b>
8.1	Removing and installing driver's knee airbag	149
8.2	Removing and installing front passenger's knee airbag	150
8.3	Removing and installing deformation element for driver's knee airbag	152
8.4	Removing and installing deformation element for front passenger's knee airbag	154
<b>9</b>	<b>Servicing seat-occupied sensor for front passenger's airbag deactivation (country-specific)</b>	<b>156</b>
9.1	Removing and installing seat occupied sensor	156

9.2	Replacing rigid foam inserts	161
<b>10</b>	<b>Deactivation of rear side airbag with fixed backrest</b>	<b>162</b>
10.1	Deactivation	162
10.2	Activation	162
<b>11</b>	<b>Deactivation of rear side airbag with individual electrically operated rear seats</b>	<b>164</b>
11.1	Deactivation	164
11.2	Activation	164
<b>12</b>	<b>Servicing airbag crash sensors</b>	<b>166</b>
12.1	Removing and installing front airbag crash sensor	166
12.2	Removing and installing front side airbag crash sensor	168
12.3	Removing and installing rear side airbag (curtain airbag) crash sensor	169
<b>13</b>	<b>Removing and installing ISOFIX holder</b>	<b>171</b>
13.1	Rear ISOFIX holder with fixed rear seat backrest	171
13.2	Removing and installing rear ISOFIX holder with electrically operated individual seats	173
<b>14</b>	<b>Child seat anchor (USA, Canada)</b>	<b>174</b>
14.1	Removing and installing child seat anchor	174
<b>70 - Trim, insulation</b>		<b>175</b>
<b>1</b>	<b>Front door trim panels</b>	<b>175</b>
1.1	Exploded view of fitting locations	175
1.2	Exploded view of door trim cable routing	176
1.3	Removing and installing front door trim	176
1.4	Removing and installing trim panel	178
1.5	Replacing front door trim decorative trim	178
1.6	Removing and installing insulation	181
1.7	Removing and installing armrest	182
1.8	Removing and installing window regulator switch module	183
1.9	Dismantling armrest	183
1.10	Removing and installing mirror adjustment switch	184
1.11	Removing and installing interior door handle with central locking system switch	184
1.12	Removing and installing door warning light and footwell light	185
1.13	Removing and installing interior monitor switch module	185
1.14	Removing and installing hinged pocket with mount	185
1.15	Removing and installing hinged pocket	187
1.16	Removing and installing filler neck compartment lid/rear lid release switch	187
<b>2</b>	<b>Rear door trim panels</b>	<b>188</b>
2.1	Exploded view of fitting locations	188
2.2	Exploded view of door trim cable routing	189
2.3	Removing and installing rear door trim	189
2.4	Removing and installing trim panel	192
2.5	Removing and installing insulation	192
2.6	Removing and installing armrest	193
2.7	Removing and installing window regulator switch module	193
2.8	Removing and installing door warning light and footwell light	194
2.9	Removing and installing treble loudspeaker trim	194
2.10	Removing and installing treble loudspeaker	195
2.11	Removing and installing triangular trim	195
2.12	Removing and installing interior door handle with central locking system switch	195
2.13	Removing and installing hinged pocket with mount	196
2.14	Removing and installing hinged pocket without mount	197
2.15	Removing and installing glasses compartment - vehicles with long wheelbase only	198
2.16	Removing and installing mechanical sun blind	198
2.17	Removing and installing hook for sun blind	199
2.18	Removing and installing electric sun blind	200
<b>3</b>	<b>Dash panel</b>	<b>210</b>

3.1	Exploded view of fitting locations	210
3.2	Removing and installing left trim panel	211
3.3	Removing and installing trim panel with switch module on right	212
3.4	Removing and installing dash panel vent	213
3.5	Removing and installing dash panel insert trim panel	214
3.6	Removing and installing trim panel for display unit for front information display and operating unit control unit J685	216
3.7	Removing and installing trim panel above glove compartment	217
3.8	Removing and installing left or right defroster vent	219
3.9	Removing and installing sunlight penetration photosensor G107 with cap	220
3.10	Removing and installing centre defroster vent	220
3.11	Removing and installing indirect ventilation trim panel	221
3.12	Removing and installing left dash panel end trim	223
3.13	Removing and installing right dash panel end trim	223
3.14	Removing and installing dash panel	223
<b>4</b>	<b>Central tube</b>	<b>241</b>
4.1	Exploded view of fitting locations	241
4.2	Separating dash panel from central tube	241
<b>5</b>	<b>Roof trim</b>	<b>245</b>
5.1	Removing moulded headliner	245
5.2	Removing and installing sun visor	247
5.3	Removing and installing sun visor mount	247
5.4	Removing and installing roof reinforcement	248
<b>6</b>	<b>Trim panels</b>	<b>249</b>
6.1	Removing and installing upper A-pillar trim	250
6.2	Removing and installing roof grab handle	251
6.3	Removing and installing lower A-pillar trim	252
6.4	Removing and installing upper and lower A-pillar intermediate piece	253
6.5	Removing and installing foot rest	253
6.6	Removing and installing upper B-pillar trim	254
6.7	Removing and installing lower B-pillar trim	256
6.8	Removing and installing C-pillar trim	256
6.9	Removing and installing rear wheel housing trim	258
6.10	Removing and installing D-pillar trim	258
6.11	Removing and installing coat hook	260
6.12	Removing and installing narrow D-pillar trim	260
6.13	Removing and installing roof end trim	262
6.14	Removing and installing rear shelf	262
6.15	Removing and installing electric rear window sun blind	264
6.16	Removing and installing rear shelf replacement parts	266
6.17	Removing and installing floor covering	267
6.18	Removing and installing box for tool kit and hazard warning triangle	268
6.19	Removing and installing rear lid trim	268
6.20	Removing and installing emergency release handle	270
6.21	Removing and installing grip moulding	271
6.22	Removing and installing button to close rear lid in luggage compartment E406	271
6.23	Removing and installing rear cross panel trim	271
6.24	Removing and installing luggage compartment side trim	273
6.25	Removing and installing luggage compartment socket	274
6.26	Removing and installing ventilation grille	274
6.27	Separating luggage compartment side trim and drip rail trim/assembling	275
6.28	Removing and installing back panel trim	275
6.29	Removing and installing luggage compartment floor covering	277
6.30	Removing and installing rear shelf lower trim	278
6.31	Removing and installing fastening rings	278



<b>72 - Seat frames</b>	<b>280</b>
<b>1 Front seats (memory seat, electrically operated seat)</b>	<b>280</b>
1.1 Removing and installing seat	282
1.2 Connecting airbag adapter VAS 6229	284
1.3 Unplugging connector for side airbag	285
1.4 Pin assignment of emergency power supply connector	286
1.5 Removing and installing front runner cover	286
1.6 Removing and installing rear runner cover	288
1.7 Bump stop for front passenger's seat (USA)	289
1.8 Removing and installing front seat backrest	289
1.9 Replacing seat pan	292
1.10 Removing and installing side trim on sill panel side	292
1.11 Removing and installing side trim on tunnel side	294
1.12 Removing and installing front trim	294
1.13 Removing and installing seat side trim holder	295
1.14 Removing and installing seat adjustment switch	296
1.15 Removing and installing switch for 4-way lumbar support	296
1.16 Removing and installing seat and steering column adjustment control unit with memory J136 / front passenger seat adjustment with memory control unit J521	296
1.17 Removing and installing connector point	297
1.18 Removing and installing seat longitudinal adjustment motor	297
1.19 Replacing seat upper frame	300
1.20 Replacing seat pan	302
1.21 Removing and installing safety latch	302
1.22 Removing and installing seat height adjustment motor	303
1.23 Removing and installing seat angle adjustment motor	305
1.24 Removing and installing seat cushion extension motor	306
1.25 Removing and installing backrest adjustment motor	307
1.26 Removing and installing upper backrest cover panel	310
1.27 Removing and installing lower backrest cover panel	311
1.28 Removing and installing 4-way lumbar support	312
1.29 Removing and installing lumbar support adjustment motors	313
1.30 Removing and installing head restraint adjustment motor	314
1.31 Removing and installing upper backrest adjustment motor	315
1.32 Removing and installing electrically operated head restraint	316
1.33 Removing and installing motor for head restraint adjustment with active head restraint unit	317
1.34 Removing and installing seat ventilation unit (seat pan)	318
1.35 Removing and installing seat ventilation unit (backrest)	318
1.36 Removing rear footwell light	319
1.37 Electrically operated front seat wiring	319
<b>2 Rear seats</b>	<b>333</b>
2.1 Removing and installing rear seat bench	333
2.2 Removing and installing rear seat backrest	335
2.3 Removing and installing centre armrest	336
2.4 Dismantling centre armrest	337
2.5 Removing and installing cup holder	337
2.6 Removing and installing centre mount	337
2.7 Removing and installing head restraints	338
2.8 Removing and installing centre head restraint	339
2.9 Removing and installing centre head restraint blind	339
2.10 Dismantling centre head restraint	340
2.11 Removing and installing slide-in locking mechanism for centre head restraint	340
2.12 Removing and installing backrest mat	341
<b>3 Electrically operated individual rear seats</b>	<b>342</b>

3.1	Exploded view of electrically operated individual rear seat components	342
3.2	Removing and installing centre section	342
3.3	Removing and installing seat pan	343
3.4	Removing and installing individual rear seat	344
3.5	Removing and installing backrest holder	345
3.6	Seat centre section holders	345
3.7	Removing and installing backrest centre section	346
3.8	Removing and installing release handle for backrest centre section	346
3.9	Removing and installing rear shelf trim and filler piece	347
3.10	Removing and installing mounting plate for control units	348
3.11	Separating rear seat adjustment with memory control unit J522 from mounting plate	348
3.12	Separating driver side J674 and front passenger side J675 rear seat ventilation control unit from mounting plate	349
3.13	Removing and installing side trim on sill panel side	349
3.14	Removing and installing lumbar support adjustment switch	350
3.15	Removing and installing seat adjustment switch	351
3.16	Removing and installing side trim on tunnel side	351
3.17	Removing and installing front trim	351
3.18	Removing and installing seat ventilation unit (seat pan)	352
3.19	Removing and installing seat ventilation unit (backrest)	352
3.20	Removing and installing rear left seat V227 and rear right seat V228 rake adjustment motor	354
3.21	Removing and installing rear left seat V87 and rear right seat V88 longitudinal adjustment motor	355
3.22	Removing and installing upper backrest adjustment motor V232	356
3.23	Removing and installing rear left seat V127 and rear right V128 lumbar support longitudinal adjustment motor with four-way lumbar support	357
3.24	Removing and installing rear left seat lumbar support height adjustment motor V225 and V225	358
3.25	Removing and installing outer seat belt retainer	359
3.26	Removing and installing head restraint	359
<b>74</b>	<b>- Seat - padding, covers</b>	<b>360</b>
<b>1</b>	<b>Front seat covers and padding (memory seat, electrically operated seat)</b>	<b>360</b>
1.1	Removing and installing seat pan cover and padding (sports seat)	360
1.2	Removing and installing seat cushion extension trim	363
1.3	Removing and installing seat side padding and cover	364
1.4	Removing and installing backrest cover and padding (sports seat, standard seat)	365
1.5	Removing head restraint guides	367
1.6	Removing head restraint guides (convenience seat)	367
1.7	Removing and installing seat heating element (sports seat)	368
1.8	Removing and installing seat side padding heating elements (bonded)	368
1.9	Removing and installing backrest heating element	369
1.10	Removing and installing backrest heating elements (bonded)	369
1.11	Removing and installing head restraint cover and padding	370
<b>2</b>	<b>Rear seat covers and padding</b>	<b>371</b>
2.1	Removing and installing cover and padding for rear seat bench	371
2.2	Removing and installing cover and padding for rear seat backrest	374
2.3	Removing head restraint guides with backrest in position	376
2.4	Removing head restraint guides with backrest removed	376
2.5	Removing and installing head restraint cover and padding	377
<b>3</b>	<b>Covers and padding for electrically operated individual rear seats</b>	<b>378</b>
3.1	Removing and installing cover and padding for seat pan	378
3.2	Removing and installing cover and padding for individual rear seat	380
3.3	Removing and installing centre section cover	383
3.4	Removing head restraint guides	383
3.5	Removing and installing head restraint cover and padding	383



3.6	Removing and installing seat heating element .....	384
3.7	Removing and installing backrest heating element .....	384
<b>76</b>	<b>- Gas, water, electricity .....</b>	<b>385</b>
<b>1</b>	<b>  Servicing refrigerator box .....</b>	<b>385</b>
1.1	Exploded view of components .....	385
1.2	Removing and installing refrigerator box .....	386
1.3	Removing and installing thermostat .....	387
1.4	Removing and installing contact switch for refrigerator box interior light .....	388
1.5	Removing and installing LED for operation indicator .....	389
1.6	Removing and installing LED for refrigerator box interior light .....	391
1.7	Removing and installing battery monitor .....	391
1.8	Removing and installing control unit for refrigerator box compressor .....	392