

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Contact corrosion</b> .....	<b>1</b>
<b>2 Routing and attaching pipes/hoses and wiring</b> .....	<b>2</b>
<b>50 - Body - front</b> .....	<b>3</b>
<b>1 Body - front</b> .....	<b>3</b>
1.1 Service position for lock carrier .....	3
1.2 Exploded view - lock carrier with attachments .....	6
1.3 Detaching and attaching refrigerant lines at condenser .....	9
1.4 Exploded view - front brace .....	10
1.5 Exploded view - wing (front) .....	12
1.6 Exploded view - wing bracket (bottom) .....	13
1.7 Exploded view - wing bracket (centre) .....	15
<b>55 - Bonnet, rear lid</b> .....	<b>16</b>
<b>1 Bonnet</b> .....	<b>16</b>
1.1 Removing and installing bonnet .....	16
1.2 Adjusting bonnet .....	18
1.3 Striker at bonnet .....	19
1.4 Exploded view - bonnet seal .....	21
1.5 Exploded view - bonnet release cable .....	22
1.6 Removing and installing bonnet lock .....	24
<b>2 Rear lid</b> .....	<b>25</b>
2.1 Exploded view - rear lid .....	25
2.2 Removing and installing rear lid hinge .....	26
2.3 Exploded view - rear lid lock and lock cylinder .....	28
2.4 Exploded view - rear lid drive .....	30
2.5 Installation position of rear lid drive .....	31
2.6 Overview - drive for power latching system .....	32
2.7 Adjusting rear lid .....	32
<b>3 Tank flap</b> .....	<b>34</b>
3.1 Exploded view - tank flap .....	34
<b>57 - Front doors, door components, central locking</b> .....	<b>36</b>
<b>1 Front door</b> .....	<b>36</b>
1.1 Removing and installing window frame and window regulator .....	36
1.2 Removing and installing window regulator .....	38
1.3 Removing and installing door subframe .....	40
1.4 Removing and installing power latching motor .....	42
1.5 Removing and installing window regulator motor .....	44
1.6 Exploded view - front door handle .....	45
1.7 Removing and installing front door handle and lock cylinder .....	47
1.8 Removing and installing door lock .....	48
1.9 Removing and installing lock cover .....	50
1.10 Clipping mounting bracket into door lock .....	51
1.11 Adjusting front door .....	52
1.12 Checking door adjustment with template T40038/2 .....	53
<b>2 Central locking system</b> .....	<b>57</b>
2.1 Overview of components .....	57
2.2 Removing and installing convenience system central control unit J393 .....	58
2.3 Servicing central locking system .....	58
<b>58 - Rear doors, door components</b> .....	<b>60</b>



<b>1</b>	<b>Rear door</b> .....	<b>60</b>
1.1	Removing and installing window frame and window regulator .....	60
1.2	Removing and installing window regulator .....	62
1.3	Removing and installing door subframe .....	64
1.4	Removing and installing power latching motor .....	66
1.5	Removing and installing window regulator motor .....	68
1.6	Exploded view - rear door handle .....	69
1.7	Removing and installing rear door handle .....	71
1.8	Removing and installing door lock .....	73
1.9	Clipping mounting bracket into door lock .....	75
1.10	Adjusting rear door .....	75
1.11	Checking door adjustment with template T40038/2 .....	77
<b>60</b>	<b>- Sunroof</b> .....	<b>78</b>
<b>1</b>	<b>Exploded view - sliding/tilting sunroof</b> .....	<b>78</b>
1.1	Removing and installing sliding/tilting sunroof frame .....	79
1.2	Removing and installing wind deflector .....	80
1.3	Adjusting wind deflector .....	81
1.4	Removing and installing wind deflector motor .....	82
1.5	Performing initialisation for wind deflector motor .....	84
1.6	Removing and installing sliding/tilting sunroof motor .....	84
1.7	Exploded view - sliding/tilting sunroof panel .....	85
1.8	Removing sliding/tilting sunroof panel .....	87
1.9	Adjusting panel .....	88
1.10	Renewing inner trim .....	89
1.11	Removing and installing sliding headliner .....	90
1.12	Renewing panel seal .....	94
1.13	Adjusting zero position (motor) .....	94
1.14	Checking and adjusting zero position (slotted guide) .....	95
1.15	Checking and adjusting parallel setting .....	96
1.16	Performing initialisation and adaption for sunroof .....	97
<b>2</b>	<b>Water drain hoses</b> .....	<b>98</b>
2.1	Overview - water drain hoses .....	98
2.2	Water drain hose (front) .....	99
<b>63</b>	<b>- Bumpers</b> .....	<b>100</b>
<b>1</b>	<b>Bumper (front)</b> .....	<b>100</b>
1.1	Exploded view - bumper cover (front) .....	100
1.2	Removing bumper cover .....	104
1.3	Attaching cover to wing .....	107
1.4	Removing wheel spoiler .....	109
1.5	Removing and installing bumper (front) .....	110
1.6	Removing and installing bumper bracket .....	111
<b>2</b>	<b>Bumper (rear)</b> .....	<b>112</b>
2.1	Exploded view - bumper cover (rear) .....	112
2.2	Removing and installing support piece for rear bumper .....	115
2.3	Fastening strip for bumper cover (rear) .....	116
2.4	Removing bumper cover .....	118
2.5	Removing fastening strip .....	119
2.6	Removing and installing bumper (rear) .....	120
2.7	Removing bumper .....	120
2.8	Removing guide (rear) .....	121
<b>3</b>	<b>Exploded view - towing bracket</b> .....	<b>122</b>
3.1	Function of compensation element .....	123
3.2	Installing towing bracket .....	124

<b>64 - Glazing</b>	<b>126</b>
<b>1 Flush-bonded windows</b>	<b>126</b>
1.1 Removing and installing flush-bonded windows	126
1.2 Materials	129
1.3 Repairing windows using windscreen repair kit VAS 6092 and resin, Talon VAS 1993/2	130
1.4 Minimum drying times	130
1.5 Re-sealing windows	131
1.6 Exploded view - windscreen	131
1.7 Renewing trim section	133
1.8 Removing and installing rain and light sensor G397	136
1.9 Removing windscreen	139
1.10 Installing windscreen	143
1.11 Removing and installing side window	145
1.12 Exploded view - rear window	151
1.13 Renewing trim section	152
1.14 Bonding on trim section	153
1.15 Removing rear window	154
1.16 Preparations before installing a new rear window	158
1.17 Installing rear window	160
<b>2 Windows secured by threaded fasteners</b>	<b>162</b>
2.1 Removing and installing front door window	162
2.2 Removing and installing rear door window	165
<b>66 - Exterior equipment</b>	<b>167</b>
<b>1 Strips and panels</b>	<b>167</b>
1.1 Removing and installing roof joint moulding	167
1.2 Removing and installing roof trim strip	167
1.3 Trim strip for D-pillar	169
1.4 Removing trim strip	170
1.5 Removing side member trim	171
1.6 Window slot trim strip (front)	171
1.7 Window slot trim strip (rear door)	172
1.8 Trim cover for door (front)	172
1.9 Trim cover for rear door	174
1.10 Renewing protective side strips	174
1.11 Covers for water channel	176
<b>2 Exterior mirrors</b>	<b>177</b>
2.1 Removing and installing exterior mirror	177
2.2 Removing and installing adjustment motor	178
2.3 Removing and installing mirror housing	178
2.4 Removing and installing mirror adjustment unit	179
<b>3 Radiator grille</b>	<b>180</b>
3.1 Removing and installing radiator grille	180
<b>4 Underbody trim</b>	<b>181</b>
4.1 Removing and installing noise insulation	181
4.2 Exploded view - underbody trim (front)	182
4.3 Exploded view - underbody trim (rear)	183
4.4 Exploded view - heat shield (rear)	184
<b>5 Removing and installing wheel housing liner</b>	<b>185</b>
5.1 Front section of wheel housing liner (front)	185
5.2 Rear section of wheel housing liner (front)	185
5.3 Wheel housing liner (rear)	187
<b>6 Badges and emblems</b>	<b>188</b>



6.1	Model/brand emblems for rear lid .....	188
6.2	Model/brand emblems for wing panel .....	189