

Contents

82 - Auxiliary heating	1
1 Servicing auxiliary/additional heater	1
1.1 Contact corrosion	1
1.2 Notes on auxiliary/additional heater	1
1.3 Note on operation of auxiliary/additional heater in vehicles with diesel engine	5
2 Safety precautions when working on vehicles fitted with auxiliary/additional heater	7
3 Notes on general repair work on vehicles fitted with auxiliary/additional heater	8
4 Rules for cleanliness when working on auxiliary/additional heater (and fuel system)	9
5 Layout of components for auxiliary/additional heater in vehicle	10
5.1 Auxiliary heater remote control buttons and indicator lamp	16
5.2 Checking and replacing auxiliary heater remote control batteries	20
5.3 Adaption of remote control hand transmitter in additional heater control unit J364	21
5.4 Activating/deactivating auxiliary heater/auxiliary ventilation via Multi Media Interface (MMI)	21
6 Diverting fuel for auxiliary/additional heater	23
6.1 Filling fuel pipe to metering pump V54 with fuel (bleeding)	25
6.2 Diverting fuel (for auxiliary/additional heater) from fuel tank	26
6.3 Checking fuel delivery of metering pump V54	27
6.4 Removing and installing metering pump V54	33
6.5 Routing of fuel pipe to auxiliary/additional heater	35
6.6 Checking actuation and electrical connections of auxiliary/additional heater	35
7 Checking and adjusting CO2 content in auxiliary/additional heater exhaust gas	40
7.1 Checking CO2 content in auxiliary/additional heater exhaust gas	42
7.2 Adjusting CO2 content in auxiliary/additional heater exhaust gas	45
7.3 Removing residue from burner element of auxiliary/additional heater (operation with vegetable-oil or rape-oil methylester fuel only)	50
8 Incorporation of auxiliary/additional heater into coolant circuit	54
8.1 Incorporation of supplementary heater into coolant circuit	54
8.2 Incorporation of auxiliary/supplementary heater into coolant circuit	56
8.3 Incorporation of auxiliary/supplementary heater into coolant circuit	58
8.4 Operation of and removing/installing heater coolant shutoff valve N279	59
8.5 Bleeding coolant circuit	61
8.6 Note for vehicles with the problem "poor heat output" with engine running	62
9 Removing and installing auxiliary/additional heater	65
9.1 Removing and installing auxiliary/additional heater	66
9.2 Checking components of auxiliary/additional heater	71
10 Dismantling and assembling auxiliary/additional heater	74
10.1 Detaching and re-attaching add-on components from/to additional heater	74
10.2 Removing and installing auxiliary/supplementary heater exhaust system	77
10.3 Detaching and re-attaching add-on components from/to auxiliary/additional heater	77
10.4 Attaching intake hose with intake air silencer	82
10.5 Attaching bracket for auxiliary/additional heater with bonded rubber element	83
10.6 Types of bracket for auxiliary/additional heater	83
10.7 Auxiliary/additional heater exhaust system	84
10.8 Attaching spacer and insulating sleeve to exhaust system of auxiliary/additional heater ..	85
10.9 Routing wiring to circulation pump V55	85
10.10 Dismantling and assembling auxiliary/additional heater	86
10.11 Removing and installing connector console cover	88
10.12 Assignment of auxiliary/additional heater connector console	88
10.13 Removing and installing combustion air blower V6	89
10.14 Removing and installing burner element	89
10.15 Removing and installing glow plug with flame monitor Q8	90



11	Block diagram of auxiliary/additional heater	93
11.1	Incorporation of auxiliary/additional heater into vehicle electrics	93
11.2	Fitting location of temperature sensor G18 in auxiliary/additional heater	95
12	Block diagram of auxiliary/additional heater actuation with remote control	96
12.1	Fitting location for auxiliary heating radio receiver R64	101
13	Functional description of auxiliary/additional heater	103
13.1	Sequence of operation	104
13.2	Required heating output between 50 and 100 %	113
13.3	Required heating output less than 50 %	113