

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Rear final drive identification</b> .....	<b>1</b>
<b>2 Code letters, allocation, transmission ratios, capacities</b> .....	<b>3</b>
2.1 Audi A4 2001 ▶ – Code letters, allocation, transmission ratios, capacities .....	3
2.2 Audi Cabriolet 2003 ▶ – Code letters, allocation, transmission ratios, capacities .....	4
2.3 Audi A6 2005 ▶ – Code letters, allocation, transmission ratios, capacities .....	4
2.4 Audi A8 2003 ▶ – Code letters, allocation, transmission ratios, capacities .....	5
<b>3 Transmission layout</b> .....	<b>6</b>
<b>4 General repair instructions</b> .....	<b>8</b>
4.1 Contact corrosion! .....	8
4.2 Jacking mode (vehicles with pneumatic suspension) .....	8
4.3 Special tools .....	8
4.4 Components .....	8
<b>39 - Final drive - rear differential</b> .....	<b>11</b>
<b>1 Servicing propshaft - overview</b> .....	<b>11</b>
1.1 Removing and installing propshaft on Audi A4, Audi Cabriolet and Audi A6 .....	12
1.2 Removing and installing propshaft on Audi A8 .....	19
1.3 Detaching and attaching propshaft at rear final drive .....	26
<b>2 Measuring and marking radial run-out at flange for propshaft</b> .....	<b>30</b>
<b>3 Checking gear oil in rear final drive</b> .....	<b>31</b>
<b>4 Exploded view - rear final drive on Audi A4, Audi Cabriolet and Audi A6</b> .....	<b>32</b>
4.1 Removing rear final drive on Audi A4, Audi Cabriolet and Audi A6 .....	32
<b>5 Exploded view - rear final drive on Audi A8</b> .....	<b>37</b>
5.1 Removing and installing rear final drive on Audi A8 .....	38
<b>6 Renewing flange shaft oil seals</b> .....	<b>42</b>
6.1 Renewing flange shaft oil seals on Audi A4, Audi Cabriolet .....	42
6.2 Renewing flange shaft oil seals on Audi A6 .....	46
6.3 Renewing flange shaft oil seals on Audi A8 .....	48
<b>7 Renewing oil seal for propshaft flange on rear final drive (rear final drive installed)</b> .....	<b>55</b>
<b>8 General overview - dismantling and assembling rear final drive</b> .....	<b>60</b>
<b>9 Exploded view - removing and installing differential</b> .....	<b>61</b>
9.1 Removing differential .....	63
<b>10 Exploded view - dismantling and assembling differential</b> .....	<b>65</b>
<b>11 Exploded view - removing and installing pinion shaft; dismantling and assembling pinion shaft</b> .....	<b>74</b>
11.1 Removing and installing pinion shaft; dismantling and assembling pinion shaft .....	75
<b>12 Adjusting pinion shaft and crown wheel</b> .....	<b>85</b>
12.1 Adjustment and marking of final drive gear set .....	85
12.2 Position of shims .....	87
12.3 Table of adjustments .....	87
12.4 Recommended sequence for adjusting gear set .....	88
12.5 Adjusting pinion shaft .....	88
12.6 Adjusting crown wheel .....	93