

## Contents

<b>00</b>	<b>Technical data</b> .....	<b>1</b>
1	<b>Gearbox identification</b> .....	1
2	<b>Notes on "6-speed automatic gearbox 09E"</b> .....	2
3	<b>Code letters, gearbox allocation, ratios, equipment</b> .....	4
4	<b>Capacities</b> .....	10
4.1	ATF capacities .....	10
4.2	Gear oil capacities .....	11
5	<b>Safety precautions</b> .....	13
6	<b>Notes on tow-starting and towing</b> .....	14
7	<b>Repair instructions</b> .....	15
8	<b>Rules for cleanliness when working on the gearbox</b> .....	19
9	<b>Contact corrosion!</b> .....	20
10	<b>Gearbox adaption for vehicles from model year 2006 onwards</b> .....	21
<b>32</b>	<b>Torque converter</b> .....	<b>23</b>
1	<b>Exploded view - torque converter</b> .....	23
1.1	Identification of torque converter .....	23
1.2	Removing and installing torque converter .....	24
1.3	Draining torque converter .....	25
1.4	Renewing oil seal for torque converter .....	26
1.5	Checking torque converter .....	27
<b>37</b>	<b>Controls, housing</b> .....	<b>28</b>
1	<b>Electrical/electronic components and fitting locations</b> .....	28
2	<b>Servicing selector mechanism - exploded view</b> .....	31
2.1	Checking selector mechanism .....	32
2.2	Manual release of selector mechanism from position "P" .....	34
3	<b>Selector lever handle, selector mechanism cover - exploded view</b> .....	36
3.1	Removing and installing selector lever handle .....	37
3.2	Removing and installing selector mechanism cover .....	37
3.3	Removing and installing tiptronic switch F189 .....	38
4	<b>Shift unit, manual release - exploded view</b> .....	40
4.1	Removing and installing shift unit .....	41
4.2	Removing and installing complete selector mechanism with selector lever cable .....	44
4.3	Removing and installing manual release mechanism .....	50
5	<b>Selector lever cable - exploded view</b> .....	51
5.1	Removing and installing selector lever cable .....	51
5.2	Checking and adjusting selector lever cable .....	58
6	<b>Removing and installing gearbox, tightening torques</b> .....	62
6.1	Removing gearbox - vehicles with 8-cylinder MPI engine .....	62
6.2	Installing gearbox - vehicles with 8-cylinder MPI engine .....	83
6.3	Removing gearbox - vehicles with 8-cylinder 4.0 ltr. TDI engine .....	87
6.4	Installing gearbox - vehicles with 8-cylinder 4.0 ltr. TDI engine .....	106
6.5	Removing gearbox - vehicles with 8-cylinder 4.2 ltr. TDI engine .....	110
6.6	Installing gearbox - vehicles with 8-cylinder 4.2 ltr. TDI engine .....	134
6.7	Removing and installing gearbox - vehicles with 10-cylinder 5.2 ltr. FSI engine .....	134
6.8	Removing and installing gearbox - vehicles with 12-cylinder 6.0 ltr. MPI engine (W12) ..	136
7	<b>Transporting gearbox</b> .....	140
8	<b>Securing gearbox to assembly stand</b> .....	142
9	<b>Gearbox mounting</b> .....	144



9.1	Removing and installing tunnel cross member	144
9.2	Removing and installing rear gearbox supports and gearbox mountings	147
9.3	Removing and installing front gearbox supports and gearbox mountings	149
<b>10</b>	<b>ATF in planetary gearbox</b>	<b>155</b>
10.1	Checking ATF level	155
10.2	Draining ATF and filling up after repairs	159
<b>11</b>	<b>ATF cooling pipes - overview</b>	<b>162</b>
11.1	Removing and installing ATF cooler	163
<b>38</b>	<b>Gears, control</b>	<b>165</b>
<b>1</b>	<b>Oil pan, ATF strainer and mechatronic unit - exploded view</b>	<b>165</b>
1.1	Removing and installing oil pan	167
1.2	Removing and installing ATF strainer	170
1.3	Removing and installing mechatronic unit	172
1.4	Removing and installing wiring harness in gearbox	175
<b>39</b>	<b>Final drive - front differential</b>	<b>177</b>
<b>1</b>	<b>Gear oil cooler and pipes (gearbox with common oil system) - exploded view</b>	<b>177</b>
<b>2</b>	<b>Gear oil in automatic gearbox</b>	<b>178</b>
2.1	Differences between separate and common oil systems	178
2.2	Checking gear oil level in front final drive (gearbox with separate oil systems)	178
2.3	Filling up gear oil in front final drive after repairs (gearbox with separate oil systems)	180
2.4	Checking gear oil level in transfer box (gearbox with separate oil systems)	181
2.5	Filling up gear oil in transfer box after repairs (gearbox with separate oil systems)	184
2.6	Checking gear oil level in gearbox (gearbox with common oil system)	187
2.7	Filling up gear oil in gearbox after repairs (gearbox with common oil system)	191
<b>3</b>	<b>Servicing front final drive - exploded view</b>	<b>196</b>
3.1	Removing and installing flange shaft (right-side)	197
3.2	Removing and installing flange shaft (left-side)	198
<b>4</b>	<b>Oil seals</b>	<b>201</b>
4.1	Renewing oil seal for flange shaft (right-side)	201
4.2	Renewing oil seal for final drive/gearbox housing	202
4.3	Renewing O-ring on cover for final drive	205
4.4	Renewing oil seal for selector shaft	206
<b>5</b>	<b>Servicing self-locking centre differential</b>	<b>209</b>
5.1	Removing and installing cover for self-locking centre differential	209
5.2	Renewing oil seal for flange shaft (rear)	211
5.3	Removing and installing self-locking centre differential	214