

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
1.1 Location on gearbox .....	1
<b>2 Notes on the automatic 6-speed gearbox 09L</b> .....	<b>2</b>
<b>3 Code letters, gearbox allocation, ratios, equipment</b> .....	<b>3</b>
<b>4 Rear final drive identification</b> .....	<b>5</b>
<b>5 Fluid capacities</b> .....	<b>6</b>
5.1 Capacity of planetary gearbox .....	6
5.2 Capacity of front final drive .....	6
5.3 Capacity of transfer box .....	7
5.4 Capacity of rear final drive .....	7
<b>6 Notes on tow-starting and towing</b> .....	<b>8</b>
<b>7 Repair instructions</b> .....	<b>9</b>
7.1 Contact corrosion! .....	9
7.2 General repair instructions .....	9
<b>8 Safety precautions</b> .....	<b>13</b>
<b>9 Rules for cleanliness when working on the automatic gearbox</b> .....	<b>14</b>
<b>32 - Torque converter</b> .....	<b>15</b>
<b>1 Torque converter</b> .....	<b>15</b>
1.1 Identification of torque converter .....	15
1.2 Draining torque converter .....	15
1.3 Renewing torque converter oil seal .....	16
1.4 Checking torque converter .....	17
1.5 Installing torque converter .....	17
<b>37 - Controls, housing</b> .....	<b>19</b>
<b>1</b> .....	<b>19</b>
<b>2 Exploded view - servicing selector mechanism</b> .....	<b>21</b>
2.1 Checking selector mechanism .....	22
2.2 Manual release of selector mechanism from position "P" .....	24
2.3 Selector lever handle, selector mechanism cover, tiptronic switch F189 - exploded view ..	25
2.4 Removing and installing selector lever handle .....	26
2.5 Removing and installing selector mechanism cover .....	26
2.6 Removing and installing tiptronic switch F189 .....	27
2.7 Shift unit, manual release - exploded view .....	28
2.8 Removing and installing shift unit .....	30
2.9 Removing and installing manual release mechanism .....	33
2.10 Exploded view - selector lever cable .....	33
2.11 Removing and installing selector lever cable .....	34
2.12 Checking and adjusting selector lever cable .....	35
<b>3 Removing and installing gearbox</b> .....	<b>40</b>
3.1 Removing gearbox - vehicles with V6 TDI engine .....	40
3.2 Installing gearbox on vehicles with V6 TDI engine .....	57
3.3 Removing gearbox on vehicles with V6 3.2 ltr. FSI engine .....	60
3.4 Installing gearbox on vehicles with V6 3.2 ltr. FSI engine .....	73
3.5 Removing gearbox on vehicles with V8 4.2 ltr. FSI engine .....	78
3.6 Installing gearbox on vehicles with V8 4.2 ltr. FSI engine .....	92
3.7 Removing and installing gearbox support and gearbox mounting (left-side) - vehicles with V6 engine .....	96
3.8 Removing and installing gearbox support and gearbox mounting (right-side) - vehicles with V6 engine .....	99



3.9	Removing and installing gearbox supports and gearbox mountings (front) - vehicles with V8 engine	101
3.10	Removing and installing gearbox supports and gearbox mountings (rear) - vehicles with V8 engine	104
3.11	Transporting the automatic gearbox	106
3.12	Securing gearbox to assembly stand	107
<b>4</b>	<b>ATF level in planetary gearbox</b>	<b>109</b>
4.1	Checking and correcting ATF level	109
4.2	Draining ATF and filling up after repairs	113
<b>5</b>	<b>ATF pipes</b>	<b>116</b>
5.1	Cleaning ATF pipes and ATF cooler	116
5.2	ATF pipes and ATF cooler - exploded view for vehicles with V6 3.0 ltr. TDI engine	117
5.3	ATF pipes and ATF cooler - exploded view for vehicles with V6 3.2 ltr./V8 4.2 ltr. FSI engine	118
5.4	Removing and installing ATF cooler - vehicles with V6 3.2 ltr./V8 4.2 ltr. FSI engine	119
5.5	Removing and installing bracket for ATF cooler - vehicles with V6 3.2 ltr./V8 4.2 ltr. FSI engine	122
<b>38 - Gears, control</b>		<b>123</b>
<b>1</b>	<b>Removing and installing oil pan, ATF strainer and mechatronic unit</b>	<b>123</b>
1.1	Removing and installing oil pan	123
1.2	Removing and installing ATF strainer	125
1.3	Removing and installing mechatronic unit	127
1.4	Removing and installing wiring harness in gearbox	130
<b>39 - Final drive - front differential</b>		<b>132</b>
<b>1</b>	<b>Gear oil level in front final drive</b>	<b>132</b>
1.1	Checking gear oil level in front final drive	132
1.2	Filling up gear oil in front final drive after repairs	133
<b>2</b>	<b>Servicing front final drive</b>	<b>134</b>
2.1	Front final drive - exploded view	134
2.2	Removing and installing flange shaft (left-side)	135
2.3	Removing and installing flange shaft (right-side)	137
2.4	Renewing flange shaft oil seal (right-side)	139
2.5	Renewing O-ring on cover for final drive	141
2.6	Renewing oil seal for final drive/gearbox housing	145
2.7	Renewing selector shaft oil seal	149
<b>3</b>	<b>Gear oil level in transfer box</b>	<b>152</b>
3.1	Checking gear oil level in transfer box	152
3.2	Filling up gear oil in transfer box after repairs	152
<b>4</b>	<b>Servicing transfer box</b>	<b>154</b>
4.1	Removing and installing cover for self-locking centre differential	154
4.2	Renewing oil seal for flange shaft (rear)	157