

Contents

00	Technical data	1
1	Gearbox identification	1
2	Notes on CVT gearbox type "multitronic 01J (front-wheel drive)"	2
3	Code, gearbox allocation, transmission ratios, equipment	3
4	Capacities	5
5	Notes on towing	6
6	Repair instructions	7
6.1	Contact corrosion	7
6.2	General repair instructions	7
6.3	Rules for cleanliness when working on the gearbox	9
13	Crankshaft group	10
1	Damper unit, for description refer to: Engine, mechanics; Repair group 13	10
37	Controls, housing	11
1	Electrical/electronic components and fitting locations	11
2	Checking ignition key removal lock	15
3	Checking selector mechanism	16
4	Servicing selector mechanism	17
4.1	Assembly overview - selector mechanism cover, selector lever handle	17
4.2	Removing and installing selector lever handle	19
4.3	Removing and installing selector mechanism cover	20
4.4	Removing and installing tiptronic switch F189	21
4.5	Assembly overview - selector mechanism	22
4.6	Operating manual release for selector mechanism	24
4.7	Removing and installing manual release mechanism	25
4.8	Removing and installing shift unit	25
4.9	Selector lever cable - assembly overview	32
4.10	Removing and installing selector lever cable	33
4.11	Adjusting selector lever cable	39
5	Removing and installing gearbox	43
5.1	Removing gearbox - vehicles with 3.0 ltr. MPI engine	43
5.2	Installing gearbox - vehicles with 3.0 ltr. MPI engine	58
5.3	Removing gearbox - vehicles with 3.2 ltr. FSI and 2.8 ltr. FSI engine	61
5.4	Installing gearbox - vehicles with 3.2 ltr. FSI engine	71
6	Securing gearbox to assembly stand	75
7	Transporting automatic gearbox	76
8	Removing and installing gearbox mounting and gearbox support	77
8.1	Removing and installing gearbox mounting and gearbox support (left-side)	77
8.2	Removing and installing gearbox mounting and gearbox support (right-side)	80
9	Checking ATF level and changing ATF	84
9.1	Checking ATF level	84
9.2	Changing ATF or filling up after performing repairs	91
10	Servicing ATF cooling system on vehicles with 3.0 ltr. MPI engine	96
10.1	Removing and installing ATF lines	96
10.2	Cleaning ATF lines and ATF coolers	97
10.3	Removing and installing additional ATF filter	98
10.4	Removing and installing auxiliary ATF cooler	101
10.5	Removing and installing bracket for additional ATF filter and auxiliary ATF cooler	104
11	Servicing ATF cooling system on vehicles with 3.2 ltr. FSI engine and 2.8 ltr. FSI engine	106



11.1	Removing and installing ATF lines	106
11.2	Cleaning ATF lines and ATF coolers	107
11.3	Removing and installing additional ATF filter	108
11.4	Removing and installing auxiliary ATF cooler	111
11.5	Removing and installing bracket for additional ATF filter and auxiliary ATF cooler	114
38	- Gears, control	116
1	Dismantling and assembling gearbox	116
1.1	Removing and installing end cover	116
1.2	Removing and installing automatic gearbox control unit J217	123
1.3	Cleaning selector shaft	123
1.4	Removing and installing hydraulic control unit	123
1.5	Removing and installing input shaft	123
39	- Final drive - differential	124
1	Checking gear oil in front final drive	124
2	Servicing front final drive	127
2.1	Removing and installing left flange shaft	127
2.2	Removing and installing right flange shaft	130
2.3	Renewing left flange shaft oil seal	133
2.4	Renewing oil seal and deep-groove ball bearing for right flange shaft	134
2.5	Removing and installing cover for front final drive	134