

Contents

00 - Technical data	1
1 Repair instructions	1
1.1 General repair instructions	1
1.2 Special tools	3
2 Rules for cleanliness when working on the gearbox	11
3 Common faults	12
3.1 Jolting on overrun, delayed gear engagement when shifting to „D“ or „R“ when stationary, in some cases sporadic fault in event memory „Reverse gear“	12
3.2 Defective stator shaft bushes	13
3.3 Jolting under power and on overrun, entry in event memory „Torque converter lock-up clutch, no transmission“	14
4 Gearbox adaption for vehicles from model year 2006 onwards	15
32 - Torque converter	17
1 Torque converter	17
1.1 Draining torque converter	17
1.2 Checking torque converter	17
37 - Controls, housing	18
1 Securing gearbox to assembly stand	18
2 Dismantling and assembling planetary gearbox	19
2.1 Planetary gearbox - exploded view	19
2.2 Dismantling and assembling planetary gearbox	20
3 Dismantling and assembling body „I“	47
3.1 Body „I“ - exploded view	47
3.2 Clutch „C“ - exploded view	49
3.3 Dismantling and assembling clutch „C“	50
3.4 Piston/cylinder „D“ - exploded view	53
3.5 Dismantling and assembling piston/cylinder „D“	54
3.6 Adjusting clearance of clutch „D“	57
3.7 Planetary drive „II“ and „III“ - exploded view	60
3.8 Dismantling and assembling planetary drive „II“ and „III“	61
4 Dismantling and assembling clutch „B“	66
4.1 Clutch „B“ - exploded view	66
4.2 Dismantling and assembling clutch „B“	67
5 Dismantling and assembling body „II“	72
5.1 Body „II“ - exploded view	72
5.2 Dismantling body „II“	73
5.3 Clutch „A“ - exploded view	75
5.4 Dismantling and assembling clutch „A“	76
5.5 Clutch „E“ - exploded view	81
5.6 Dismantling and assembling clutch „E“	82
5.7 Assembling body „II“	87
38 - Gears, control	90
1 Oil pan, ATF strainer and mechatronic unit - exploded view	90
1.1 Removing and installing oil pan	92
1.2 Removing and installing ATF strainer	96
1.3 Removing and installing mechatronic unit - gearbox with 24 bolts on oil pan	98
1.4 Removing and installing mechatronic unit - gearbox with 13 bolts on oil pan	101
1.5 Removing and installing wiring harness in gearbox	104
2 Dismantling and assembling ATF supply unit	107



2.1	ATF supply unit - exploded view	107
2.2	Renewing oil seal for torque converter	108
2.3	Removing and installing ATF supply unit	110
2.4	Removing and installing ATF pump in ATF supply unit	121
2.5	Removing and installing needle bearing for torque converter	123
39	Final drive - front differential	125
1	Servicing front final drive	125
1.1	Front final drive - exploded view	125
1.2	Removing and installing flange shaft (right-side) with gearbox removed	126
1.3	Removing and installing flange shaft (left-side)	127
1.4	Renewing oil seal for flange shaft (right-side)	130
1.5	Renewing oil seal between final drive and gearbox housing	130
1.6	Renewing O-ring on cover for front final drive	133
1.7	Renewing oil seals for side shaft - gearbox with separate oil systems	134
1.8	Renewing O-rings for protective tube for side shaft - gearbox with common oil system	145
1.9	Renewing oil seal for selector shaft	154
2	Servicing transfer box	156
2.1	Exploded view - centre differential	156
2.2	Removing and installing centre differential housing with gearbox removed	157
2.3	Renewing ball bearing for self-locking centre differential	159
2.4	Renewing oil seal for flange shaft (rear)	160
3	Assessment of wear on gearbox components	163
3.1	Assessment of wear by checking ATF for colour and contamination	163
3.2	Clutch „C“	163
3.3	Clutch „D“	165
3.4	Planetary drive „II“ and „III“	167
3.5	Clutch „B“	169
3.6	Body „II“	170
3.7	Clutch „A“	173
3.8	Clutch „E“	174
3.9	ATF supply unit	176