

Contents

00 - Technical data	1
1 Repair instructions	1
1.1 General repair instructions	1
1.2 Replacement parts supply	3
1.3 Special tools	3
2 Rules for cleanliness when working on the gearbox	12
3 Common faults	13
3.1 Defective stator shaft bushes	13
3.2 Gearbox in backup mode (emergency running mode) - entry in event memory "Gear monitoring, reverse gear or 1st gear"	14
3.3 No power transmitted from 4th gear upwards, gearbox in backup mode (emergency running mode) - entry in event memory "Gear monitoring, 4th, 5th, 6th gear"	14
3.4 No power transmitted in any gear	15
32 - Torque converter	17
1 Torque converter	17
1.1 Draining torque converter	17
1.2 Checking torque converter	17
37 - Controls, housing	18
1 Securing gearbox to assembly stand	18
2 Dismantling and assembling planetary gearbox	19
2.1 Planetary gearbox - exploded view	19
2.2 Dismantling and assembling planetary gearbox	20
3 Dismantling and assembling body "I"	44
3.1 Body "I" - exploded view	44
3.2 Dismantling body "I"	45
3.3 Clutch "C" - exploded view	46
3.4 Dismantling and assembling clutch "C"	47
3.5 Clutch "D" - exploded view	51
3.6 Dismantling and assembling clutch "D"	52
3.7 Planetary drive "II" and "III" - exploded view	56
3.8 Dismantling and assembling planetary drive "II" and "III"	57
3.9 Assembling body "I"	61
4 Dismantling and assembling clutch "B"	63
4.1 Clutch "B" - exploded view	63
4.2 Dismantling and assembling clutch "B"	64
5 Dismantling and assembling body "II"	68
5.1 Body "II" - exploded view	68
5.2 Dismantling body "II"	69
5.3 Clutch "A" - exploded view	71
5.4 Dismantling and assembling clutch "A"	72
5.5 Clutch "E" - exploded view	76
5.6 Dismantling and assembling clutch "E"	77
5.7 Assembling body "II"	82
38 - Gears, control	85
1 ATF oil pan, ATF strainer and mechatronic unit - exploded view	85
1.1 Removing and installing ATF oil pan	87
1.2 Removing and installing ATF strainer	90
1.3 Removing and installing mechatronic unit	92
1.4 Removing and installing wiring harness in gearbox	94



2	Dismantling and assembling ATF supply unit	96
2.1	ATF supply unit - exploded view	96
2.2	Renewing oil seal for torque converter	97
2.3	Removing and installing ATF supply unit	97
2.4	Removing and installing ATF pump in ATF supply unit	109
2.5	Removing and installing needle bearing for torque converter	110
39	Final drive - front differential	112
1	Servicing front final drive	112
1.1	Front final drive - exploded view	112
1.2	Renewing oil seal for flange shaft (right-side)	114
1.3	Renewing oil seal between final drive and gearbox housing	114
1.4	Renewing O-ring on cover for front final drive	117
1.5	Renewing oil seal for selector shaft	118
2	Servicing transfer box	120
2.1	Removing and installing cover for self-locking centre differential	120
2.2	Renewing ball bearing for self-locking centre differential	122
2.3	Renewing oil seal for flange shaft (rear)	123
3	Assessment of wear on gearbox components	126
3.1	Assessment of wear by checking ATF for colour and contamination	126
3.2	Clutch "C"	126
3.3	Clutch "D"	128
3.4	Planetary drive "II" and "III"	130
3.5	Clutch "B"	132
3.6	Body "II"	133
3.7	Clutch "A"	136
3.8	Clutch "E"	137
3.9	ATF supply unit	139