

## Contents

<b>00 - Technical data</b>	<b>1</b>
1     Engine number	1
2     Engine data	2
3     Safety precautions	3
3.1 Safety precautions when working on the fuel supply system	3
3.2 Safety precautions when using testers and measuring instruments during a road test	4
3.3 Safety precautions when working on the cooling system	4
3.4 Safety precautions when working on the ignition system	4
4     Repair instructions	6
4.1 Rules for cleanliness	6
4.2 Foreign particles in engine	6
4.3 Contact corrosion	6
4.4 Routing and attachment of pipes, hoses and wiring	7
4.5 Installing radiators and condensers	7
4.6 Checking vacuum system	7
<b>10 - Removing and installing engine</b>	<b>8</b>
1     Removing engine	8
2     Detaching multitronic gearbox from engine	26
3     Securing engine to engine and gearbox support	32
4     Installing engine	34
5     Assembly mountings	41
5.1 Assembly mountings - exploded view	41
5.2 Removing and installing engine mounting (left and right)	42
5.3 Removing and installing torque reaction support	46
<b>13 - Crankshaft group</b>	<b>48</b>
1     Cylinder block (pulley end)	48
1.1 Poly V-belt drive - exploded view	48
1.2 Removing and installing poly V-belt	50
1.3 Removing and installing tensioner for poly V-belt	51
1.4 Removing and installing vibration damper with poly V-belt pulley	52
1.5 Renewing sealing flange (pulley end) with crankshaft oil seal	52
2     Cylinder block (gearbox end)	55
2.1 Flywheel - exploded view	55
2.2 Removing and installing damper unit	56
2.3 Removing and installing flywheel	57
2.4 Renewing crankshaft oil seal (gearbox end)	58
3     Removing and installing crankshaft	60
3.1 Crankshaft - exploded view	60
3.2 Crankshaft dimensions	63
3.3 Measuring axial clearance	63
3.4 Measuring radial clearance	64
4     Pistons and conrods	65
4.1 Pistons and conrods - exploded view	65
4.2 Piston and cylinder dimensions	68
4.3 Removing and installing pistons	68
4.4 Measuring radial clearance of conrods	69
<b>15 - Cylinder head, valve gear</b>	<b>71</b>
1     Chain drive	71

1.1	Timing chain covers - exploded view .....	71
1.2	Removing and installing timing chain covers (left and right) .....	73
1.3	Removing and installing timing chain cover (bottom) .....	77
1.4	Camshaft timing chains - exploded view .....	82
1.5	Removing timing chains from camshafts .....	85
1.6	Removing and installing camshaft timing chains .....	93
1.7	Drive chain for valve gear - exploded view .....	95
1.8	Removing and installing drive chain for valve gear .....	96
1.9	Drive chain for auxiliary drives - exploded view .....	97
1.10	Removing and installing drive chain for auxiliary drives .....	98
1.11	Balance shaft - exploded view .....	100
1.12	Removing and installing balance shaft .....	101
<b>2</b>	<b>Removing and installing cylinder head .....</b>	<b>103</b>
2.1	Cylinder head - exploded view .....	103
2.2	Removing and installing cylinder head cover (left-side) .....	106
2.3	Removing and installing cylinder head cover (right-side) .....	107
2.4	Removing and installing cylinder heads .....	108
2.5	Checking compression .....	125
<b>3</b>	<b>Servicing valve gear .....</b>	<b>128</b>
3.1	Valve gear - exploded view .....	128
3.2	Checking axial clearance of camshafts .....	131
3.3	Removing and installing camshafts .....	131
3.4	Checking hydraulic valve compensation elements .....	137
3.5	Renewing valve stem oil seals with cylinder head installed .....	139
3.6	Renewing valve stem oil seals with cylinder head removed .....	142
3.7	Valve dimensions .....	146
3.8	Checking valve guides .....	146
3.9	Checking valves .....	147
<b>17 - Lubrication .....</b>	<b>148</b>	
<b>1</b>	<b>Sump (bottom section), sump (top section), oil pump, engine oil cooler .....</b>	<b>148</b>
1.1	Sump (bottom section), sump (top section), oil pump, engine oil cooler - exploded view ..	148
1.2	Removing and installing engine oil cooler .....	151
1.3	Removing and installing oil level and oil temperature sender G266 .....	153
1.4	Removing and installing sump (bottom section) .....	154
1.5	Removing and installing oil pump .....	158
1.6	Removing and installing sump (top section) .....	158
<b>2</b>	<b>Oil filter housing and oil pressure switch .....</b>	<b>165</b>
2.1	Oil filter housing and oil pressure switch - exploded view .....	165
2.2	Removing and installing oil filter housing .....	166
2.3	Removing and installing oil pressure switch F22 .....	168
2.4	Removing and installing oil pressure switch for reduced oil pressure F378 .....	169
2.5	Removing and installing valve for oil pressure control N428 .....	170
2.6	Checking oil pressure .....	171
<b>3</b>	<b>Oil retention valves and oil separator .....</b>	<b>172</b>
3.1	Oil retention valves and oil separator - exploded view .....	172
3.2	Removing and installing crankcase breather hoses .....	173
3.3	Removing and installing cover with oil separator .....	174
3.4	Engine oil .....	174
3.5	Checking oil level .....	174
<b>19 - Cooling .....</b>	<b>175</b>	
<b>1</b>	<b>Removing and installing parts of cooling system .....</b>	<b>175</b>
1.1	Connection diagram - coolant hoses, vehicles with auxiliary heater .....	175
1.2	Checking cooling system for leaks .....	176

1.3	Draining and filling cooling system .....	177
1.4	Coolant pump, thermostat and connection - exploded view .....	183
1.5	Removing and installing coolant pump .....	184
1.6	Removing and installing thermostat .....	185
1.7	Checking thermostat .....	186
<b>2</b>	<b>Coolant pipes</b> .....	<b>187</b>
2.1	Coolant pipes - exploded view .....	187
2.2	Removing and installing coolant temperature sender G62 .....	188
2.3	Removing and installing coolant pipe (front) .....	188
2.4	Removing and installing coolant pipes (left-side) .....	190
2.5	Removing and installing coolant pipe (top) .....	193
<b>3</b>	<b>Radiator and radiator fans</b> .....	<b>196</b>
3.1	Radiator and radiator fans - exploded view .....	196
3.2	Removing and installing radiator .....	197
3.3	Removing and installing radiator cowl .....	201
3.4	Removing and installing radiator fans .....	202
<b>24 - Mixture preparation - injection</b>	<b>203</b>	
1	<b>Injection system (Simos)</b> .....	<b>203</b>
1.1	Technical data .....	203
1.2	Overview of fitting locations .....	203
1.3	Procedure before opening high-pressure section of injection system .....	212
1.4	Checking fuel system for leaks .....	213
1.5	Air cleaner - exploded view .....	213
1.6	Removing and installing air filter element .....	215
1.7	Intake manifold (top section) - exploded view .....	216
1.8	Removing and installing intake manifold (top section) .....	218
1.9	Intake manifold (bottom section) with fuel rail - exploded view .....	220
1.10	Removing and installing intake manifold (bottom section) with fuel rail .....	222
1.11	Removing and installing injectors .....	224
1.12	Checking fuel pressure and residual pressure (up to high-pressure pump) .....	228
1.13	High-pressure fuel pump - exploded view .....	233
1.14	Removing and installing high-pressure pump .....	236
1.15	Bleeding fuel system .....	238
1.16	Lambda probes - overview .....	238
1.17	Removing and installing Lambda probe G39 before catalytic converter - bank 1 (right-side) .....	239
1.18	Removing and installing Lambda probe after catalytic converter G130 - bank 1 (right-side) .....	241
1.19	Removing and installing Lambda probe 2 G108 before catalytic converter - bank 2 (left-side) .....	243
1.20	Removing and installing Lambda probe 2 after catalytic converter G131 - bank 2 (left-side) .....	245
<b>2</b>	<b>Engine control unit</b> .....	<b>248</b>
2.1	Wiring and component check with test box V.A.G 1598/42 .....	248
2.2	Removing and installing engine control unit .....	250
<b>26 - Exhaust system</b>	<b>253</b>	
1	<b>Silencers</b> .....	<b>253</b>
1.1	Silencers - exploded view .....	253
1.2	Removing and installing front exhaust pipe (left-side) with catalytic converter .....	257
1.3	Removing and installing front exhaust pipe (right-side) with catalytic converter .....	260
1.4	Separating front exhaust pipe (downpipe) with catalytic converter from front exhaust pipe .....	265
1.5	Separating front exhaust pipe and front silencer .....	266
1.6	Separating centre and rear silencers .....	267

1.7	Stress-free alignment of exhaust system . . . . .	268
1.8	Aligning tailpipes . . . . .	269
1.9	Checking exhaust system for leaks . . . . .	269
<b>2</b>	<b>Exhaust manifolds . . . . .</b>	<b>271</b>
2.1	Exhaust manifold - exploded view . . . . .	271
2.2	Removing and installing exhaust manifold (left-side) . . . . .	272
2.3	Removing and installing exhaust manifold (right-side) . . . . .	275
<b>28</b>	<b>- Ignition system . . . . .</b>	<b>277</b>
<b>1</b>	<b>Servicing ignition system . . . . .</b>	<b>277</b>
1.1	Test data . . . . .	277
1.2	Exploded view - ignition system . . . . .	277
1.3	Removing and installing ignition coils . . . . .	278
1.4	Removing and installing knock sensors . . . . .	280