

Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 Safety precautions	1
1.2 Rules for cleanliness when working on the injection system	2
1.3 Procedure before opening high-pressure section of injection system	2
1.4 Checking vacuum system	3
2 Injection system (Simos)	5
2.1 Technical data	5
2.2 Overview of fitting locations	5
2.3 Air cleaner - exploded view	14
2.4 Removing and installing air filter element	15
2.5 Intake manifold (top section) - exploded view	17
2.6 Removing and installing intake manifold (top section)	19
2.7 Intake manifold (bottom section) with fuel rail - exploded view	21
2.8 Removing and installing intake manifold (bottom section) with fuel rail	22
2.9 Removing and installing injectors	24
2.10 Checking fuel pressure and residual pressure (up to high-pressure fuel pump)	28
2.11 High-pressure fuel pump - exploded view	34
2.12 Removing and installing high-pressure pump	35
2.13 Bleeding fuel system	38
2.14 Lambda probes - overview	38
2.15 Removing and installing Lambda probe G39 before catalytic converter - bank 1 (right-side)	39
2.16 Removing and installing Lambda probe after catalytic converter G130 - bank 1 (right-side)	41
2.17 Removing and installing Lambda probe 2 G108 before catalytic converter - bank 2 (left-side)	43
2.18 Removing and installing Lambda probe 2 after catalytic converter G131 - bank 2 (left-side)	45
3 Engine control unit	48
3.1 Wiring and component check with test box V.A.G 1598/42	48
3.2 Removing and installing engine control unit	50
28 - Ignition system	53
1 General notes and safety precautions	53
1.1 Safety precautions	53
2 Servicing ignition system	54
2.1 Test data	54
2.2 Ignition system - exploded view	54
2.3 Removing and installing ignition coils	55
2.4 Removing and installing knock sensors	56