

Contents

24	Mixture preparation - injection	1
1	Servicing motronic injection system	1
1.1	Safety measures	1
1.2	Rules for cleanliness	1
1.3	Technical data	2
1.4	Overview - fitting locations	2
1.5	Dismantling and assembling air cleaner	11
1.6	Intake manifold change-over - exploded view of components	13
1.7	Removing and installing change-over barrel for intake manifold change-over	13
1.8	Intake manifold - exploded view of components	14
1.9	Removing and installing intake manifold	15
1.10	Wiring and component check on engine control unit with test box V.A.G 1598/31	20
1.11	Removing and installing engine control unit	21
1.12	Checking system pressure, fuel pressure regulator and residual pressure	23
1.13	Dismantling and assembling fuel rail with injectors	26
1.14	Removing and installing fuel rail and injectors	28
1.15	Checking injection quantity and spray pattern of injectors; checking for leaks	30
1.16	Removing and installing Lambda probe before catalytic converter - bank 1 (right)	32
1.17	Removing and installing Lambda probe before catalytic converter - bank 2 (left)	32
1.18	Removing and installing Lambda probe after catalytic converter - bank 1 (right)	35
1.19	Removing and installing Lambda probe after catalytic converter - bank 2 (left)	37
28	Ignition system	40
1	Checking ignition system	40
1.1	General notes on ignition system	40
1.2	Safety measures	40
1.3	Technical data	40