

Contents

24	Mixture preparation - injection	1
1	Servicing Motronic injection system	1
1.1	Safety precautions	1
1.2	Rules for cleanliness	1
1.3	Technical data	2
1.4	Overview of fitting locations	2
1.5	Air cleaner - exploded view of components	9
1.6	Removing and installing air filter element	10
1.7	Removing and installing air mass meter G70	13
1.8	Checking fuel pressure regulator and residual pressure (engine code letters BFM, BFL)	13
1.9	Checking fuel pressure regulator and residual pressure (engine code letters BGK)	16
1.10	Checking injection quantity and spray pattern of injectors; checking for leaks	19
1.11	Removing and installing intake manifold	22
1.12	Wiring and component check with adapter cable, 121-pin V.A.G 1598/31 (test box)	25
1.13	Renewing engine control unit J623	28
1.14	Removing and installing Lambda probes (before catalytic converter)	31
1.15	Removing and installing Lambda probe after catalytic converter G130 - bank 1	35
1.16	Removing and installing Lambda probe 2 after catalytic converter G131 - bank 2	36
28	Ignition system	38
1	Checking ignition system	38
1.1	General notes on ignition system	38
1.2	Safety precautions	38
1.3	Technical data	38
2	Removing and installing ignition coils	39