

Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 General notes on self-diagnosis	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Rules for cleanliness when working on the injection system	1
1.4 Safety precautions when working on the fuel supply system	2
1.5 Checking vacuum system	2
2 Injection system	4
2.1 Technical data	4
2.2 Overview of fitting locations - injection system	4
2.3 Exploded view - air cleaner	15
2.4 Removing and installing air filter element	17
2.5 Removing and installing air mass meter G70	20
2.6 Intake manifold (magnesium) - exploded view	20
2.7 Intake manifold (plastic - gradual introduction from model year 2009 onwards) - exploded view	36
2.8 Removing and installing fuel pressure sender G247	54
2.9 Checking fuel pressure and residual pressure (up to high-pressure pump)	55
2.10 Exploded view - high-pressure pump	60
2.11 Removing and installing high-pressure pump	62
2.12 Overview - Lambda probes	64
2.13 Removing and installing Lambda probe before catalytic converter G39 and Lambda probe after catalytic converter G130 (cylinder bank 1)	65
2.14 Removing and installing Lambda probe 2 before catalytic converter G108 and Lambda probe after catalytic converter G131 (cylinder bank 2)	67
3 Engine control unit	69
3.1 Wiring and component check with test box V.A.G 1598/42	69
3.2 Removing and installing engine control unit J623	70
28 - Ignition system	74
1 General notes and safety precautions	74
1.1 General notes on ignition system	74
2 Servicing ignition system	75
2.1 Test data	75
2.2 Exploded view - ignition system	75
2.3 Removing and installing ignition coils	76
2.4 Removing and installing knock sensors	78