

Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 Safety precautions	1
1.2 Rules for cleanliness and instructions for working on fuel system	2
1.3 Important: Required procedure prior to opening high-pressure injection system	2
1.4 Checking vacuum system	3
2 Injection system	5
2.1 Technical data	5
2.2 Overview of fitting locations	5
2.3 Exploded view - air cleaner	14
2.4 Removing and installing air filter element (right-side), cylinder bank 1	16
2.5 Removing and installing air filter element (left-side), cylinder bank 2	18
2.6 Removing and installing air mass meter G70 (cylinder bank 1)	20
2.7 Removing and installing air mass meter 2 G246 (cylinder bank 2)	22
2.8 Exploded view - intake manifold	22
2.9 Removing and installing intake manifold	25
2.10 Exploded view - injectors and fuel rail	33
2.11 Exploded view - high-pressure pump	36
2.12 Removing and installing high-pressure pumps	37
2.13 Removing and installing injectors	40
2.14 Checking fuel pressure and residual pressure (up to high-pressure pump)	44
2.15 Overview - Lambda probes	49
2.16 Removing and installing Lambda probes G39 , G131 , G285 and G288	51
2.17 Removing and installing Lambda probes G130 and G287	53
2.18 Removing and installing Lambda probes G108 and G286	54
3 Engine control units	57
3.1 Wiring and component check with test box V.A.G 1598/42	57
3.2 Removing and installing engine control unit J623 (master)	58
3.3 Removing and installing engine control unit 2 J624 (slave)	62
28 - Ignition system	66
1 General notes and safety precautions	66
1.1 General notes on ignition system	66
1.2 Safety precautions	66
2 Servicing ignition system	67
2.1 Test data	67
2.2 Exploded view - ignition system	67
2.3 Removing and installing ignition coils with output stages	68
2.4 Removing and installing knock sensors	71