

Contents

24 - Mixture preparation - injection	1
1 Servicing Motronic injection system	1
1.1 Safety precautions	1
1.2 Rules for cleanliness and instructions for working on fuel system	2
1.3 Technical data	2
1.4 Overview of fitting locations	2
1.5 Removing and installing air mass meter G70	8
1.6 Removing and installing air mass meter 2 G246	9
1.7 Removing and installing air cleaner (left-side)	10
1.8 Removing and installing air cleaner (right-side)	11
1.9 Checking fuel pressure regulator and residual pressure, engine code BHT	11
1.10 Checking fuel pressure regulator and residual pressure, engine code BSB	14
1.11 Checking injection quantity and spray pattern of injectors; checking for leaks	17
1.12 Dismantling and assembling fuel rail with injectors	20
1.13 Exploded view - intake manifold	22
1.14 Removing and installing left section of intake manifold	23
1.15 Removing and installing right section of intake manifold	24
1.16 Removing and installing intake manifold (top section)	25
1.17 Removing and installing intake manifold (bottom section)	28
1.18 Overview - Lambda probes	29
1.19 Removing and installing Lambda probe G39 (before catalytic converter at front right)	31
1.20 Removing and installing Lambda probe 2 G108 (before catalytic converter at rear right)	33
1.21 Removing and installing Lambda probe 3 G285 (before catalytic converter at front left)	35
1.22 Removing and installing Lambda probe 4 G286 (before catalytic converter at rear left)	38
1.23 Removing and installing Lambda probes after catalytic converter G130 , G131 , G287 and G288	40
2 Engine control unit	43
2.1 Wiring and component check with test box V.A.G 1598/31	43
2.2 Renewing engine control unit J623 (master control unit)	47
2.3 Renewing engine control unit 2 J624 (slave control unit)	49
28 - Ignition system	53
1 Checking ignition system	53
1.1 General notes on ignition system	53
1.2 Safety precautions	53
1.3 Technical data for ignition system	53
1.4 Removing and installing ignition coils with output stages	54