

Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	2
2 Safety precautions	3
2.1 Working on the fuel system	3
2.2 Procedure before opening high-pressure section of injection system	3
2.3 Working on the cooling system	4
2.4 Using testers and measuring instruments during a road test	4
2.5 Working on the exhaust system	4
3 Contact corrosion!	5
4 General repair instructions	6
4.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	6
4.2 Checking fuel system for leaks	6
4.3 Foreign particles in engine	6
4.4 Contact corrosion!	6
4.5 Routing and attachment of pipes, hoses and wiring	7
4.6 Checking vacuum system	7
4.7 Installing radiators and condensers	8
10 - Removing and installing engine	9
1 Removing and installing engine	9
1.1 Removing and installing engine	9
1.2 Removing	10
1.3 Securing engine to engine stand	28
1.4 Installing	28
1.5 Tightening torques	30
13 - Crankshaft group	32
1 Dismantling and assembling engine	32
1.1 Poly V-belt drive - exploded view	32
1.2 Removing and installing poly V-belt	33
1.3 Removing and installing tensioner for poly V-belt	34
1.4 Removing and installing vibration damper	36
2 Removing and installing sealing flanges and dual-mass flywheel/flywheel/drive plate	39
2.1 Sealing flanges and dual-mass flywheel/flywheel/drive plate - exploded view	39
2.2 Renewing crankshaft oil seal (pulley end)	40
2.3 Removing and installing sealing flange (front)	42
2.4 Removing and installing sealing flange (rear)	45
2.5 Removing and installing flywheel	47
3 Removing and installing crankshaft	49
3.1 Crankshaft dimensions	52
3.2 Measuring axial clearance	52
3.3 Measuring radial clearance	52
3.4 Removing and installing drive chain sprocket for oil pump	53
4 Dismantling and assembling pistons and conrods	55
4.1 Piston and cylinder dimensions	58
4.2 Checking radial clearance of conrods	58
15 - Cylinder head, valve gear	59
1 Toothed belt drive	59



1.1	Toothed belt covers - exploded view	59
1.2	Toothed belt drive - exploded view	60
1.3	Removing and installing toothed belt	62
2	Removing and installing cylinder head	72
2.1	Cylinder head - exploded view of components	72
2.2	Removing and installing cylinder head cover (left-side)	74
2.3	Removing and installing cylinder head cover (right-side)	76
2.4	Removing cylinder head (left-side)	79
2.5	Removing cylinder head (right-side)	83
2.6	Installing cylinder head	88
2.7	Checking compression	91
3	Intake manifold	94
3.1	Intake manifold - exploded view of components	94
3.2	Removing and installing intake manifold	94
4	Servicing valve gear	99
4.1	Valve gear - exploded view of components	99
4.2	Camshaft adjustment - exploded view of components	102
4.3	Checking axial clearance of camshafts	103
4.4	Renewing camshaft oil seals	103
4.5	Removing and installing camshafts and camshaft adjuster	105
4.6	Checking hydraulic bucket tappets	113
4.7	Renewing valve stem oil seals with cylinder head installed	114
4.8	Renewing valve stem oil seals with cylinder head removed	118
4.9	Checking valve guides	122
4.10	Checking valves	123
4.11	Machining valve seats	123
5	Checking camshaft adjustment	125
5.1	Testing the system	125
5.2	Testing camshaft adjustment (exhaust)	127
5.3	Checking camshaft adjustment (inlet)	128
5.4	Checking solenoid valves for camshaft adjustment	129
5.5	Electrical test of solenoid valves for camshaft adjustment	131
5.6	Checking internal resistance	132
5.7	Checking voltage supply	132
5.8	Checking activation	133
17 - Lubrication		134
1	Removing and installing parts of the lubrication system	134
1.1	Sump (bottom section), oil pump - exploded view of components	134
1.2	Removing and installing sump (bottom section)	135
1.3	Removing and installing oil pump	138
1.4	Sump (top section), oil filter - exploded view of components	143
1.5	Removing and installing sump (top section)	145
1.6	Removing and installing drive chain and chain tensioner for oil pump	156
1.7	Oil retention valve and spray nozzle valve - exploded view of components	157
1.8	Checking oil pressure and oil pressure switch	159
1.9	Engine oil	161
1.10	Checking oil level	161
19 - Cooling		162
1	Cooling system - on engine	162
1.1	Draining and filling cooling system	162
1.2	Coolant pump and thermostat - exploded view	168
1.3	Removing and installing coolant pump	169
1.4	Removing and installing thermostat	170

1.5	Checking thermostat	173
1.6	Coolant pipes - exploded view of components	173
1.7	Removing and installing coolant pipe (front)	175
1.8	Removing and installing coolant pipe (left-side)	176
1.9	Removing and installing coolant pipe (right-side)	179
1.10	Removing and installing coolant pipe (rear)	180
1.11	Removing and installing coolant pipe leading to alternator	182
2	Cooling system - on body	185
2.1	Radiator and radiator fan - exploded view of components	185
2.2	Removing and installing radiator	185
2.3	Removing and installing radiator cowl	189
2.4	Removing and installing radiator fan	190
2.5	Checking cooling system for leaks	190
26	- Exhaust system	193
1	Removing and installing parts of exhaust system	193
1.1	Exhaust system - exploded view of components	193
1.2	Separating front exhaust pipe and front silencer	197
1.3	Separating centre and rear silencers	198
1.4	Removing and installing front exhaust pipe (left-side) with catalytic converter	199
1.5	Removing and installing front exhaust pipe (right-side) with catalytic converter	205
1.6	Removing and installing exhaust manifold (left-side)	212
1.7	Removing and installing exhaust manifold (right-side)	213
1.8	Stress-free alignment of exhaust system	215
1.9	Checking exhaust system for leaks	217
2	Servicing secondary air system	218
2.1	Principle and function	218
2.2	Checking secondary air inlet valve N112	220
2.3	Checking secondary air pump relay J299 and activation	224
2.4	Checking voltage supply of secondary air pump relay J299	226
2.5	Checking activation of secondary air pump relay	228
2.6	Checking voltage supply of secondary air pump motor V101	229
2.7	Removing and installing secondary air pump motor V101	231
2.8	Checking combination valve for secondary air system for proper operation and leakage ..	232
2.9	Removing and installing combination valve for secondary air system (left-side)	235
2.10	Removing and installing combination valve for secondary air system (right-side)	236