

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1   Technical data</b>	<b>1</b>
1.1 Engine number	1
1.2 Engine data	1
<b>2   Safety precautions</b>	<b>2</b>
2.1 Working on the cooling system	2
2.2 Using testers and measuring instruments during a road test	2
2.3 Working on the exhaust system	2
<b>3   General repair instructions</b>	<b>3</b>
3.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	3
3.2 Checking fuel system for leaks	3
3.3 Foreign particles in engine	3
3.4 Contact corrosion!	3
3.5 Routing and attachment of pipes, hoses and wiring	4
3.6 Checking vacuum system	4
3.7 Installing radiators, condensers and charge air coolers	5
<b>10 - Removing and installing engine</b>	<b>6</b>
<b>1   Removing and installing engine</b>	<b>6</b>
1.1 Removing	8
1.2 Separating engine and gearbox	23
1.3 Attaching engine to engine stand	29
1.4 Installing	31
1.5 Tightening torques	35
<b>2   Removing and installing engine mountings</b>	<b>37</b>
2.1 Removing and installing engine mounting (left and right)	37
2.2 Torque reaction support with valve for torque reaction support N382 - exploded view	41
<b>13 - Crankshaft group</b>	<b>48</b>
<b>1   Dismantling and assembling engine</b>	<b>48</b>
1.1 Pulling lock carrier forwards	48
1.2 Poly V-belt drive - exploded view	50
1.3 Removing and installing poly V-belt	52
1.4 Checking alignment of poly V-belt	54
1.5 Removing and installing vibration damper	56
1.6 Toothed belt covers - exploded view	56
1.7 Toothed belt drive - exploded view	58
1.8 Removing and installing toothed belt	60
<b>2   Sealing flanges and drive plate - exploded view</b>	<b>70</b>
2.1 Renewing crankshaft oil seal (pulley end)	71
2.2 Removing and installing sealing flange (front)	73
2.3 Removing and installing sealing flange (rear)	80
2.4 Removing and installing drive plate	82
<b>3   Crankshaft - exploded view</b>	<b>85</b>
3.1 Crankshaft dimensions	88
3.2 Measuring axial clearance	88
3.3 Measuring radial clearance	88
3.4 Removing and installing drive chain sprocket for oil pump	89
<b>4   Pistons and conrods - exploded view</b>	<b>91</b>
4.1 Piston and cylinder dimensions	94
4.2 Checking radial clearance of conrod bearings	94

<b>15 - Cylinder head, valve gear</b> .....	<b>95</b>
1    Cylinder head - exploded view .....	95
1.1  Removing and installing cylinder head cover (left-side) .....	97
1.2  Removing and installing cylinder head cover (right-side) .....	98
1.3  Removing cylinder head (left-side) .....	100
1.4  Removing cylinder head (right-side) .....	103
1.5  Installing cylinder head .....	106
2    Checking compression .....	110
3    Valve gear - exploded view .....	113
3.1  Checking axial clearance of camshafts .....	116
3.2  Renewing camshaft oil seals .....	117
3.3  Renewing oil seal at Hall sender .....	119
3.4  Removing and installing camshafts and camshaft adjuster - cylinder head (left-side) .....	122
3.5  Removing and installing camshafts and camshaft adjuster - cylinder head (right-side) .....	126
3.6  Removing and installing roller rocker fingers .....	131
3.7  Renewing valve stem oil seals .....	132
3.8  Checking valve guides .....	135
3.9  Checking valves .....	136
3.10 Machining valve seats .....	136
4    Checking variable valve timing .....	139
4.1  Testing the system .....	139
<b>17 - Lubrication</b> .....	<b>143</b>
1    Removing and installing parts of lubrication system .....	143
1.1  Oil pump, sump (bottom section) - exploded view .....	143
1.2  Removing and installing oil level and oil temperature sender G266 .....	144
1.3  Removing and installing sump (bottom section) .....	145
1.4  Removing and installing chain drive for oil pump .....	147
1.5  Removing and installing oil pump .....	148
1.6  Sump (top section) - exploded view .....	149
1.7  Removing and installing sump (top section) .....	151
1.8  Oil retention valves - exploded view .....	159
1.9  Renewing oil retention valves .....	160
1.10 Checking oil pressure and oil pressure switch F1 .....	161
1.11 Engine oil .....	163
1.12 Checking oil level .....	163
1.13 Oil filter housing - exploded view .....	163
1.14 Removing and installing oil filter housing .....	165
<b>19 - Cooling</b> .....	<b>166</b>
1    Removing and installing parts of cooling system .....	166
1.1  Connection diagram for coolant hoses (vehicles without auxiliary heater) .....	166
1.2  Connection diagram for coolant hoses (vehicles with auxiliary heater) .....	167
1.3  Draining and filling cooling system .....	170
1.4  Checking cooling system for leaks .....	175
1.5  Coolant pump and thermostat - exploded view .....	177
1.6  Removing and installing coolant pump .....	179
1.7  Removing, installing and checking thermostat .....	180
1.8  Removing and installing coolant pipe leading to oil filter bracket .....	182
1.9  Oil cooler - exploded view .....	183
1.10 Removing and installing oil cooler .....	184
1.11 Checking thermostat .....	185
1.12 Radiator and radiator fan - exploded view .....	185
1.13 Removing and installing radiator .....	187

1.14	Retrofitting radiator with bypass .....	190
1.15	Removing and installing radiator cowl .....	192
1.16	Removing and installing radiator fan V7 and radiator fan 2 V177 .....	193
<b>26 - Exhaust system</b>	.....	<b>194</b>
1	<b>Removing and installing parts of exhaust system</b> .....	<b>194</b>
1.1	Exhaust system - exploded view .....	194
1.2	Removing and installing exhaust manifold (left-side) .....	200
1.3	Removing and installing exhaust manifold (right-side) .....	201
1.4	Removing and installing catalytic converter with front silencer (left-side) .....	203
1.5	Removing and installing catalytic converter with front silencer (right-side) .....	205
1.6	Removing and installing front silencer (left-side) .....	207
1.7	Removing and installing front silencer (right-side) .....	209
1.8	Stress-free alignment of exhaust system .....	210
1.9	Checking exhaust system for leaks .....	211
<b>2</b>	<b>Secondary air system</b> .....	<b>213</b>
2.1	Removing and installing secondary air pump motor V101 .....	216
2.2	Checking combination valve for secondary air system for proper operation and leakage ..	217
2.3	Removing and installing combination valve for secondary air system (left-side) .....	219
2.4	Removing and installing combination valve for secondary air system (right-side) .....	220