

Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
3 Safety precautions	3
3.1 Procedure before opening high-pressure section of injection system	4
4 General repair instructions	5
4.1 Rules for cleanliness when working on fuel supply system and injection system	5
4.2 Checking for leaks in the fuel system	5
4.3 Foreign particles in engine	5
4.4 Contact corrosion!	5
4.5 Routing and attachment of pipes, hoses and wiring	6
4.6 Installing radiators and condensers	6
4.7 Checking vacuum system	6
10 - Removing and installing engine	8
1 Removing engine	8
2 Separating engine and gearbox	27
3 Securing engine to engine and gearbox support	36
4 Installing engine	38
5 Assembly mountings	45
5.1 Assembly mountings - exploded view	45
5.2 Removing and installing engine mounting (left and right)	46
5.3 Removing, installing and adjusting mounting for torque reaction support	50
13 - Crankshaft group	55
1 Cylinder block (pulley end)	55
1.1 Poly V-belt drive - exploded view	55
1.2 Removing and installing poly V-belt	56
1.3 Removing and installing vibration damper	59
1.4 Renewing crankshaft oil seal (pulley end)	60
2 Cylinder block (gearbox end)	63
2.1 Drive plate - exploded view	63
2.2 Removing and installing drive plate	63
2.3 Renewing crankshaft oil seal (gearbox end)	64
3 Crankshaft	66
3.1 Crankshaft - exploded view	66
3.2 Allocation of main bearing shells for new crankshaft	69
3.3 Allocation of main bearing shells on used and machined crankshafts	70
3.4 Crankshaft dimensions	71
3.5 Measuring axial clearance of crankshaft	71
3.6 Measuring radial clearance of crankshaft	72
4 Pistons and conrods	73
4.1 Pistons and conrods - exploded view	73
4.2 Piston and cylinder dimensions	76
4.3 Measuring radial clearance of conrods	76
15 - Cylinder head, valve gear	77
1 Chain drive	77
1.1 Timing chain covers - exploded view	77
1.2 Removing and installing timing chain covers (left and right)	78
1.3 Removing and installing timing chain cover (bottom)	82

1.4	Camshaft timing chain - exploded view	85
1.5	Removing timing chain from camshafts	89
1.6	Removing and installing camshaft timing chains	96
1.7	Removing and installing chain tensioner for camshaft timing chain	98
1.8	Drive chain for valve gear - exploded view	100
1.9	Removing and installing drive chain for valve gear	101
1.10	Drive chain for auxiliary drives - exploded view	103
1.11	Removing and installing drive chain for auxiliary drives	103
1.12	Auxiliary drives - exploded view	107
1.13	Renewing oil seal for air conditioner compressor drive	108
1.14	Renewing oil seal for power steering pump drive	110
1.15	Removing and installing spur gear drive	111
1.16	Balance shaft - exploded view	115
1.17	Removing and installing balance shaft	116
2	Cylinder head	118
2.1	Cylinder head - exploded view	118
2.2	Removing and installing cylinder head cover (left-side)	120
2.3	Removing and installing cylinder head cover (right-side)	123
2.4	Removing and installing cylinder head	125
2.5	Checking compression	131
3	Valve gear	136
3.1	Valve gear - exploded view	136
3.2	Measuring axial clearance of camshafts	138
3.3	Measuring radial clearance of camshafts	139
3.4	Removing and installing camshafts	140
3.5	Renewing valve stem oil seals (cylinder head installed)	145
3.6	Renewing valve stem oil seals (cylinder head removed)	149
3.7	Checking hydraulic valve compensation elements	153
3.8	Valve dimensions	154
3.9	Checking valve guides	154
3.10	Checking valves	155
17 - Lubrication	156	
1	Lubrication system	156
1.1	Oil pump, sump (bottom section) - exploded view	156
1.2	Removing and installing oil level and oil temperature sender G266	158
1.3	Removing and installing sump (bottom section)	158
1.4	Removing and installing oil pump	163
1.5	Sump (top section) - exploded view	168
1.6	Removing and installing sump (top section)	170
1.7	Oil retention valve and spray nozzle valve - exploded view	173
1.8	Removing and installing oil retention valve and spray nozzle valve	174
1.9	Removing and installing hose for crankcase breather system	175
1.10	Oil filter housing - exploded view	175
1.11	Removing and installing oil filter housing	177
1.12	Removing and installing engine oil cooler	177
1.13	Removing and installing oil pressure switch F1	179
1.14	Checking oil pressure and oil pressure switch F1	179
1.15	Engine oil	181
1.16	Checking oil level	181
19 - Cooling	182	
1	Cooling system	182
1.1	Connection diagram for coolant hoses - vehicles without auxiliary heater	182
1.2	Connection diagram for coolant hoses - vehicles with auxiliary heater	184

1.3	Connection diagram for coolant hoses - vehicles for hot countries without auxiliary heater	185
1.4	Connection diagram for coolant hoses - vehicles for hot countries with auxiliary heater ..	186
1.5	Draining and filling cooling system	187
1.6	Coolant pump and thermostat - exploded view	194
1.7	Removing and installing coolant pump	196
1.8	Removing and installing thermostat housing	197
1.9	Thermostat opening values 1)	198
1.10	Removing and installing coolant temperature sender G62	198
1.11	Removing and installing continued coolant circulation pump V51	200
1.12	Coolant pipes - exploded view	202
1.13	Removing and installing coolant pipe (bottom front)	204
1.14	Removing and installing coolant pipe (front)	205
1.15	Removing and installing coolant pipe (left-side)	207
1.16	Removing and installing coolant pipe (bottom left)	208
1.17	Removing and installing coolant pipe (right-side)	211
1.18	Removing and installing coolant pipe (rear)	212
1.19	Radiator and radiator fans - exploded view	212
1.20	Removing and installing radiator	214
1.21	Removing and installing auxiliary radiator (left-side)	217
1.22	Removing and installing auxiliary radiator (right-side)	218
1.23	Removing and installing radiator cowl	220
1.24	Removing and installing radiator fans	221
1.25	Checking cooling system for leaks	221
26 - Exhaust system	224
1	Exhaust system	224
1.1	Exhaust system - exploded view	224
1.2	Separating centre and rear silencers	229
1.3	Removing and installing exhaust pipes (left-side)	230
1.4	Removing and installing exhaust pipes (right-side)	233
1.5	Removing and installing Y-pipe (left-side)	236
1.6	Removing and installing Y-pipe (right-side)	238
1.7	Removing and installing front silencer (left-side)	239
1.8	Removing and installing front silencer (right-side)	239
1.9	Stress-free alignment of exhaust system	240
2	Servicing secondary air system	242
2.1	Principle and function	242
2.2	Secondary air system - exploded view	242
2.3	Checking combination valves for secondary air system for correct operation and leakage	243
2.4	Removing and installing combination valves for secondary air system	244
2.5	Removing and installing secondary air pump	245
3	Exhaust flaps	246
3.1	Checking vacuum unit for exhaust flap	246