

Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine identification number and engine data	1
2 General repair instructions	3
2.1 Rules for cleanliness when working on the injection system	3
2.2 Checking for leaks in the fuel system	3
3 Contact corrosion!	4
10 - Removing and installing engine	5
1 Removing and installing engine	5
1.1 Removing and installing engine	5
1.2 Removing engine	6
1.3 Separating engine and gearbox	23
1.4 Securing engine to assembly stand	30
1.5 Installing engine	32
1.6 Wire routing on engine	39
1.7 Removing and installing mounting for torque reaction support	40
13 - Crankshaft group	45
1 Dismantling and assembling engine	45
1.1 Moving lock carrier into service position	45
1.2 Lowering subframe for repair and assembly work	47
2 Servicing work on pulley end	55
2.1 Exploded view - poly V-belt drive for power steering pump, alternator and air conditioner	55
2.2 Removing and installing poly V-belt	57
2.3 Checking alignment of pulleys for power steering pump and air conditioner compressor ..	58
2.4 Removing and installing vibration damper	60
2.5 Renewing crankshaft oil seal (pulley end)	61
3 Servicing work on timing chain end	65
3.1 Exploded view - drive plate	65
3.2 Removing and installing drive plate	66
3.3 Exploded view - timing chain covers	67
3.4 Renewing crankshaft oil seal (timing chain end)	69
3.5 Renewing seals for studs	71
3.6 Removing and installing timing chain covers	71
3.7 Removing and installing timing chains for camshaft drive	77
3.8 Exploded view - timing chains for camshaft drive	78
3.9 Removing and installing camshaft timing chains	80
3.10 Exploded view - drive chain	88
3.11 Removing and installing drive chain	89
15 - Cylinder head, valve gear	93
1 Removing and installing cylinder head	93
1.1 Exploded view - cylinder head	93
1.2 Removing and installing cylinder head cover	94
1.3 Removing and installing cylinder head	97
2 Removing and installing intake manifold - rest-of-world vehicles	101
2.1 Exploded view - intake manifold	101
2.2 Removing and installing left section of intake manifold	102
2.3 Removing and installing right section of intake manifold	104
2.4 Removing and installing intake manifold (top section)	105



2.5	Removing and installing intake manifold (bottom section)	108
3	Removing and installing intake manifold - USA vehicles	110
3.1	Exploded view - intake manifold	110
3.2	Removing and installing left section of intake manifold	111
3.3	Removing and installing right section of intake manifold	113
3.4	Removing and installing intake manifold (top section)	115
3.5	Removing and installing intake manifold (bottom section)	118
4	Checking compression	121
5	Servicing valve gear	124
5.1	Exploded view - camshafts	124
5.2	Removing and installing camshaft adjuster	128
5.3	Removing and installing housing for variable valve timing	129
5.4	Removing and installing camshafts	130
5.5	Renewing valve stem oil seals	135
5.6	Checking axial clearance of camshafts	139
5.7	Checking valve guides	140
5.8	Checking valves	141
5.9	Valve dimensions	142
5.10	Machining valve seats	142
17 - Lubrication		145
1	Removing and installing parts of lubrication system	145
1.1	Exploded view - sump, sump (bottom section)	145
1.2	Removing and installing sump (bottom section)	147
1.3	Removing and installing oil pump	149
1.4	Removing and installing sump (top section)	150
1.5	Exploded view - oil filter bracket	157
1.6	Removing and installing oil filter housing	158
1.7	Removing and installing engine oil cooler	164
1.8	Removing and installing oil pipe (front)	165
1.9	Checking oil pressure and oil pressure switch	166
1.10	Engine oil	169
1.11	Checking oil level	170
19 - Cooling		171
1	Removing and installing parts of cooling system	171
1.1	Parts of cooling system	172
1.2	Draining and filling cooling system	178
1.3	Removing and installing coolant pump	184
1.4	Removing and installing continued coolant circulation pump V51	186
1.5	Checking thermostat	192
1.6	Removing and installing thermostat	194
1.7	Removing and installing coolant pipe (top)	195
1.8	Removing and installing coolant pipe (top left)	199
1.9	Removing and installing coolant pipe (bottom left)	201
1.10	Removing and installing coolant pipe (front right)	203
1.11	Removing and installing coolant pipe (top right)	209
1.12	Removing and installing coolant pipe (centre right)	210
1.13	Removing and installing coolant pipe (bottom right)	212
1.14	Exploded view - radiator and radiator fans	213
1.15	Removing and installing radiator	214
1.16	Removing and installing radiator cowl	219
1.17	Removing and installing radiator fans	220
1.18	Removing and installing auxiliary radiator	221
1.19	Checking cooling system for leaks	223

26	- Exhaust system	226
1	Removing and installing parts of exhaust system	226
1.1	Exploded view - exhaust system	226
1.2	Removing and installing front silencer (left-side)	229
1.3	Removing and installing front silencer (right-side)	231
1.4	Removing and installing exhaust manifolds with catalytic converters (left-side)	232
1.5	Removing and installing exhaust manifolds with catalytic converters (right-side)	234
1.6	Removing and installing centre silencer and rear silencer	235
1.7	Separating centre and rear silencers	237
1.8	Stress-free alignment of exhaust system	238
1.9	Checking exhaust system for leaks	239
2	Servicing secondary air system	241
2.1	Principle and function	241
2.2	Exploded view - secondary air system	243
2.3	Checking combination valves for secondary air system for correct operation and leakage	244
2.4	Removing and installing secondary air pumps	245
2.5	Removing and installing combination valve for secondary air system (left-side)	246
2.6	Removing and installing combination valve for secondary air system (right-side)	248
3	Exhaust flaps	249
3.1	Checking exhaust flaps	249
3.2	Checking vacuum unit for exhaust flap	250