

## Contents

<b>23</b>	<b>Mixture preparation - injection</b>	<b>1</b>
1	<b>Servicing diesel direct injection system</b>	1
1.1	Safety precautions	1
1.2	To avoid any risk of injuries to persons and/or damage to the injection and glow plug system, always observe the following safety precautions:	1
1.3	Rules for cleanliness and instructions for working on fuel system	2
1.4	Overview of fitting locations	3
1.5	System layout	9
1.6	Exploded view - fuel system	11
1.7	Removing and installing engine cover panel	14
1.8	Exploded view - air cleaner	15
1.9	Removing and installing air filter element	16
1.10	Removing and installing air mass meter G70	18
1.11	Exploded view - intake manifold	18
1.12	Removing and installing intake manifold (top section)	20
1.13	Removing and installing intake manifold (left and right bottom sections) - vehicles up to 10.2004	21
1.14	Removing and installing left-side intake manifold (bottom section) - vehicles from 10.2004 onwards	25
1.15	Removing and installing right-side intake manifold (bottom section) - vehicles from 10.2004 onwards	30
1.16	Removing and installing intake manifold flap motor V157 or intake manifold flap 2 motor V275	35
1.17	Checking injectors	43
1.18	Adaption of injector delivery calibration values and injector voltage calibration values	43
1.19	Checking for injectors sticking open (piezo injectors)	44
1.20	Measuring return flow rate of injectors with engine running	46
1.21	Checking return flow rate of injectors at starter cranking speed	49
1.22	Checking pressure retention valve in fuel return line	52
1.23	Removing and installing injectors	52
1.24	Exploded view - toothed belt for high-pressure pump	58
1.25	Removing and installing toothed belt for high-pressure pump - vehicles up to 03.2006	61
1.26	Removing and installing toothed belt for high-pressure pump - vehicles from 03.2006 onwards	65
1.27	Exploded view - high-pressure pump on vehicles up to 08.2005	69
1.28	Removing and installing high-pressure pump - vehicles up to 08.2005	72
1.29	Exploded view - high-pressure pump on vehicles from 08.2005 onwards	76
1.30	Removing and installing high-pressure pump - vehicles from 08.2005 onwards	79
1.31	Bleeding fuel system after installing high-pressure pump	83
1.32	Wiring and component check with test box V.A.G 1598/42	84
1.33	Renewing diesel direct injection system control unit J248	88
1.34	Checking fuel pressure regulating valve N276	93
1.35	Removing and installing fuel pressure regulating valve N276	94
1.36	Removing and installing fuel pressure sender G247	98
1.37	Removing and installing Lambda probe G39 with Lambda probe heater Z19	99
1.38	Removing and installing exhaust gas pressure sensor 1 G450	101
<b>28</b>	<b>Glow plug system</b>	<b>103</b>
1		103
1.1	Removing and installing glow plugs	103