

## Contents

<b>23</b>	<b>Mixture preparation - injection</b>	<b>1</b>
1	<b>Servicing diesel direct injection system</b>	<b>1</b>
1.1	Safety precautions when using testers and measuring instruments during a road test	1
1.2	To avoid injury and/or damage to the injection and glow plug system, note the following:	1
1.3	Safety precautions when working on the fuel system	2
1.4	Checking vacuum system	3
1.5	Overview of fitting locations	4
1.6	System layout	7
1.7	Exploded view - fuel system	8
1.8	Exploded view - intake manifold (part 1)	11
1.9	Exploded view - intake manifold (part 2)	12
1.10	Removing and installing intake manifold (left-side)	13
1.11	Removing and installing intake manifold (right-side)	17
1.12	Removing and installing air cleaner (left-side)	21
1.13	Removing and installing air cleaner (right-side)	22
1.14	Removing and installing engine cover panel	24
1.15	Checking injectors	24
1.16	Performing adaption of correction values for injectors	24
1.17	Checking for injectors sticking open	25
1.18	Measuring return flow rate of injectors with engine running	27
1.19	Checking return flow rate of injectors at starter cranking speed	30
1.20	Removing and installing high-pressure pipes between distributor housing (function block) and high-pressure pump / fuel rail	33
1.21	Removing and installing injectors	35
1.22	Exploded view - high-pressure pump	45
1.23	Removing and installing high-pressure pump and gear-type fuel system pressurisation pump	46
1.24	Bleeding fuel system after installing high-pressure pump	50
1.25	Checking for leaks in fuel system	51
1.26	Exploded view - toothed belt for high-pressure pump	51
1.27	Removing and installing toothed belt for high-pressure pump	53
1.28	Removing and installing air mass meter (left-side)	60
1.29	Removing and installing air mass meter (right-side)	62
1.30	Removing and installing fuel pressure regulating valve N276	64
1.31	Removing and installing fuel pressure sender G247	66
2	<b>Removing and installing engine control units</b>	<b>68</b>
2.1	Wiring and component check with test box V.A.G 1598/42	69
2.2	Renewing diesel direct injection system control unit J248 (master control unit)	72
2.3	Renewing diesel direct injection system control unit 2 J494 (slave control unit)	75
<b>28</b>	<b>Glow plug system</b>	<b>79</b>
1	<b>Checking glow plug system</b>	<b>79</b>
1.1	Checking glow plugs	79
1.2	Removing and installing glow plugs	79