

Contents

23 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety precautions when working on the fuel system	2
1.3 Safety precautions when working on the injection and glow plug system	3
1.4 Checking vacuum system	4
2 Injection system	5
2.1 Overview of fitting locations	5
2.2 System layout	13
2.3 Exploded view - fuel system	15
2.4 Removing and installing engine cover panel	18
2.5 Removing and installing air filter element (right-side, cylinder bank 1)	19
2.6 Removing and installing air filter element (left-side, cylinder bank 2)	20
2.7 Removing and installing air mass meter G70 (cylinder bank 1)	21
2.8 Removing and installing air mass meter 2 G246 (cylinder bank 2)	24
2.9 Exploded view - intake manifold	26
2.10 Removing and installing intake manifold (top section)	27
2.11 Removing and installing bottom section of intake manifold (right-side) (cylinder bank 1) ..	28
2.12 Removing and installing bottom section of intake manifold (left-side) (cylinder bank 2) ..	29
2.13 Installing high-pressure pipes	30
2.14 Checking injectors	32
2.15 Performing adaption of correction values for injectors	32
2.16 Checking for injectors sticking open	33
2.17 Measuring return flow rate of injectors with engine running	36
2.18 Checking return flow rate of injectors at starter cranking speed	39
2.19 Checking pressure retention valve in fuel return line	42
2.20 Exploded view - injectors and high-pressure pipes	43
2.21 Removing and installing injectors	45
2.22 Exploded view - toothed belt for high-pressure pump	51
2.23 Removing and installing toothed belt for high-pressure pump	53
2.24 Exploded view - high-pressure pump	57
2.25 Removing and installing high-pressure pump	60
2.26 Bleeding fuel system after installing high-pressure pump	63
2.27 Checking fuel pressure regulating valve N276	64
2.28 Removing and installing fuel pressure regulating valve N276	65
2.29 Removing and installing fuel pressure sender G247	67
2.30 Removing and installing Lambda probe G39	70
2.31 Removing and installing Lambda probe 2 G108	71
2.32 Removing and installing pressure differential sender G505 or pressure differential sender 2 G524	72
3 Engine control units	76
3.1 Wiring and component check with test box V.A.G 1598/42	76
3.2 Renewing engine control unit J623 (master control unit)	78
3.3 Renewing engine control unit 2 J624 (slave control unit)	81
28 - Glow plug system	85
1	85
1.1 Exploded view - glow plugs, Hall sender, engine speed sender	85
1.2 Removing and installing glow plugs	86
1.3 Removing and installing Hall sender G40	88