

Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
3 Safety precautions	3
4 General repair instructions	5
4.1 Different types of glow plugs for the 6-cylinder 3.0 ltr. TDI engine	5
4.2 Handling ceramic glow plugs	5
4.3 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	6
4.4 Checking fuel system for leaks	6
4.5 Contact corrosion!	6
4.6 Installing radiators, condensers and charge air coolers	6
4.7 Checking vacuum system	7
4.8 Routing and attachment of pipes, hoses and wiring	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Separating engine and gearbox	27
1.3 Securing engine to engine and gearbox support	34
1.4 Installing engine	36
13 - Crankshaft group	43
1 Servicing work on pulley end	43
1.1 Moving lock carrier into service position	43
1.2 Poly V-belt drive - exploded view	46
1.3 Removing and installing coolant pump pulley	49
1.4 Removing and installing power steering pump pulley	51
1.5 Removing and installing poly V-belt	52
1.6 Removing and installing tensioner for poly V-belt	56
1.7 Removing and installing idler roller for poly V-belt	56
1.8 Removing and installing vibration damper	57
1.9 Renewing crankshaft oil seal (pulley end)	58
1.10 Removing and installing sealing flange (front)	61
2 Servicing work on gearbox end	64
2.1 Vacuum pump - exploded view	64
2.2 Removing and installing vacuum pump	64
2.3 Drive plate - exploded view	65
2.4 Removing and installing drive plate	66
2.5 Renewing crankshaft oil seal (timing chain end)	67
2.6 Timing chain covers - exploded view	69
2.7 Removing and installing timing chain covers	70
2.8 Camshaft timing chains - exploded view	77
2.9 Removing and installing camshaft timing chains	80
2.10 Detaching camshaft timing chains from camshafts	88
2.11 Drive chain for valve gear - exploded view	97
2.12 Removing and installing drive chain for valve gear	99
2.13 Drive chain for oil pump and balance shaft - exploded view	100
2.14 Removing and installing drive chain for oil pump and balance shaft	102
2.15 Balance shaft - exploded view	105
2.16 Removing and installing balance shaft	106
3 Removing and installing crankshaft	110

3.1	Crankshaft - exploded view	110
3.2	Crankshaft dimensions	112
3.3	Measuring axial clearance	112
3.4	Measuring radial clearance	113
4	Dismantling and assembling pistons and conrods	114
4.1	Pistons and conrods - exploded view	114
4.2	Checking piston projection at TDC	117
4.3	Piston and cylinder dimensions	119
4.4	Checking radial clearance of conrod bearings	119
15	Cylinder head, valve gear	120
1	Handling ceramic glow plugs	120
2	Removing and installing cylinder head	121
2.1	Cylinder head - exploded view	121
2.2	Cylinder head cover - exploded view	124
2.3	Removing and installing cylinder head cover	127
2.4	Removing cylinder head - vehicles up to 08.2005	132
2.5	Removing cylinder head - vehicles from 08.2005 onwards	135
2.6	Installing cylinder head	138
2.7	Checking compression	142
3	Servicing valve gear	145
3.1	Valve gear - exploded view	145
3.2	Checking axial clearance of camshafts	147
3.3	Renewing camshaft oil seal (toothed belt drive sprocket with M14 securing bolt)	148
3.4	Renewing camshaft oil seal (toothed belt drive sprocket with M10 securing bolt)	150
3.5	Removing and installing camshafts - cylinder head (left-side)	153
3.6	Removing and installing camshafts - cylinder head (right-side)	160
3.7	Renewing valve stem oil seals with cylinder head installed	166
3.8	Renewing valve stem oil seals with cylinder head removed	171
3.9	Checking hydraulic valve compensation elements	174
3.10	Checking valves	175
3.11	Valve dimensions	176
3.12	Machining valve seats	176
3.13	Checking valve guides	176
17	Lubrication	178
1	Removing and installing parts of lubrication system	178
1.1	Oil pump, sump (bottom section) - exploded view	178
1.2	Removing and installing sump (bottom section)	180
1.3	Removing and installing oil pump	182
1.4	Sump (top section) - exploded view	184
1.5	Removing and installing sump (top section)	185
1.6	Oil cooler, pressure control valve, and oil filter housing - exploded view	188
1.7	Removing and installing oil cooler	190
1.8	Removing and installing oil filter housing	191
1.9	Removing and installing pressure control valve for crankcase breather system	195
1.10	Removing and installing mounting plate for oil cooler, pressure control valve and oil filter housing	196
1.11	Removing and installing oil pressure switch F1	198
1.12	Checking oil pressure switch and oil pressure	198
1.13	Engine oil	200
1.14	Checking oil level	200
19	Cooling	202
1	Removing and installing parts of cooling system	202
1.1	Draining and filling cooling system	202

1.2	Coolant pump and thermostat - exploded view	207
1.3	Removing and installing coolant pump	208
1.4	Removing and installing hose connection with thermostat	209
1.5	Removing and installing coolant temperature sender G62	210
1.6	Removing and installing coolant pipe (front)	211
1.7	Removing and installing coolant pipe (left-side)	212
1.8	Removing and installing coolant pipe (top right)	217
1.9	Removing and installing coolant pipe (centre right)	220
1.10	Removing and installing coolant pipe (bottom right)	226
1.11	Removing and installing coolant pipe (top)	227
1.12	Removing and installing coolant pipe (rear)	228
1.13	Radiator and radiator fans - exploded view	231
1.14	Removing and installing radiator	232
1.15	Removing and installing radiator cowl	237
1.16	Removing and installing radiator fans	238
1.17	Checking cooling system for leaks	239
21	Turbocharging/supercharging	241
1	Servicing charge air system with turbocharger	241
1.1	Turbocharger - exploded view	241
1.2	Removing and installing turbocharger	243
1.3	Removing and installing turbocharger control unit 1 J724	245
1.4	Removing and installing intermediate flange	254
1.5	Charge air cooling - exploded view	254
1.6	Removing and installing charge air cooler (left-side)	256
1.7	Removing and installing charge pressure sender G31	257
1.8	Removing and installing charge air cooler (right-side)	258
26	Exhaust system	260
1	Removing and installing parts of exhaust system - vehicles without particulate filter	260
1.1	Exhaust system - exploded view	260
1.2	Removing and installing starter catalytic converter	263
1.3	Removing and installing front exhaust pipe with main catalytic converter	266
2	Removing and installing parts of exhaust system - vehicles with particulate filter	269
2.1	Exhaust system - exploded view	269
2.2	Removing and installing starter catalytic converter	272
2.3	Removing and installing front exhaust pipe	275
2.4	Removing and installing particulate filter with main catalytic converter	278
3	Servicing exhaust system	281
3.1	Separating Y-pipe and rear silencers	281
3.2	Stress-free alignment of exhaust system	282
3.3	Aligning tailpipes	283
3.4	Checking exhaust system for leaks	283
4	Removing and installing exhaust manifolds and intermediate pipes	284
4.1	Exhaust manifold - exploded view	284
4.2	Removing and installing exhaust manifold (left-side)	285
4.3	Removing and installing exhaust manifold (right-side)	287
4.4	Removing and installing intermediate pipe (left-side)	292
4.5	Removing and installing intermediate pipe (right-side)	294
5	Removing and installing parts of exhaust gas temperature control	295
5.1	Removing and installing exhaust gas temperature sender 1 G235	295
5.2	Removing and installing temperature sender before particulate filter G506	296
5.3	Removing and installing exhaust gas temperature sender 2 for bank 1 G448	297
6	Exhaust gas recirculation system and cooling for exhaust gas recirculation system	299
6.1	Exhaust gas recirculation system - exploded view	299



6.2	Removing and installing mechanical exhaust gas recirculation valve	301
6.3	Removing and installing exhaust gas recirculation cooler	301