

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Engine number .....	1
1.2 Engine data .....	1
<b>2 Safety precautions</b> .....	<b>2</b>
2.1 Safety precautions when working on the fuel supply system .....	2
2.2 Safety precautions when using testers and measuring instruments during a road test .....	3
2.3 Safety precautions when working on the cooling system .....	3
<b>3 General repair instructions</b> .....	<b>4</b>
3.1 Rules for cleanliness .....	4
3.2 Checking for leaks in the fuel system .....	4
3.3 Foreign particles in engine .....	5
3.4 Contact corrosion .....	5
3.5 Routing and attachment of pipes, hoses and wiring .....	5
3.6 Installing radiators and condensers .....	5
3.7 Checking vacuum system .....	5
<b>10 - Removing and installing engine</b> .....	<b>7</b>
<b>1 Removing and installing engine</b> .....	<b>7</b>
1.1 Removing engine .....	7
1.2 Separating engine and gearbox .....	28
1.3 Securing engine to assembly stand .....	33
1.4 Installing engine .....	35
<b>13 - Crankshaft group</b> .....	<b>42</b>
<b>1 Dismantling and assembling engine</b> .....	<b>42</b>
1.1 Moving lock carrier into service position .....	42
1.2 Lowering subframe for repair and assembly work .....	45
<b>2 Servicing work on pulley end</b> .....	<b>54</b>
2.1 Poly V-belt drive for alternator and air conditioner - exploded view of components .....	54
2.2 Poly V-belt drive for alternator and air conditioner compressor .....	55
2.3 Removing and installing poly V-belt .....	55
2.4 Removing and installing vibration damper .....	56
2.5 Renewing crankshaft oil seal (pulley end) .....	58
2.6 Removing and installing sealing flange (front) .....	60
<b>3 Servicing work on timing chain end</b> .....	<b>64</b>
3.1 Drive plate - exploded view .....	64
3.2 Removing and installing drive plate .....	64
3.3 Renewing crankshaft oil seal (timing chain end) .....	65
3.4 Vacuum pump - exploded view .....	67
3.5 Removing and installing vacuum pump .....	68
<b>4 Removing and installing crankshaft</b> .....	<b>71</b>
4.1 Crankshaft - exploded view .....	71
4.2 Allocation of main bearing shells for new crankshafts .....	73
4.3 Allocation of crankshaft bearing shells for retaining frame without visible colour coding ..	73
4.4 Crankshaft dimensions .....	74
4.5 Measuring axial clearance .....	74
4.6 Measuring radial clearance .....	74
<b>5 Dismantling and assembling pistons and conrods</b> .....	<b>76</b>
5.1 Pistons and conrods - exploded view .....	76
5.2 Removing and installing pistons .....	79
5.3 Piston and cylinder dimensions .....	80



5.4	Measuring radial clearance of conrods	80
5.5	Checking piston projection at TDC	81
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>83</b>
<b>1</b>	<b>Timing chain covers</b>	<b>83</b>
1.1	Timing chain covers - exploded view	83
1.2	Removing and installing oil seal for toothed belt sprocket on high-pressure pump	84
1.3	Removing and installing all timing chain covers	86
<b>2</b>	<b>Drive chains for camshafts and valve gear</b>	<b>97</b>
2.1	Camshaft timing chain (left-side) - exploded view of components	97
2.2	Camshaft timing chain (right-side) - exploded view of components	98
2.3	Removing and installing camshaft timing chains	99
2.4	Detaching camshaft timing chains from camshafts	106
2.5	Drive chain for valve gear - exploded view	117
2.6	Removing and installing drive chain for valve gear	119
2.7	Checking drive chains for camshafts and valve gear for elongation	120
<b>3</b>	<b>Auxiliary drives</b>	<b>123</b>
3.1	Chain for auxiliary drives - exploded view	123
3.2	Removing and installing chain for auxiliary drives	123
3.3	Auxiliary drives - exploded view	124
3.4	Renewing oil seal for power steering pump drive	125
3.5	Removing and installing spur gear drive	129
<b>4</b>	<b>Removing and installing cylinder head</b>	<b>133</b>
4.1	Cylinder head - exploded view	133
4.2	Cylinder head cover - exploded view	135
4.3	Removing and installing cylinder head cover (left-side)	137
4.4	Removing and installing cylinder head cover (right-side)	141
4.5	Removing and installing cylinder head	149
4.6	Checking compression	153
<b>5</b>	<b>Servicing valve gear</b>	<b>156</b>
5.1	Valve gear - exploded view	156
5.2	Checking axial clearance of camshafts	158
5.3	Removing and installing camshafts	159
5.4	Renewing valve stem oil seals with cylinder head installed	163
5.5	Renewing valve stem oil seals with cylinder head removed	166
5.6	Checking hydraulic valve compensation elements	169
5.7	Valve dimensions	170
5.8	Machining valve seats	170
5.9	Checking valve guides	171
5.10	Checking valves	171
<b>17</b>	<b>Lubrication</b>	<b>173</b>
<b>1</b>	<b>Removing and installing parts of lubrication system</b>	<b>173</b>
1.1	Oil pump, sump (bottom section), sump (centre section) - exploded view	173
1.2	Removing and installing oil level and oil temperature sender G266	175
1.3	Removing and installing sump (bottom section)	175
1.4	Removing and installing sump (centre section)	178
1.5	Removing and installing oil pump	187
1.6	Sump (top section) - exploded view	189
1.7	Removing and installing sump (top section)	190
1.8	Oil cooler, pressure control valve, oil filter housing and spray nozzle valve - exploded view	193
1.9	Removing and installing oil cooler	195
1.10	Removing and installing oil filter housing	196
1.11	Removing and installing pressure control valve for crankcase breather system	198

1.12	Removing and installing mounting plate for oil cooler, pressure control valve and oil filter housing	199
1.13	Removing and installing spray nozzle valve	203
1.14	Removing and installing oil pressure switch F1	203
1.15	Removing and installing oil temperature sender G8	204
1.16	Checking oil pressure	206
1.17	Engine oil	207
1.18	Checking oil level	207
<b>19</b>	<b>- Cooling</b>	<b>209</b>
<b>1</b>	<b>Removing and installing parts of cooling system</b>	<b>209</b>
1.1	Draining and filling cooling system	209
1.2	Coolant pump and thermostat - exploded view	215
1.3	Removing and installing coolant pump	217
1.4	Removing, installing and checking thermostat	220
1.5	Checking thermostat	221
1.6	Removing and installing coolant pipes (front)	222
1.7	Removing and installing coolant pipe (left-side)	227
1.8	Removing and installing coolant pipe (right-side)	229
1.9	Removing and installing coolant pipe (rear)	229
1.10	Removing and installing coolant temperature sender G62	233
1.11	Radiator and radiator fans - exploded view of components	233
1.12	Removing and installing radiator	234
1.13	Removing and installing radiator cowl	239
1.14	Removing and installing radiator fan	240
1.15	Checking cooling system for leaks	241
<b>21</b>	<b>- Turbocharging/supercharging</b>	<b>244</b>
<b>1</b>	<b>Servicing charge air system with turbocharger</b>	<b>244</b>
1.1	Turbocharger - exploded view	244
1.2	Removing and installing turbocharger (left-side)	246
1.3	Removing and installing turbocharger (right-side)	252
1.4	Charge air cooling - exploded view	267
1.5	Removing and installing charge air cooler (left-side)	268
1.6	Removing and installing charge pressure sender G31	270
1.7	Removing and installing charge air cooler (right-side)	272
<b>26</b>	<b>- Exhaust system</b>	<b>275</b>
<b>1</b>	<b>Removing and installing parts of exhaust system</b>	<b>275</b>
1.1	Exhaust system - exploded view	275
1.2	Removing and installing exhaust gas temperature sender 1 G235	279
1.3	Removing and installing exhaust gas temperature sender 1 for bank 2 G236	280
1.4	Separating centre and rear silencers	281
1.5	Removing and installing main catalytic converter (left-side)	282
1.6	Removing and installing main catalytic converter (right-side)	284
1.7	Removing and installing front exhaust pipe (left-side) with starter catalytic converter	286
1.8	Removing and installing front exhaust pipe (right-side) with starter catalytic converter	289
1.9	Exhaust manifold - exploded view	291
1.10	Removing and installing exhaust manifold (left-side)	292
1.11	Removing and installing exhaust manifold (right-side)	292
1.12	Stress-free alignment of exhaust system	293
1.13	Aligning tailpipes	294
1.14	Checking exhaust system for leaks	294
<b>2</b>	<b>Exhaust gas recirculation system</b>	<b>295</b>
2.1	Exhaust gas recirculation system - exploded view of components	295
2.2	Removing and installing mechanical exhaust gas recirculation valve (left-side)	296



2.3	Removing and installing mechanical exhaust gas recirculation valve (right-side) . . . . .	297
2.4	Removing and installing exhaust gas recirculation cooler (left-side) . . . . .	298
2.5	Removing and installing exhaust gas recirculation cooler (right-side) . . . . .	300