

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety precautions</b> .....	<b>1</b>
1.1 Safety precautions when working on the fuel system .....	1
1.2 Safety precautions when using testers and measuring instruments during a road test .....	2
<b>2 Repair instructions</b> .....	<b>3</b>
2.1 Rules for cleanliness .....	3
2.2 Test conditions .....	3
2.3 Contact corrosion .....	3
2.4 Routing and attachment of pipes, hoses and wiring .....	4
<b>20 - Fuel supply system</b> .....	<b>5</b>
<b>1 Fuel tank with attached components - all rest-of-world vehicles</b> .....	<b>5</b>
1.1 Fuel tank with attached components - exploded view .....	5
1.2 Draining fuel tank .....	7
1.3 Removing and installing fuel tank with attached components .....	10
<b>2 Routing of pipes/hoses (inside fuel tank) - rest-of-world vehicles with MPI engine</b> .....	<b>17</b>
2.1 Routing of pipes/hoses (inside fuel tank) - exploded view .....	17
<b>3 Fuel delivery unit with fuel pump and fuel gauge senders - rest-of-world vehicles with MPI engine</b> .....	<b>19</b>
3.1 Exploded view - fuel delivery unit (left-side) with fuel system pressurisation pump G6 and fuel gauge senders G and G237 .....	19
3.2 Checking fuel system pressurisation pump G6 (left-side) - electrical test .....	21
3.3 Removing and installing fuel delivery unit (left-side) with fuel system pressurisation pump G6 .....	26
3.4 Exploded view - fuel delivery unit (right-side) with fuel pump G23 and fuel gauge senders G169 and G393 .....	36
3.5 Checking fuel pump G23 (right-side) - electrical test .....	39
3.6 Removing and installing fuel delivery unit (right-side) with fuel pump G23 .....	42
3.7 Checking delivery rate of fuel pumps - vehicles with fuel return line .....	53
3.8 Checking delivery rate of fuel pumps - vehicles with fuel system without fuel return line ..	56
3.9 Suction-jet pumps .....	60
3.10 Removing and installing suction-jet pump (left-side) .....	62
3.11 Removing and installing suction-jet pump (right-side) .....	63
<b>4 Routing of pipes/hoses (inside fuel tank) - rest-of-world vehicles with FSI engine</b> .....	<b>66</b>
4.1 Routing of pipes/hoses (inside fuel tank) - exploded view .....	66
<b>5 Fuel delivery unit with fuel pump and fuel gauge senders - rest-of-world vehicles with FSI engine</b> .....	<b>68</b>
5.1 Exploded view - fuel delivery unit (left-side) with fuel system pressurisation pump G6 and fuel gauge senders G and G237 .....	68
5.2 Checking fuel system pressurisation pump G6 (left-side) - electrical test .....	70
5.3 Removing and installing fuel delivery unit (left-side) with fuel system pressurisation pump G6 .....	70
5.4 Exploded view - fuel delivery unit (right-side) with fuel pump G23 and fuel gauge senders G169 and G393 .....	79
5.5 Checking fuel pump G23 (right-side) - electrical test .....	81
5.6 Removing and installing fuel delivery unit (right-side) with fuel pump G23 .....	81
5.7 Checking delivery rate of fuel pumps - vehicles with 6-cylinder engine .....	90
5.8 Checking delivery rate of fuel pumps - vehicles with 8-cylinder engine .....	94
5.9 Checking delivery rate of fuel pumps - vehicles with 10-cylinder engine (Audi S8) .....	98
5.10 Fuel pump control unit J538 .....	102
5.11 Removing and installing fuel pump control unit J538 .....	102
5.12 Suction-jet pumps .....	103
5.13 Removing and installing suction-jet pump (left-side) .....	105
5.14 Removing and installing suction-jet pump (right-side) .....	107



<b>6</b>	<b>Fuel tank with attached components - all USA vehicles</b>	<b>110</b>
6.1	Fuel tank with attached components - exploded view	110
6.2	Draining fuel tank	112
6.3	Removing and installing fuel tank with attached components	115
<b>7</b>	<b>Routing of pipes/hoses (inside fuel tank) - USA vehicles with MPI engine</b>	<b>121</b>
7.1	Routing of pipes/hoses (inside fuel tank) - exploded view	121
<b>8</b>	<b>Fuel delivery unit with fuel pump and fuel gauge senders - USA vehicles with MPI engine</b>	<b>123</b>
8.1	Exploded view - fuel delivery unit (left-side) with fuel system pressurisation pump G6 and fuel gauge senders G and G237	123
8.2	Checking fuel system pressurisation pump G6 (left-side) - electrical test	125
8.3	Removing and installing fuel delivery unit (left-side) with fuel system pressurisation pump G6	129
8.4	Exploded view - fuel delivery unit (right-side) with fuel pump G23 and fuel gauge senders G169 and G393	136
8.5	Checking fuel pump G23 (right-side) - electrical test	138
8.6	Removing and installing fuel delivery unit (right-side) with fuel pump G23	141
8.7	Checking delivery rate of fuel pumps - vehicles with fuel return line	149
8.8	Checking delivery rate of fuel pumps - vehicles with fuel system without fuel return line	153
8.9	Suction-jet pumps	157
8.10	Removing and installing suction-jet pump (left-side)	159
8.11	Removing and installing suction-jet pump (right-side)	160
<b>9</b>	<b>Routing of pipes/hoses (inside fuel tank) - USA vehicles with FSI engine</b>	<b>163</b>
9.1	Routing of pipes/hoses (inside fuel tank) - exploded view	163
<b>10</b>	<b>Fuel delivery unit with fuel pump and fuel gauge senders - USA vehicles with FSI engine</b>	<b>165</b>
10.1	Exploded view - fuel delivery unit (left-side) with fuel system pressurisation pump G6 and fuel gauge senders G and G237	165
10.2	Checking fuel system pressurisation pump G6 (left-side) - electrical test	167
10.3	Removing and installing fuel delivery unit (left-side) with fuel system pressurisation pump G6	167
10.4	Exploded view - fuel delivery unit (right-side) with fuel pump G23 and fuel gauge senders G169 and G393	175
10.5	Checking fuel pump G23 (right-side) - electrical test	176
10.6	Removing and installing fuel delivery unit (right-side) with fuel pump G23	177
10.7	Checking delivery rate of fuel pumps - vehicles with 8-cylinder engine	185
10.8	Checking delivery rate of fuel pumps - vehicles with 10-cylinder engine (Audi S8)	189
10.9	Fuel pump control unit J538	193
10.10	Removing and installing fuel pump control unit J538	193
10.11	Suction-jet pumps	194
10.12	Removing and installing suction-jet pump (left-side)	196
10.13	Removing and installing suction-jet pump (right-side)	198
<b>11</b>	<b>Fuel gauge senders - rest-of-world vehicles</b>	<b>201</b>
11.1	Checking fuel gauge sender G (lever-type sender, left-side)	201
11.2	Removing and installing fuel gauge sender G (lever-type sender, left-side)	202
11.3	Checking fuel gauge sender 2 G169 (lever-type sender, right-side)	203
11.4	Removing and installing fuel gauge sender 2 G169 (lever-type sender, right-side)	204
11.5	Checking fuel gauge sender 3 G237 (tubular sender, left-side)	205
11.6	Removing and installing fuel gauge sender 3 G237 (tubular sender, left-side)	206
11.7	Checking fuel gauge sender 4 G393 (tubular sender, right-side)	211
11.8	Removing and installing fuel gauge sender 4 G393 (tubular sender, right-side)	213
<b>12</b>	<b>Fuel gauge senders - USA vehicles</b>	<b>221</b>
12.1	Checking fuel gauge sender G (lever-type sender, left-side)	221
12.2	Removing and installing fuel gauge sender G (lever-type sender, left-side)	222
12.3	Checking fuel gauge sender 2 G169 (lever-type sender, right-side)	223
12.4	Removing and installing fuel gauge sender 2 G169 (lever-type sender, right-side)	224

12.5	Checking fuel gauge sender 3 G237 (tubular sender, left-side)	225
12.6	Removing and installing fuel gauge sender 3 G237 (tubular sender, left-side)	226
12.7	Checking fuel gauge sender 4 G393 (tubular sender, right-side)	230
12.8	Removing and installing fuel gauge sender 4 G393 (tubular sender, right-side)	232
<b>13</b>	<b>Fuel filter - all vehicles</b>	<b>239</b>
13.1	Fuel filter on vehicles without auxiliary heater - exploded view	239
13.2	Removing and installing fuel filter on vehicles without auxiliary heater	240
13.3	Fuel filter on vehicles with auxiliary heater - exploded view	240
13.4	Removing and installing fuel filter on vehicles with auxiliary heater	241
13.5	Fuel filter on vehicles with fuel system without fuel return line - exploded view	242
13.6	Removing and installing fuel filter on vehicles with fuel system without fuel return line	243
<b>14</b>	<b>Activated charcoal filter system - rest-of-world vehicles</b>	<b>245</b>
14.1	Activated charcoal filter system - exploded view	245
14.2	Removing and installing activated charcoal filter	245
<b>15</b>	<b>Activated charcoal filter system - USA vehicles</b>	<b>247</b>
15.1	Activated charcoal filter system - exploded view	247
15.2	Removing and installing activated charcoal filter	248
15.3	Routing of pipes/hoses for activated charcoal filter system with tank leak diagnostic system - vehicles with 8-cylinder and 10-cylinder engines	249
15.4	Routing of pipes/hoses for activated charcoal filter system with tank leak diagnostic system - vehicles with 12-cylinder engine	251
15.5	Tank leak diagnostic system	251
15.6	Performing tank leak diagnosis	252
15.7	Fuel system diagnostic pump V144 - exploded view	253
15.8	Removing and installing fuel system diagnostic pump V144	254
15.9	Removing and installing activated charcoal filter solenoid valve 2 N115	255
<b>16</b>	<b>Accelerator mechanism - all vehicles</b>	<b>256</b>
16.1	Accelerator mechanism - exploded view	256
16.2	Removing and installing accelerator pedal module with accelerator position sender	257
16.3	Removing and installing kickdown switch F8	257