

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions when working on the fuel system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
2 Repair instructions	3
2.1 Rules for cleanliness	3
2.2 Test conditions	3
2.3 Contact corrosion	3
2.4 Routing and attachment of pipes, hoses and wiring	4
20 - Fuel supply system	5
1 Fuel supply system	5
1.1 Fuel tank with components - exploded view	5
1.2 Draining fuel tank	7
1.3 Removing and installing fuel tank with attached components	10
1.4 Routing of pipes/hoses (inside fuel tank) - overview	16
1.5 Fuel delivery unit (left-side) with fuel system pressurisation pump G6 ; fuel gauge sender G and fuel gauge sender 3 G237 - exploded view of components	17
1.6 Removing and installing fuel delivery unit (left-side) with fuel system pressurisation pump G6	18
1.7 Fuel delivery unit (right-side) with fuel pump G23 ; fuel gauge sender 2 G169 and fuel gauge sender 4 G393 - exploded view of components	27
1.8 Removing and installing fuel delivery unit (right-side) with fuel pump G23	29
1.9 Checking fuel pump delivery rate	38
1.10 Suction-jet pumps: operation	40
1.11 Removing and installing suction-jet pump (left-side)	41
1.12 Removing and installing suction-jet pump (right-side)	43
2 Fuel gauge senders	45
2.1 Checking fuel gauge sender G (lever-type sender, left-side)	45
2.2 Removing and installing fuel gauge sender G (lever-type sender, left-side)	46
2.3 Checking fuel gauge sender 2 G169 (lever-type sender, right-side)	47
2.4 Removing and installing fuel gauge sender 2 G169 (lever-type sender, right-side)	48
2.5 Checking fuel gauge sender 3 G237 (tubular sender, left-side)	49
2.6 Removing and installing fuel gauge sender 3 G237 (tubular sender, left-side)	50
2.7 Checking fuel gauge sender 4 G393 (tubular sender, right-side)	54
2.8 Removing and installing fuel gauge sender 4 G393 (tubular sender, right-side)	56
3 Fuel cooler	63
3.1 Removing and installing fuel cooler on underbody	63
3.2 Removing and installing fuel cooler on engine - vehicles with 8-cylinder 4.0 ltr. TDI engine	64
4 Servicing fuel filter	66
4.1 Fuel filter - exploded view of components	66
4.2 Removing and installing fuel filter	67
5 Bleeding fuel system	68
6 Checking fuel system for leaks	69
6.1 Checking fuel system for leaks (vehicles with 6-cyl. TDI engine)	69
6.2 Checking fuel system for leaks (vehicles with 8-cyl. 4.0 ltr. TDI engine)	70
6.3 Checking fuel system for leaks (vehicles with 8-cyl. 4.2 ltr. TDI engine)	72
7 Servicing accelerator mechanism	75
7.1 Accelerator mechanism - exploded view of components	75
7.2 Removing and installing accelerator pedal module with accelerator position sender	76
7.3 Checking kickdown switch F8	76
7.4 Removing and installing kickdown switch F8	77