

001 - Basic equipment	1-38
1. Basic equipment	1-4
2. Earth connections	5
3. Earth connections	6
4. Battery, battery monitor control unit, battery cut-off relay, terminal 15 voltage supply relay	7
5. Steering column electronics control unit, steering column voltage supply, terminal 75 voltage supply relay -1-	8
6. Turn signal switch, intermittent wiper switch, horn plate, steering angle sender, steering column electronics control unit	9
7. Steering column electronics control unit, cruise control system switch	10
8. Entry and start authorisation control unit, entry and start authorisation switch, steering column lock control element, engine Start/Stop button	11
9. Onboard power supply control unit, lighting switch, hazard warning lights button, operating unit in front of centre console	12
10. Onboard power supply control unit, power output module for left headlight, left side light bulb, front left turn signal bulb, left side turn signal bulb, left dipped beam bulb, left main beam bulb, left headlight range control motor	13
11. Onboard power supply control unit, power output module for right headlight, right side light bulb, front right turn signal bulb, right side turn signal bulb, right dipped beam bulb, right main beam bulb, right headlight range control motor	14
12. Onboard power supply control unit, left and right fog light bulb, control unit for headlight range control, high tone horn, low tone horn	15
13. Voltage supply for onboard power supply control unit, fuses	16
14. Convenience system central control unit	17
15. Convenience system central control unit, left tail light bulb, rear left turn signal bulb, left brake light bulb, left reversing light bulb, rear left fog light bulb	18
16. Convenience system central control unit, right tail light bulb, right brake light bulb, rear right turn signal bulb, right reversing light bulb, rear right fog light bulb	19
17. Convenience system central control unit, number plate light, heated rear window, high level brake light bulb	20
18. Convenience system central control unit, brake light switch	21
19. Convenience system central control unit, luggage compartment light, rear lid light, rear footwell illumination	22
20. Wiper motor control unit, windscreen wiper motor, washer pump, diagnosis connection	23
21. Onboard power supply control unit -2-, Servotronic	24
22. Onboard power supply control unit -2-, headlight washer system pump, pop-up washer jet motor - left and right headlight washer system, headlight washer system relay, washer fluid heater relay, heater element for washer jet	25
23. Control unit with display in dash panel insert, brake lining/pad wear senders, oil pressure switch	26
24. Control unit with display in dash panel insert, oil level thermo sender, brake fluid level warning contact, windscreen washer fluid level sender, coolant shortage indicator switch, ambient temperature sensor	27
25. Control unit with display in dash panel insert, radio controlled clock, electric park and handbrake control unit, radio controlled clock receiver, data bus diagnostic interface	28
26. Control unit with display in dash panel insert, data bus diagnostic interface, front information control unit, shelf illumination	29
27. Control unit with display in dash panel insert, fuel gauge senders, fuel pump (pre-supply pump), fuel pump, fuel gauge	30
28. Fuel pump relay, electric fuel pump 2 relay	31
29. Roof electronics control unit, illuminated vanity mirror, interior monitor sender/receiver module 1, automatic anti-dazzle interior mirror, light sensor, humidity sender, interior light switch	32
30. Roof electronics control unit, interior light, front interior light button, reading light buttons	33
31. Roof electronics control unit, rear operating unit for roof module, rear switch for rear roller blind	34
32. Rear operating unit for roof module, rear reading light, rear interior light	35
33. Rear operating unit for roof module, rear illuminated vanity mirror, glove box light, left and right footwell light	36
34. Illumination of rear storage compartment in centre console, map reading light, centre armrest illumination	37
35. Cigarette lighter, rear cigarette lighter	38
002 - Audi A8 4.2 litre - fuel injection engine (246 kW - Motronic - 8-cylinder), engine code BFM	39-58
Audi A8 3.7 litre - fuel injection engine (206 kW - Motronic - 8-cylinder), engine code BFL	
1. Audi A8 4.2 litre - fuel injection engine (246 kW - Motronic - 8-cylinder). engine code BFM Audi	39-43

A8 3.7 litre - fuel injection engine (206 kW - Motronic - 8-cylinder), engine code BFL	
2. Battery, energy management control unit, battery cut-off relay	44
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	45
4. Engine control unit, Motronic current supply relay	46
5. Engine control unit, ignition coils, injectors for cylinders 1 - 4	47
6. Engine control unit, ignition coils, injectors for cylinders 5 - 8	48
7. Engine control unit, throttle valve module, accelerator pedal position senders, kick-down switch	49
8. Engine control unit, knock sensor 1, engine speed sender, coolant temperature sender	50
9. Engine control unit, inlet camshaft timing adjustment valve 1, Hall senders, brake light switch, torque rod valve	51
10. Engine control unit, air mass meter, lambda probe, lambda probe 2	52
11. Engine control unit, intake manifold change-over valve, intake manifold change-over valve 2, variable intake manifold change-over valve, activated charcoal filter system solenoid valve 1 (pulsed), electro/hydraulic engine mounting solenoid valve - left, l	53
12. Engine control unit, secondary air pump relay, secondary air pump motor, high pressure sender, secondary air inlet valve	54
13. Engine control unit, radiator fan, radiator fan -2-, fuel system diagnostic pump	55
14. Engine control unit, fuses	56
15. Fuel pump relay, electric fuel pump 2 relay, fuel pump (pre-supply pump), fuel gauge senders, control unit with display in dash panel insert	57
16. Control unit with display in dash panel insert, fuel gauge, fuel pump, fuel gauge senders, oil pressure warning lamp	58
003 - Automatic gearbox 09E	59-63
1. Automatic gearbox 09E	59-60
2. Automatic gearbox control unit	61
3. Automatic gearbox control unit, Tiptronic switch, selector lever lock solenoid	62
4. Automatic gearbox control unit, CAN separating connector, right	63
004 - Airbags	64-72
1. Airbags	64-65
2. Airbag control unit, battery cut-off relay	66
3. Airbag control unit, airbag igniter - driver's side, airbag igniter 1 - front passenger's side	67
4. Airbag control unit, side airbags	68
5. Airbag control unit, curtain airbags, front belt tensioners	69
6. Airbag control unit, rear belt tensioners, belt switches	70
7. Airbag control unit, side airbag crash sensors, front airbag crash sensors	71
8. Airbag control unit, airbag disabled warning lamp - front passenger's side, airbag disabling key switch - front passenger's side	72
005 - Ultra-sonic parking aid, front and rear	73-77
1. Ultra-sonic parking aid, front and rear	73-74
2. Parking aid control unit, parking aid button, parking aid warning lamp	75
3. Parking aid control unit, front parking aid senders, parking aid warning buzzer	76
4. Parking aid control unit, rear parking aid senders	77
006 - CAN bus separating connector	78-84
1. CAN bus separating connector	78
2. CAN separating connector left	79
3. CAN separating connector left	80
4. CAN separating connector left	81
5. CAN separating connector right	82
6. CAN separating connector right	83
7. CAN separating connector right	84
007 - Entry and start authorisation, Entry and start authorisation with keyless entry system	85-94
1. Entry and start authorisation, Entry and start authorisation with keyless entry system	85-87
2. Entry and start authorisation control unit	88
3. Entry and start authorisation control unit, entry and start authorisation switch, steering column lock control element, engine Start/Stop button, driver identification control unit	89
4. Entry and start authorisation control unit, exterior door handle touch sensor - driver's side, aerial - driver's side, door control unit	90
5. Entry and start authorisation control unit, exterior door handle touch sensor - front passenger's side, aerial - front passenger's side, door control unit	91
6. Entry and start authorisation control unit, aerials	92
7. Entry and start authorisation control unit	93
8. Entry and start authorisation control unit, starter motor relay, starter motor relay 2	94
008 - Anti-lock brake system 5.7 (ABS) with traction control system (ASR/TCS) and electronic stability program (ESP)	95-100
1. Anti-lock brake system 5.7 (ABS) with traction control system (ASR/TCS) and electronic stability program (ESP)	95-96

2. ABS with EDL control unit, TCS/ESP button, ABS control unit fuse 1	97
3. ABS with EDL control unit, speed sensors, lateral acceleration sender, yaw rate sender	98
4. ABS with EDL control unit, ABS return flow pump, inlet and outlet valves, brake pressure sender	99
-1-	
5. ABS with EDL control unit, brake light switch	100
009 - Electric park and handbrake	101-104
1. Electric park and handbrake	101
2. Electric park and handbrake control unit, voltage supply	102
3. Electric park and handbrake control unit, parking brake motor - left, parking brake motor - right	103
4. Electric park and handbrake control unit, parking brake contact switch	104
010 - Multi-function steering wheel	105-109
1. Multi-function steering wheel	105
2. Steering column electronics control unit, voltage supply	106
3. Steering column electronics control unit, operating unit in steering wheel	107
4. Steering column electronics control unit, operating unit in steering wheel, horn plate	108
5. Steering column electronics control unit, operating unit in steering wheel, airbag igniter - driver's side, heated steering wheel	109
011 - Convenience systems	110-140
1. Convenience systems	110-113
2. Door control unit - driver's side, electric window thermo-fuse, card system for Italy (telepass)	114
3. Door control unit - driver's side, exterior door handle touch sensor - driver's side, driver's side aerial for entry and start authorisation, entry and start authorisation control unit	115
4. Door control unit - driver's side, exterior door handle central locking button - driver's side, front left exterior door handle illumination, central locking lock unit - driver's side	116
5. Door control unit - driver's side, electric window switches, electric window motor - driver's side	117
6. Door control unit - driver's side, mirror adjustment switch, mirror adjustment change-over switch, mirror with folding function - adjustment switch, interior monitor switch, alarm system off switch, interior monitor sender/receiver module 1	118
7. Door control unit - driver's side, mirror adjustment motors, heated exterior mirror - driver's side, automatic anti-dazzle exterior mirror - driver's side, entry light in exterior mirror	119
8. Door control unit - driver's side, central locking warning lamp -SAFE-, interior locking switch - driver's side, door warning lamp - driver's side, front left entry light	120
9. Door control unit - driver's side, fuel tank flap release button, rear lid remote release button, illumination of driver's door storage compartment	121
10. Door control unit - front passenger's side, electric window fuse - front passenger's side	122
11. Door control unit - front passenger's side, entry and start authorisation control unit, exterior door handle touch sensor - front passenger's side, front passenger's side aerial for entry and start authorisation	123
12. Door control unit - front passenger's side, central locking button, front right exterior door handle illumination, central locking lock unit - front passenger's side	124
13. Door control unit - front passenger's side, electric window switch in front passenger's door, interior locking switch - front passenger's side	125
14. Door control unit - front passenger's side, central locking warning lamp -SAFE- (front passenger), front right entry light, door warning lamp - front passenger's side, illumination of front passenger's door storage compartment	126
15. Door control unit - front passenger's side, mirror adjustment motors, heated exterior mirror - front passenger's side, entry light in exterior mirror - front passenger's side	127
16. Rear left door control unit, rear left exterior door handle touch sensor, entry and start authorisation - driver's side rear aerial	128
17. Rear left door control unit, rear left exterior door handle illumination, rear left exterior door handle central locking button, rear left central locking lock unit	129
18. Rear left door control unit, rear left entry light, rear left door warning lamp, rear left interior locking switch	130
19. Rear left door control unit, rear left electric window switch (in door), rear left ashtray light bulb, rear left electric window motor, illumination of rear left door storage compartment	131
20. Rear right door control unit, rear right exterior door handle touch sensor, entry and start authorisation - front passenger's side rear aerial	132
21. Rear right door control unit, rear right exterior door handle central locking button, rear right central locking lock unit	133
22. Rear right door control unit, rear right entry light, rear right door warning lamp, rear right interior locking switch, rear right door opening illumination, ambient lighting for rear right door	134
23. Rear right door control unit, rear right electric window motor, rear right electric window switch (in door), rear right ashtray light bulb, illumination of rear right door storage compartment	135
24. Convenience system central control unit, fuses	136
25. Convenience system central control unit, rear lid, tank filler flap locking motor, switch in	137

lock cylinder for rear lid anti-theft alarm system/central locking system, release button for rear lid lock cylinder, central locking motor - rear lid, alarm horn	
26. Convenience system central control unit, rear lid electric release motor, rear lid control unit, power latching system limit switch - luggage compartment, anti-theft/tilt system control unit, power latching control unit	138
27. Convenience system central control unit, luggage compartment light, boot lid light, rear left and rear right footwell illumination	139
28. Onboard power supply control unit, bonnet contact switch, left footwell light, centre console illumination, right footwell light	140
012 - Trailer coupling	141-145
1. Trailer coupling	141-142
2. Trailer detector control unit, fuses	143
3. Trailer detector control unit, trailer socket, brake light switch	144
4. Trailer detector control unit, trailer socket	145
013 - Electrical tyre pressure monitoring	146-148
1. Electrical tyre pressure monitoring	146
2. Tyre pressure monitor control unit, fuse	147
3. Tyre pressure monitor control unit, tyre pressure sensors, tyre pressure monitoring aerials	148
014 - Adaptive suspension	149-157
1. Adaptive suspension	149-151
2. Adaptive suspension control unit, adaptive suspension compressor relay, adaptive suspension fuse	152
3. Adaptive suspension control unit, adaptive suspension compressor motor, adaptive suspension pressure relief valve, compressor temperature sender - adaptive suspension system	153
4. Adaptive suspension control unit, valve block, adaptive suspension pressure sender	154
5. Adaptive suspension control unit, vehicle level senders	155
6. Adaptive suspension control unit, body acceleration senders	156
7. Adaptive suspension control unit, shock absorber damping adjustment valve	157
015 - Telephone	158-162
1. Telephone	158-159
2. Telephone transmitter and receiver unit, fuses	160
3. Telephone transmitter and receiver unit, microphone unit in front roof module	161
4. Telephone transmitter and receiver unit, aerial for Bluetooth, telephone handset, telephone aerial	162
016 - Ring circuit monitor diagnosis	163-165
1. Ring circuit monitor diagnosis	163
2. Ring circuit monitor diagnosis (Wake up)	164
3. Ring circuit monitor diagnosis (Wake up)	165
017 - Air conditioner	166-181
1. Air conditioner	166-168
2. Climatronic control unit, fuses	169
3. Climatronic control unit, coolant circulation pump, air conditioning system compressor regulating valve, heat regulation valve, air quality sensor	170
4. Climatronic control unit, sunlight penetration photo sensor, vent temperature sender - centre, illumination for dash panel vents - left and right, temperature sensor for front seat	171
5. Climatronic control unit, centre left and right vent sender, high pressure sender, illumination for vents	172
6. Climatronic control unit, heated windscreen, heated windscreen control unit, rear left and right footwell heater element	173
7. Climatronic control unit, fresh air intake duct temperature sensor, air recirculation flap control motor	174
8. Climatronic control unit, air flow flap control motor, defroster flap control motor, front left defroster/chest vent shut-off flap control motor	175
9. Climatronic control unit, left and right footwell flap control motor, front right defroster/chest vent shut-off flap control motor	176
10. Climatronic control unit, temperature flap control motor, central vents control motor, rear left vent warm/cold flap control motor	177
11. Climatronic control unit, central vents control motor - left and right, rear right vent warm/cold flap control motor	178
12. Climatronic control unit, hot air blower single fuse, fresh air blower, fresh air blower control unit, solar cells, humidity sender	179
13. Rear Climatronic operating and display unit, temperature sensors - rear left and rear right seat, rear seat occupied sensors	180
14. Rear Climatronic operating and display unit, rear left and rear right centre console temperature sensors, rear left and rear right vent control motor	181
018 - Electric steering column adjustment	182-185
1. Electric steering column adjustment	182

2. Onboard power supply control unit, fuses	183
3. Onboard power supply control unit, steering column adjustment motor (vertical), steering column adjustment motor (axial)	184
4. Steering column electronics control unit, steering column adjustment switch	185
019 - Electric sliding sunroof	186-190
1. Electric sliding sunroof	186-187
2. Sliding sunroof adjustment regulator, roof electronics control unit, sunroof button	188
3. Sliding sunroof adjustment control unit, sliding sunroof motor, wind deflector motor	189
4. Fresh air blower control unit, fresh air blower, solar operation control unit, solar cells, hot air blower single fuse	190
020 - Garage door opener	191-194
1. Garage door opener	191-192
2. Garage door operation control unit, onboard power supply control unit -2-	193
3. Roof electronics control unit, garage door operating unit, garage door opener buttons	194
021 - Auxiliary/additional heater	195-199
1. Auxiliary/additional heater	195-197
2. Additional heater control unit, fuses, heater coolant shut-off valve, metering pump	198
3. Additional heater control unit, glow plugs with flame monitor, combustion air blower, recirculating pump, auxiliary heating radio controlled receiver	199
022 - Navigation system	200-204
1. Navigation system	200-202
2. Navigation system with CD drive control unit, fuse, navigation aerial (GPS)	203
3. Microphone unit in front roof module, digital sound package control unit	204
023 - Headlights with gas discharge lamps (xenon, bi-xenon), cornering lights and automatic headlight range control	205-211
1. Headlights with gas discharge lamps (xenon, bi-xenon), cornering lights and automatic headlight range control	205-206
2. Onboard power supply control unit, fuses	207
3. Onboard power supply control unit, lighting switch, fog light switch, rear fog light switch, hazard warning lights button	208
4. Onboard power supply control unit, left gas discharge lamp control unit, power output module for left headlight, left side light bulb, front left turn signal bulb, left main beam bulb, left cornering light bulb	209
5. Onboard power supply control unit, right gas discharge lamp control unit, power output module for right headlight, right cornering light bulb, front right turn signal bulb, right side light bulb, right main beam bulb	210
6. Onboard power supply control unit, control unit for headlight range control, front left fog light bulb, front right fog light bulb	211
024 - Radio for digital sound package	212-219
1. Radio for digital sound package	212-214
2. Digital sound package control unit, fuses	215
3. Digital sound package control unit, microphone unit in front roof module, rear left mid-range/bass loudspeaker, rear left treble loudspeaker	216
4. Digital sound package control unit, rear right mid-range/bass loudspeaker, rear right treble loudspeaker, subwoofer, media player - position 1, CD changer	217
5. Digital sound package control unit, front left and front right mid-range/bass loudspeaker, front left and front right treble loudspeaker	218
6. Radio, aerial amplifier	219
025 - Radio for digital sound package (Bose)	220-228
1. Radio for digital sound package (Bose)	220-222
2. Digital sound package control unit (Bose), fuses	223
3. Digital sound package control unit, microphone unit in front roof module, front left and front right bass loudspeaker	224
4. Digital sound package control unit, subwoofer, loudspeaker in rear shelf	225
5. Digital sound package control unit, front left and front right mid-range/treble loudspeaker, centre mid-range/treble loudspeaker, media player - position 1, CD changer	226
6. Digital sound package control unit, rear left and rear right mid-range/bass loudspeaker, rear left and rear right treble loudspeaker	227
7. Radio, aerial amplifier	228
026 - Communication systems	229-248
1. Communication systems	229-232
2. Data bus diagnostic interface, fuses	233
3. Data bus diagnostic interface, control unit with display in dash panel insert	234
4. Front information control unit, multimedia operating unit, open/close button for front display	235
5. Front information control unit, front information display unit	236
6. Front information control unit. disolvav limit switches. open/close displav motor	237

7. Telephone transmitter and receiver unit, onboard power supply control unit -2-, fuses	238
8. Telephone transmitter and receiver unit, telephone handset, aerial for Bluetooth, telephone aerial	239
9. Digital sound package control unit, microphone unit in front roof module	240
10. Digital sound package control unit, front left and front right bass loudspeaker, loudspeaker in rear shelf, subwoofer	241
11. Digital sound package control unit, front left mid-range/treble loudspeaker, front right mid-range/treble loudspeaker, centre mid-range/treble loudspeaker, rear left mid-range/bass loudspeaker, rear left treble loudspeaker	242
12. Digital sound package control unit, rear right mid-range/bass loudspeaker, rear right treble loudspeaker, navigation system with CD drive control unit	243
13. Navigation system with CD drive control unit, navigation aerial (GPS), TV tuner	244
14. TV tuner, aerial amplifier	245
15. Digital radio, radio (communications box)	246
16. Radio, control unit for voice control	247
17. Media player, CD changer, CD ROM drive	248
027 - Electrically operated rear roller blind, rear left and rear right roller blind	249-257
1. Electrically operated rear roller blind, rear left and rear right roller blind	249-251
2. Rear roller blind, rear roller blind switch, rear roller blind motor	252
3. Roof electronics control unit, fuses	253
4. Roof electronics control unit, rear operating unit for roof module, rear switch for rear roller blind	254
5. Rear left door control unit, rear electric window thermo-fuse	255
6. Rear left door control unit, rear right door control unit, side roller blind control unit	256
7. Rear right door control unit, electric window fuse - front passenger's side	257
028 - Electric seat adjustment with memory function - driver's seat, Electrically heated driver's seat with seat ventilation	258-271
1. Electric seat adjustment with memory function - driver's seat, Electrically heated driver's seat with seat ventilation	258-260
2. Driver s seat, seat adjustment with memory control unit, fuses	261
3. Driver s seat, seat adjustment with memory control unit, seat adjustment buttons, head restraint adjustment switch, backrest adjustment button	262
4. Driver s seat, seat adjustment with memory control unit, buttons for lumbar support adjustment and seat belt height adjustment	263
5. Seat adjustment with memory control unit, seat height adjustment motor (driver s seat), seat longitudinal adjustment motor, seat rake adjustment motor (driver s seat)	264
6. Seat adjustment with memory control unit, head restraint adjustment motor (driver s seat), seat belt height adjustment motor, seat depth adjustment motor (driver)	265-271
029 - Electric seat adjustment with memory function - front passenger's seat, Electrically heated front passenger's seat with seat ventilation	272-285
1. Electric seat adjustment with memory function - front passenger's seat, Electrically heated front passenger's seat with seat ventilation	272-274
2. Front passenger's seat, seat adjustment with memory control unit - front passenger, fuses	275
3. Seat adjustment with memory control unit - front passenger, seat adjustment buttons, head restraint adjustment switch, backrest adjustment button	276
4. Seat adjustment with memory control unit - front passenger, buttons for lumbar support adjustment and seat belt height adjustment, adjustable front passenger's seat switch	277
5. Seat adjustment with memory control unit - front passenger, seat height adjustment motor - front passenger's seat, seat longitudinal adjustment motor, seat rake adjustment motor - front passenger's seat	278
6. Seat adjustment with memory control unit - front passenger, head restraint adjustment motor - front passenger's seat, seat belt height adjustment motor, seat depth adjustment motor - front passenger	279
7. Seat adjustment with memory control unit - front passenger, lumbar support longitudinal adjustment motor - front passenger's seat, upper backrest adjustment motor - front passenger, backrest adjustment motor - front passenger's seat, lumbar support height	280
8. Memory operating unit - front passenger's seat, emergency-off button - front passenger's side, door control unit - front passenger's side	281
9. Front passenger's seat ventilation control unit, fuses	282
10. Front passenger's seat ventilation control unit, front seat fan, front seat backrest fan	283
11. Front passenger's seat ventilation control unit, heated front passenger's seat cushion, front passenger's seat cushion lateral support heater, seat occupied sensor - front passenger's side, front passenger's seat temperature sensor	284
12. Heated front passenger's seat backrest, front passenger's seat backrest lateral support heater	285
030 - Heated front and rear seats	286-293
1. Heated front and rear seats	286-287

2. Seat heating, heated driver's seat regulator, heated front passenger's seat regulator	288
3. Seat heating for driver's seat	289
4. Seat heating for front passenger's seat	290
5. Rear seat heating, heated rear left and rear right seat switch with regulator	291
6. Heated rear left seat, heated rear left seat backrest, rear seat occupied sensor - driver's side	292
7. Heated rear right seat, heated rear right seat backrest, rear seat occupied sensor - front passenger's side	293
031 - Lumbar support adjustment for rear seats	294-297
1. Lumbar support adjustment for rear seats	294-295
2. Lumbar support adjustment switch - rear left seat, lumbar support longitudinal adjustment motor - rear left seat, lumbar support adjustment motor - rear left seat	296
3. Lumbar support adjustment switch - rear right seat, lumbar support longitudinal adjustment motor - rear right seat, lumbar support height adjustment motor - rear right seat	297
032 - Electric seat adjustment without memory function - driver's seat, Electric seat adjustment without memory function - front passenger's seat	298-304
1. Electric seat adjustment without memory function - driver's seat, Electric seat adjustment without memory function - front passenger's seat	298-300
2. Seat adjustment without memory function, seat adjustment for driver's seat, seat adjustment motors	301
3. Lumbar support adjustment switch - driver's seat, lumbar support longitudinal adjustment motor - driver's seat, lumbar support height adjustment motor - driver's seat, footwell illumination, rear left	302
4. Seat adjustment without memory function, seat adjustment for front passenger's seat, seat adjustment motors	303
5. Lumbar support adjustment switch - front passenger's seat, lumbar support longitudinal adjustment motor, lumbar support height adjustment motor, footwell illumination, rear right	304
033 - Adaptive cruise control (ACC)	305-307
1. Adaptive cruise control (ACC)	305-306
2. Control unit for adaptive cruise control, sensor heater for adaptive cruise control system	307
034 - Infotainment data bus (Most-Ring)	308-310
1. Infotainment data bus (Most-Ring)	308
2. Infotainment data bus	309
3. Infotainment data bus	310
035 - Electric seat adjustment and lumbar support adjustment for rear seats with memory function	311-321
1. Electric seat adjustment and lumbar support adjustment for rear seats with memory function	311-312
2. Rear seat adjustment with memory control unit, seat adjustment thermo-fuse	313
3. Rear seat adjustment with memory control unit, rear left seat rake adjustment button, rear left seat longitudinal adjustment button	314
4. Rear seat adjustment with memory control unit, rear left seat lumbar support height adjustment button, rear left seat lumbar support longitudinal adjustment button, rear left seat massage button	315
5. Rear seat adjustment with memory control unit, rear left seat longitudinal adjustment motor, rear left seat rake adjustment motor, upper backrest adjustment motor	316
6. Rear seat adjustment with memory control unit, rear left seat lumbar support longitudinal adjustment motor, rear left seat lumbar support height adjustment motor	317
7. Rear seat adjustment with memory control unit, rear right seat rake adjustment button, rear right seat longitudinal adjustment button	318
8. Rear seat adjustment with memory control unit, rear right seat lumbar support height adjustment button, rear right seat lumbar support longitudinal adjustment button, rear right seat massage button	319
9. Rear seat adjustment with memory control unit, rear right seat longitudinal adjustment motor, rear right seat rake adjustment motor, upper backrest adjustment motor	320
10. Rear seat adjustment with memory control unit, rear right seat lumbar support longitudinal adjustment motor, rear right seat lumbar support height adjustment motor	321
036 - Rear seats - seat ventilation, seat heating	322-328
1. Rear seats - seat ventilation, seat heating	322-323
2. Driver's side rear seat ventilation control unit	324
3. Driver's side rear seat ventilation control unit, rear left seat fan	325
4. Driver's side rear seat ventilation control unit, rear left seat temperature sensor, rear seat occupied sensor - driver's side, heated rear left seat	326
5. Front passenger's side rear seat ventilation control unit, rear right seat fan	327
6. Front passenger's side rear seat ventilation control unit, rear right seat temperature sensor, rear seat occupied sensor - front passenger's side, heated rear right seat	328
037 - Automatic gearbox for front-wheel drive 01J, Automatic gearbox for quattro four-wheel drive 01T	329-334
1. Automatic gearbox for front-wheel drive 01J, Automatic gearbox for quattro four-wheel drive 01T	329-331
2. Automatic gearbox control unit. fuses	332

3. Automatic gearbox control unit	333
4. Automatic gearbox control unit, Tiptronic switch, selector lever lock solenoid, gear selector position P switch	334
038 - Audi A8 3.0 litre fuel injection engine (162 kW/160 kW - Motronic - 6-cylinder), engine codes ASN/BBJ	335-354
1. Audi A8 3.0 litre fuel injection engine (162 kW/160 kW - Motronic - 6-cylinder), engine codes ASN/BBJ	335-339
2. Battery, energy management control unit, battery cut-off relay	340
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	341
4. Engine control unit, Motronic current supply relay	342
5. Engine control unit, injectors for cylinders 1 - 4, ignition coils for cylinders 1 - 4	343
6. Engine control unit, injectors for cylinders 5 and 6, ignition coils for cylinders 5 and 6, throttle valve module, accelerator pedal position senders	344
7. Engine control unit, knock sensor 1, knock sensor 2, engine speed sender	345
8. Engine control unit, Hall senders, camshaft timing adjustment valves	346
9. Engine control unit, lambda probe, lambda probe 2	347
10. Engine control unit, lambda probes downstream of catalytic converter, air mass meter, intake manifold change-over valve, secondary air inlet valve, activated charcoal filter system solenoid valve 1 (pulsed)	348
11. Engine control unit, electro/hydraulic engine mounting solenoid valves, gearbox mounting valves, secondary air pump motor, secondary air pump relay, high pressure sender	349
12. Engine control unit, brake servo relay, vacuum pump for brakes, brake servo pressure sensor	350
13. Engine control unit, brake light switch, kick-down switch, cruise control system brake pedal switch, cruise control system switch	351
14. Engine control unit, radiator fan, radiator fan -2-, continued coolant circulation relay, continued coolant circulation pump	352
15. Fuel pump relay, electric fuel pump 2 relay, control unit with display in dash panel insert	353
16. Control unit with display in dash panel insert, fuel gauge, fuel pump, fuel gauge senders, oil pressure warning lamp	354
039 - Audi A8 4.0 litre turbo-diesel engine (202 kW - 8-cylinder), engine code ASE	355-377
1. Audi A8 4.0 litre turbo-diesel engine (202 kW - 8-cylinder), engine code ASE	355-360
2. Battery, energy management control unit, battery cut-off relay	361
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	362
4. Relay for glow plugs, glow plugs	363
5. Diesel direct injection system control unit, terminal 30 voltage supply relay	364
6. Diesel direct injection system control unit, fuel pressure regulating valve, water spray protection flap valve in intake manifold, fuel metering valve	365
7. Diesel direct injection system control unit, coolant temperature sender, oil temperature sender, fuel temperature sender, air mass meter, engine speed sender, Hall sender, fuel pressure sender, oil pressure switch	366
8. Diesel direct injection system control unit, brake light switch	367
9. Diesel direct injection system control unit, injectors for cylinders 1, 4, 6 and 7, fuses	368
10. Diesel direct injection system control unit, throttle valve module, turbocharger 1 control unit, intake manifold flap motor	369
11. Diesel direct injection system control unit, exhaust gas recirculation valve, kick-down switch, accelerator pedal position senders, right electro/hydraulic engine mounting solenoid valve, torque rod valve, charge air pressure sender, intake air temperature	370
12. Diesel direct injection system control unit, radiator fan, exhaust gas temperature sender -1-	371
13. Diesel direct injection system control unit 2, injectors 2, 3, 5 and 8, exhaust gas recirculation valve -2-, left electro/hydraulic engine mounting solenoid valve, intake manifold flap 2 motor	372
14. Diesel direct injection system control unit 2, throttle valve module 2, turbocharger 2 control unit	373
15. Diesel direct injection system control unit 2, air mass meter 2, exhaust gas temperature sender -1-, bank 2	374
16. Fuel cooling pump relay, high pressure sender, fuel cooling pump, heater element (crankcase breather), coolant shut-off valve	375
17. Control unit with display in dash panel insert, fuel pump relay	376
18. Control unit with display in dash panel insert, fuel gauge, fuel pump, fuel gauge senders, oil pressure warning lamp	377
040 - Basic equipment	378-417
1. Basic equipment	378-382
2. Earth connections	383
3. Earth connections	384
4. Battery, energy management control unit, battery cut-off relay, fuses	385
5. Terminal 15 voltage supply relay, terminal 75 voltage supply relay 1	386

6. Steering column electronics control unit, steering column voltage supply	387
7. Turn signal switch, intermittent wiper switch, horn plate, steering angle sender, steering column electronics control unit	388
8. Steering column electronics control unit, cruise control system switch	389
9. Entry and start authorisation control unit, entry and start authorisation switch, steering column lock control element, start/stop motor button	390
10. Onboard supply control unit, light switch, hazard warning lights button, operating unit in front of centre console	391
11. Onboard supply control unit, power output module for left headlight, left side light bulb, front left turn signal bulb, left side mounted turn signal bulb, left headlight dipped beam bulb, left headlight main beam bulb, left headlight range control motor	392
12. Onboard supply control unit, power output module for right headlight, right side light bulb, front right turn signal bulb, right side mounted turn signal bulb, right headlight dipped beam bulb, right headlight main beam bulb, right headlight range control motor	393
13. Onboard supply control unit, left and right fog light bulb, headlight range control, control unit, treble tone horn, bass tone horn	394
14. Voltage supply, onboard supply control unit, fuses	395
15. Convenience system central control unit	396
16. Convenience system central control unit, left tail light bulb, rear left turn signal bulb, left brake light bulb, left reversing light bulb, rear left fog light bulb	397
17. Convenience system central control unit, right tail light bulb, right brake light bulb, rear right turn signal bulb, right reversing light bulb, rear right fog light bulb	398
18. Convenience system central control unit, number plate light, heated rear window, release button for rear lid lock cylinder	399
19. Convenience system central control unit, brake light switch, high level brake light bulb	400
20. Convenience system central control unit, luggage compartment light, rear lid light, rear footwell illumination	401
21. Wiper motor control unit, windscreen wiper motor, washer pump, diagnostic connector, rain and light detector sensor	402
22. Onboard supply control unit 2, servotronic	403
23. Onboard supply control unit 2, headlight washer system pump, left and right headlight washer system pop-up washer jet motor, headlight washer system relay, washer fluid heater relay, washer jet heater element	404
24. Display control unit in dash panel insert, front brake pad wear sender, oil pressure switch	405
25. Display control unit in dash panel insert, oil level and oil temperature sender, brake fluid level warning contact, windscreen washer fluid level sender/water level only, coolant shortage indicator switch, ambient temperature sensor	406
26. Display control unit in dash panel insert, radio controlled clock, electromechanical parking brake control unit, radio controlled clock receiver, data bus diagnostic interface	407
27. Display control unit in dash panel insert, data bus diagnostic interface, front information display and operating unit control unit, storage compartment illumination bulb	408
28. Display control unit in dash panel insert, fuel gauge sender, fuel pump (pre-supply pump), fuel pump, fuel gauge	409
29. Fuel pump relay, electric fuel pump 2 relay	410
30. Roof electronics control unit, illuminated vanity mirror, interior monitor send and receive module 1, automatic anti-dazzle interior mirror, light sensor, humidity sender, interior light switch	411
31. Roof electronics control unit, interior light, front interior light button, reading light button	412
32. Roof electronics control unit, rear operating unit for roof module, rear switch for rear roller blind	413
33. Rear operating unit for roof module, rear reading light, rear interior light	414
34. Rear operating unit for roof module, rear illuminated vanity mirror, glove compartment light, left and right footwell light	415
35. Storage compartment illumination rear centre console, centre armrest illumination bulb, 12 V socket	416
36. Cigarette lighter, rear cigarette lighter	417
041 - Audi A8 4.2 litre fuel injection engine (246 kW - Motronic - 8-cylinder), engine code BFM Audi	418-438
A8 3.7 litre fuel injection engine (206 kW - Motronic - 8-cylinder), engine code BFL	
1. Audi A8 4.2 litre fuel injection engine (246 kW - Motronic - 8-cylinder), engine code BFM Audi A8	418-422
3.7 litre fuel injection engine (206 kW - Motronic - 8-cylinder), engine code BFL	
2. Battery, energy management control unit, battery cut-off relay	423
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	424
4. Engine control unit, Motronic current supply relay	425
5. Engine control unit, ignition coils, injectors for cylinders 1 - 4	426
6. Engine control unit, ignition coils, injectors for cylinders 5 - 8	427
7. Engine control unit, throttle valve module, accelerator pedal position senders, kick-down switch	428

8. Engine control unit, knock sensor 1, engine speed sender, coolant temperature sender	429
9. Engine control unit, inlet camshaft control valve 1, Hall senders, brake light switch, torque rod valve	430
10. Engine control unit, air mass meter, lambda probe, lambda probe 2	431
11. Engine control unit, intake manifold change-over valve, intake manifold change-over valve 2, variable intake manifold change-over valve, activated charcoal filter system solenoid valve 1 (pulsed), electro/hydraulic engine mounting solenoid valve - left, l	432
12. Engine control unit, secondary air pump relay, secondary air pump motor, high pressure sender, secondary air inlet valve	433
13. Engine control unit, radiator fan, radiator fan -2-, fuel system diagnostic pump	434
14. Engine control unit, fuse	435
15. Fuel pump relay, electric fuel pump 2 relay, fuel pump (pre-supply pump), fuel gauge senders, control unit with display in dash panel insert	436
16. Control unit with display in dash panel insert, fuel gauge, fuel pump, fuel gauge senders, oil pressure warning lamp	437
17. Control unit with display in dash panel insert, coolant shortage indicator switch, oil level/oil temperature sender	438
042 - Audi A8 4.0 litre turbo-diesel engine (202 kW - 8-cylinder), engine code ASE	439-462
1. Audi A8 4.0 litre turbo-diesel engine (202 kW - 8-cylinder), engine code ASE	439-444
2. Battery, energy management control unit, battery cut-off relay	445
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	446
4. Relay for glow plugs, glow plugs	447
5. Diesel direct injection system control unit, terminal 30 voltage supply relay	448
6. Diesel direct injection system control unit, fuel pressure regulating valve, water spray protection flap valve in intake manifold, fuel metering valve	449
7. Diesel direct injection system control unit, coolant temperature sender, oil temperature sender, fuel temperature sender, air mass meter, engine speed sender, Hall sender, fuel pressure sender, oil pressure switch	450
8. Diesel direct injection system control unit, brake light switch	451
9. Diesel direct injection system control unit, injectors for cylinders 1, 4, 6 and 7, fuses	452
10. Diesel direct injection system control unit, throttle valve module, turbocharger 1 control unit, intake manifold flap motor	453
11. Diesel direct injection system control unit, exhaust gas recirculation valve, kick-down switch, accelerator pedal position senders, right electro/hydraulic engine mounting solenoid valve, torque rod valve, charge air pressure sender, intake air temperature	454
12. Diesel direct injection system control unit, radiator fan, exhaust gas temperature sender -1-	455
13. Diesel direct injection system control unit 2, injectors 2, 3, 5 and 8, exhaust gas recirculation valve -2-, left electro/hydraulic engine mounting solenoid valve, intake manifold flap 2 motor	456
14. Diesel direct injection system control unit 2, throttle valve module 2, turbocharger 2 control unit	457
15. Diesel direct injection system control unit 2, air mass meter 2, exhaust gas temperature sender -1-, bank 2	458
16. Fuel cooling pump relay, high pressure sender, fuel cooling pump, heater element (crankcase breather), coolant shut-off valve	459
17. Control unit with display in dash panel insert, fuel pump relay	460
18. Control unit with display in dash panel insert, fuel gauge, fuel pump, fuel gauge senders, oil pressure warning lamp	461
19. Control unit with display in dash panel insert, coolant shortage indicator switch, oil level/oil temperature sender	462
043 - Audi A8 3.0 litre fuel injection engine (162 kW / 160 kW - Motronic - 6-cylinder), engine codes ASN/BBJ	463-483
1. Audi A8 3.0 litre fuel injection engine (162 kW / 160 kW - Motronic - 6-cylinder), engine codes ASN/BBJ	463-467
2. Battery, energy management control unit, battery cut-off relay	468
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	469
4. Engine control unit, Motronic current supply relay	470
5. Engine control unit, injectors for cylinders 1 - 4, ignition coils for cylinders 1 - 4	471
6. Engine control unit, injectors for cylinders 5 and 6, ignition coils for cylinders 5 and 6, throttle valve module, accelerator pedal position senders	472
7. Engine control unit, knock sensor 1, knock sensor 2, engine speed sender	473
8. Engine control unit, Hall senders, camshaft timing adjustment valves	474
9. Engine control unit, lambda probe, lambda probe 2	475
10. Engine control unit, lambda probes downstream of catalytic converter, air mass meter, intake manifold change-over valve, secondary air inlet valve, activated charcoal filter system solenoid valve 1 (pulsed)	476

11. Engine control unit, electro/hydraulic engine mounting solenoid valves, gearbox mounting valves, secondary air pump motor, secondary air pump relay, high pressure sender	477
12. Engine control unit, brake servo relay, vacuum pump for brakes, brake servo pressure sensor	478
13. Engine control unit, brake light switch, kick-down switch, cruise control system brake pedal switch, cruise control system switch	479
14. Engine control unit, radiator fan, radiator fan 2, continued coolant circulation relay, continued coolant circulation pump	480
15. Fuel pump relay, electric fuel pump 2 relay, control unit with display in dash panel insert	481
16. Control unit with display in dash panel insert, fuel gauge, fuel pump, fuel gauge senders, oil pressure warning lamp	482
17. Control unit with display in dash panel insert, oil level/oil temperature sender, coolant shortage indicator switch	483
044 - Anti-lock brake system 5.7 (ABS) with traction control system (ASR/TCS) and electronic stabilisation program (ESP)	484-491
1. Anti-lock brake system 5.7 (ABS) with traction control system (ASR/TCS) and electronic stabilisation program (ESP)	484-486
2. ABS with EDL control unit, ABS control unit fuse 1	487
3. ABS with EDL control unit, TCS/ESP button, operating unit in front of centre console	488
4. ABS with EDL control unit, speed sensors, lateral acceleration sender, yaw rate sender	489
5. ABS with EDL control unit, ABS return flow pump, inlet and outlet valves, brake pressure sender	490
-1-	
6. ABS with EDL control unit, brake light switch	491
045 - Entry and start authorisation, entry and start authorisation with Kessy	492-501
1. Entry and start authorisation, entry and start authorisation with Kessy	492-494
2. Entry and start authorisation control unit	495
3. Entry and start authorisation control unit, entry and start authorisation switch, steering column lock control element, entry and start authorisation button, driver identification control unit	496
4. Entry and start authorisation control unit, driver door exterior handle touch sensor, driver side aerial, door control unit	497
5. Entry and start authorisation control unit, front passenger door exterior handle touch sensor, front passenger side aerial, door control unit	498
6. Entry and start authorisation control unit, aerials	499
7. Entry and start authorisation control unit	500
8. Entry and start authorisation control unit, starter motor relay, starter motor relay 2	501
046 - Electric park and handbrake	502-505
1. Electric park and handbrake	502
2. Electric park and handbrake control unit, voltage supply	503
3. Electric park and handbrake control unit, left parking brake motor, right parking brake motor	504
4. Electric park and handbrake control unit, parking brake pressure switch	505
047 - Convenience system	506-540
1. Convenience system	506-509
2. Driver door control unit, window regulator thermal fuse, Card system (Telepass) Italy	510
3. Driver door control unit, driver door exterior handle touch sensor, driver side aerial for entry and start authorisation, entry and start authorisation control unit	511
4. Driver door control unit, front left door exterior handle illumination bulb, driver side central locking lock unit, Driver side contact switch in lock cylinder	512
5. Driver door control unit, window regulator switch, driver side window regulator motor, operating unit for window regulator in driver door	513
6. Driver door control unit, childproof lock switch, power latching control unit for driver door, driver door power latching motor	514
7. Driver door control unit, mirror adjustment switch, mirror adjustment change-over switch, adjustment switch for mirror with fold-in feature, interior monitor deactivation switch, alarm system off switch, interior monitor send and receive module 1	515
8. Driver door control unit, driver side mirror adjustment motors, driver side heated exterior mirror, driver side automatic anti-dazzle exterior mirror	516
9. Driver door control unit, central locking deadlock function warning lamp, driver side interior locking switch, driver door control unit, front left entry light	517
10. Driver door control unit, fuel tank flap release button, rear lid remote release button, driver door storage compartment illumination bulb	518
11. Front passenger door control unit, front passenger side window regulator fuse, front passenger door power latching motor, power latching control unit for front passenger door	519
12. Front passenger door control unit, entry and start authorisation control unit, front passenger door exterior handle touch sensor, front passenger side aerial for entry and start authorisation	520
13. Front passenger door control unit, Front right door exterior handle illumination bulb, Front passenger side central locking lock unit, Front passenger door power latching system contact switch	521
14. Front passenger door control unit, window regulator switch in front passenger door, front	522

passenger side interior locking switch	
15. Front passenger door control unit, Central locking deadlock function warning lamp on front passenger side, Front right entry light, Front passenger side door warning lamp, Front passenger door storage compartment illumination bulb	523
16. Front passenger door control unit, mirror adjustment motor, heated exterior mirror on front passenger side, front passenger side entry light in exterior mirror	524
17. Rear left door control unit, rear left door exterior handle touch sensor, driver side rear entry and start authorisation aerial, power latching control unit for rear left door, rear left door power latching motor, rear left side roller blind control unit	525
18. Rear left door control unit, Rear left exterior door handle illumination bulb, Rear left central locking lock unit, Rear left door exterior handle switch	526
19. Rear left door control unit, rear left central locking lock unit, rear left door power latching system contact switch	527
20. Rear left door control unit, rear left entry light, rear left door warning lamp, rear left interior locking switch	528
21. Rear left door control unit, rear left window regulator switch (in door), rear left ashtray illumination bulb, rear left window regulator motor, rear left door storage compartment illumination bulb	529
22. Rear right door control unit, rear right door exterior handle touch sensor, front passenger side rear entry and start authorisation aerial, power latching control unit for rear right door, rear right door power latching motor, rear right side roller blind control unit	530
23. Rear right door control unit, Rear right central locking lock unit, Rear right door exterior handle switch, Rear right exterior door handle illumination bulb	531
24. Rear right door control unit, rear right central locking lock unit	532
25. Rear right door control unit, Rear right entry light, Rear right door warning lamp, Rear right interior locking switch, Rear right door opener illumination, Rear right door ambient lighting bulb	533
26. Rear right door control unit, rear right window regulator motor, rear right window regulator switch in door, rear right ashtray illumination bulb, rear right door storage compartment illumination bulb	534
27. Convenience system central control unit, fuses	535
28. Convenience system central control unit, rear lid, tank filler flap locking motor, switch in lock cylinder for rear lid, anti-theft alarm system, central locking system, release button for rear lid lock cylinder, rear lid central locking motor, alarm horn	536
29. Convenience system central control unit, rear lid electric release motor, rear lid control unit, power latching system limit switch, luggage compartment locked, anti-theft and tilt system control unit, power latching control unit	537
30. Convenience system central control unit, luggage compartment light, rear left and right lid light, rear footwell illumination	538
31. Rear switch for rear roller blind, rear roller blind motor	539
32. Onboard supply control unit, bonnet contact switch, left footwell light, right footwell light	540
048 - Airbags	541-549
1. Airbags	541-542
2. Airbag control unit, battery cut-off relay	543
3. Airbag control unit, airbag igniter (driver's side), airbag igniter 1 (front passenger's side)	544
4. Airbag control unit, side airbags	545
5. Airbag control unit, curtain airbags, front belt tensioners	546
6. Airbag control unit, rear belt tensioners, belt switches	547
7. Airbag control unit, side airbag crash sensors, front airbag crash sensors	548
8. Airbag control unit, airbag disabled warning lamp (front passenger's side), airbag disabling key switch (front passenger's side)	549
049 - Ultra-sonic parking aid, front and rear	550-554
1. Ultra-sonic parking aid, front and rear	550-551
2. Parking aid control unit, parking aid button, parking aid warning lamp	552
3. Parking aid control unit, front parking aid senders, parking aid warning buzzer	553
4. Parking aid control unit, rear parking aid senders	554
050 - Multi-function steering wheel	555-560
1. Multi-function steering wheel	555-556
2. Steering column electronics control unit, voltage supply	557
3. Steering column electronics control unit, operating unit in steering wheel	558
4. Steering column electronics control unit, operating unit in steering wheel, horn plate	559
5. Steering column electronics control unit, operating unit in steering wheel, airbag igniters - driver's side, heated steering wheel	560
051 - Automatic gearbox 09E, 09L	561-567
1. Automatic gearbox 09E, 09L	561-562
2. Automatic gearbox control unit, fuses	563
3. Automatic gearbox control unit, coolant shut-off valve	564

4. Automatic gearbox control unit, Tiptronic switch, selector lever lock solenoid	565
5. Automatic gearbox control unit	566
6. Automatic gearbox control unit	567
052 - CAN bus separating connector	568-574
1. CAN bus separating connector	568
2. CAN separating connector left	569
3. CAN separating connector left	570
4. CAN separating connector left	571
5. CAN separating connector right	572
6. CAN separating connector right	573
7. CAN separating connector right	574
053 - Automatic gearbox front-wheel drive 01J, automatic gearbox quattro four-wheel drive 01T	575-578
1. Automatic gearbox front-wheel drive 01J, automatic gearbox quattro four-wheel drive 01T	575
2. Automatic gearbox control unit, fuses	576
3. Automatic gearbox control unit	577
4. Automatic gearbox control unit, Tiptronic switch, selector lever lock solenoid, gear selector position P switch	578
054 - Adaptive suspension	579-587
1. Adaptive suspension	579-581
2. Adaptive suspension control unit, adaptive suspension compressor relay, levelling system fuse	582
3. Adaptive suspension control unit, adaptive suspension compressor motor, adaptive suspension drain valve, compressor temperature sender for adaptive suspension system	583
4. Adaptive suspension control unit, valve block, adaptive suspension pressure sender	584
5. Adaptive suspension control unit, vehicle inclination sender	585
6. Adaptive suspension control unit, body acceleration sender	586
7. Adaptive suspension control unit, shock absorber damper adjustment valve	587
055 - Electrical tyre pressure monitoring	588-590
1. Electrical tyre pressure monitoring	588
2. Tyre pressure monitor control unit, fuse	589
3. Tyre pressure monitor control unit, tyre pressure sensors, tyre pressure monitor aerials	590
056 - Trailer coupling	591-595
1. Trailer coupling	591-592
2. Trailer detector control unit, fuses	593
3. Trailer detector control unit, trailer socket, brake light switch	594
4. Trailer detector control unit, trailer socket	595
057 - Ringbreak diagnosis	596-598
1. Ringbreak diagnosis	596
2. Ringbreak diagnosis (Wake up)	597
3. Ringbreak diagnosis (Wake up)	598
058 - Air conditioning system	599-613
1. Air conditioning system	599-600
2. Climatronic control unit, fuses	601
3. Climatronic control unit, coolant circulation pump, air conditioning system compressor regulating valve, heat regulation valve, air quality sensor	602
4. Climatronic control unit, sunlight penetration photosensor, centre vent temperature sender, dash panel left and right vent illumination bulb, front seat temperature sender	603
5. Climatronic control unit, centre left and right vent sensor, high pressure sender, vent illumination bulb	604
6. Climatronic control unit, heated windscreen, heated windscreen control unit, rear left and right footwell heater element	605
7. Climatronic control unit, fresh air intake duct temperature sensor, air recirculation flap control motor, dash panel temperature sensor, temperature sensor blower	606
8. Climatronic control unit, air flow flap control motor, defroster flap control motor, front left defrost and chest vent shut-off flap control motor	607
9. Climatronic control unit, left and right footwell flap control motor, front right defrost and chest vent shut-off flap control motor	608
10. Climatronic control unit, temperature flap control motor, central vents control motor, rear left vent warm air and cold air flap control motor	609
11. Climatronic control unit, left and right central vents control motor, rear right vent warm air and cold flap air control motor	610
12. Climatronic control unit, fresh air blower, fresh air blower control unit, solar cells, humidity sender	611
13. Rear Climatronic operating and display unit, rear left and right seat temperature sensor, seat occupied sensors, rear	612
14. Rear Climatronic operating and display unit, rear left and right centre console temperature sensor, rear left and right vent control motor	613

059 - Telephone	614-618
1. Telephone	614-615
2. Telephone transmitter and receiver unit, fuses	616
3. Telephone transmitter and receiver unit, microphone unit in front roof module	617
4. Telephone transmitter and receiver unit, aerial for Bluetooth, telephone handset, telephone aerial	618
060 - Auxiliary/additional heater	619-623
1. Auxiliary/additional heater	619-621
2. Additional heater control unit, fuses, heater coolant shut-off valve, metering pump	622
3. Additional heater control unit, glow plugs with flame monitor, combustion air blower, circulation pump, auxiliary heating radio controlled receiver	623
061 - Garage door opener	624-627
1. Garage door opener	624-625
2. Garage door operation control unit, onboard supply control unit 2	626
3. Garage door operation control unit, garage door operating unit, garage door opener button	627
062 - Electric sliding sunroof	628-631
1. Electric sliding sunroof	628
2. Sliding sunroof adjustment regulator, roof electronics control unit, sunroof button	629
3. Sliding sunroof adjustment control unit, sliding sunroof motor, wind deflector motor	630
4. Fresh air blower control unit, fresh air blower, solar operation control unit, solar cells	631
063 - Electric steering column adjustment	632-636
1. Electric steering column adjustment	632-633
2. Onboard power supply control unit, fuses	634
3. Onboard power supply control unit, steering column vertical adjustment motor, steering column axial adjustment motor	635
4. Steering column electronics control unit, steering column adjustment switch	636
064 - Adaptive cruise control (ACC)	637-639
1. Adaptive cruise control (ACC)	637-638
2. Adaptive cruise control unit, sensor heater for adaptive cruise control system	639
065 - Headlights with gas discharge lamps (xenon, bi-xenon), cornering lights and automatic headlight range control	640-646
1. Headlights with gas discharge lamps (xenon, bi-xenon), cornering lights and automatic headlight range control	640-641
2. Onboard power supply control unit, fuses	642
3. Onboard power supply control unit, lighting switch, fog light switch, rear fog light switch, hazard warning lights button	643
4. Onboard power supply control unit, left gas discharge lamp control unit, power output module for left headlight, left side light bulb, front left turn signal bulb, left main beam bulb, left cornering light bulb	644
5. Onboard power supply control unit, right gas discharge lamp control unit, power output module for right headlight, right cornering light bulb, front right turn signal bulb, right side light bulb, right main beam bulb	645
6. Onboard power supply control unit, control unit for headlight range control, front left fog light bulb, front right fog light bulb	646
066 - Navigation system	647-651
1. Navigation system	647-649
2. Navigation system with CD drive control unit, fuse, navigation aerial (GPS), telephone aerial	650
3. Microphone unit in front roof module, digital sound package control unit	651
067 - Radio 'digital sound package'	652-659
1. Radio 'digital sound package'	652-654
2. Digital sound package control unit, fuses	655
3. Digital sound package control unit, microphone unit in front roof module, rear left mid-range and bass loudspeaker, rear left treble loudspeaker	656
4. Digital sound package control unit, rear right mid-range and bass loudspeaker, rear right treble loudspeaker, subwoofer in rear shelf, media player in position 1, CD changer	657
5. Digital sound package control unit, front left and left mid-range and bass loudspeaker, front left and right treble loudspeaker	658
6. Radio, aerial amplifier	659
068 - Radio digital sound package Bose	660-668
1. Radio digital sound package Bose	660-662
2. Digital sound package control unit (Bose), fuses	663
3. Digital sound package control unit, microphone unit in front roof module	664
4. Digital sound package control unit, subwoofer in rear shelf, loudspeaker in rear shelf, front left and right bass loudspeaker	665
5. Digital sound package control unit, front left and right bass loudspeaker, centre mid-range and treble loudspeaker. media player in position 1. CD changer	666

6. Digital sound package control unit, rear left and left mid-range and bass loudspeaker, rear left and right treble loudspeaker	667
7. Radio, aerial amplifier	668
069 - Communication systems	669-688
1. Communication systems	669-672
2. Data bus diagnostic interface, fuses	673
3. Data bus diagnostic interface, control unit with display in dash panel insert	674
4. Front information control unit, multimedia operating unit, open/close button for front display	675
5. Front information control unit, front information display unit	676
6. Front information control unit, display limit switches, open/close display motor	677
7. Telephone transmitter and receiver unit, onboard power supply control unit -2-, fuses	678
8. Telephone transmitter and receiver unit, telephone handset, aerial for Bluetooth, telephone aerial	679
9. Digital sound package control unit, microphone unit in front roof module	680
10. Digital sound package control unit, front left and front right bass loudspeaker, loudspeaker in rear shelf, subwoofer	681
11. Digital sound package control unit, front left mid-range/treble loudspeaker, front right mid-range/treble loudspeaker, centre mid-range/treble loudspeaker, rear left mid-range/bass loudspeaker, rear left treble loudspeaker	682
12. Digital sound package control unit, rear right mid-range/bass loudspeaker, rear right treble loudspeaker, navigation system with CD drive control unit	683
13. Navigation system with CD drive control unit, navigation aerial (GPS), TV tuner, fuses - luggage compartment, left	684
14. TV tuner, aerial amplifier	685
15. Digital radio, radio (communications box)	686
16. Radio, control unit for voice control	687
17. Media player, CD changer, CD ROM drive	688
070 - Electrically operated rear roller blind, rear left and rear right roller blind	689-698
1. Electrically operated rear roller blind, rear left and rear right roller blind	689-691
2. Rear roller blind, rear roller blind switch	692
3. Rear roller blind, rear roller blind motor, fuses	693
4. Roof electronics control unit, fuses	694
5. Roof electronics control unit, rear operating unit for roof module, rear switch for rear roller blind	695
6. Rear left door control unit, rear electric window thermo-fuse	696
7. Rear left door control unit, rear right door control unit, side roller blind control unit	697
8. Rear right door control unit, electric window fuse (front passenger s side)	698
071 - Provision for mobile telephone	699-704
1. Provision for mobile telephone	699-700
2. Mobile telephone operating electronics control unit, fuses	701
3. Mobile telephone operating electronics control unit, microphone unit in front roof module, aerial for Bluetooth	702
4. Mobile telephone operating electronics control unit, mobile telephone	703
5. Aerial amplifier for mobile telephone (compensor), telephone aerial	704
072 - Audi A8 6.0 I - Fuel injection engine (331 kW - Motronic - 12-cylinder) engine code BHT	705-735
1. Audi A8 6.0 I - Fuel injection engine (331 kW - Motronic - 12-cylinder) engine code BHT	705-710
2. Battery, energy management control unit, battery cut-off relay, fuses	711
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	712
4. Engine control unit, Motronic current supply relay	713
5. Engine control unit, ignition coils 1 - 4 with output stage, injector, cylinder 1 - 4	714
6. Engine control unit, ignition coils 5 and 6 with output stage, injectors cylinder 5 and 6	715
7. Engine control unit, knock sensor 1, knock sensor 2, coolant temperature display sender, engine speed sender	716
8. Engine control unit, Hall sender, Hall sender 3, fuses	717
9. Engine control unit, accelerator position sender, throttle valve module, kickdown switch	718
10. Engine control unit, air mass meter, intake air temperature sender, inlet camshaft control valve 1, exhaust camshaft control valve 1, torque rod valve, right electrohydraulic engine mounting solenoid valve, map-controlled engine cooling system thermostats, activated charcoal filter system solenoid valve 1 (pulsed)	719
11. Engine control unit, lambda probe, lambda probe after catalytic converter, exhaust flap valve	720
12. Engine control unit, lambda probe 2, lambda probe 2 after catalytic converter	721
13. Engine control unit, brake light switch, fuel system diagnostic pump	722
14. Engine control unit, secondary air pump relay, secondary air pump motor	723
15. Engine control unit, radiator fan, radiator fan 2, additional coolant pump relay, continued coolant circulation pump	724
16. Engine control unit, engine control unit 2	725

17. Engine control unit 2, air mass meter 2, intake air temperature sender 2	726
18. Engine control unit 2, ignition coils 7 - 10 with output stage, injectors, cylinder 7 - 10	727
19. Engine control unit 2, ignition coils 11 and 12 with output stage, injectors cylinder 11 and 12	728
20. Engine control unit 2, knock sensor 3, knock sensor 4, Hall sender 2, Hall sender 4, inlet camshaft control valve 2, exhaust camshaft control valve 1, left electrohydraulic engine mounting solenoid valve, exhaust flap 1 valve	729
21. Engine control unit 2, throttle valve module 2, active charcoal filter system solenoid valve 2, lambda probe 3, lambda probe 3 after catalytic converter	730
22. Engine control unit 2, lambda probe 4, lambda probe 4 after catalytic converter	731
23. Engine control unit 2, secondary air pump relay 2, coolant pump relay 3, secondary air pump motor 2, high pressure sender	732
24. Fuel pump relay, electric fuel pump 2 relay, fuel gauge sender, fuel pump (pre-supply pump), control unit with display in dash panel insert	733
25. Control unit with display in dash panel insert, oil pressure switch, fuel pump, fuel gauge sender 2, oil pressure warning lamp, active charcoal filter system solenoid valve 2 (shut-off valve)	734
26. Control unit with display in dash panel insert, coolant shortage indicator switch, oil level and oil temperature sender	735
073 - Audi A8 3.0 litre turbo-diesel engine (171 kW, 155 kW - 6-cylinder), engine codes ASB, BNG	736-755
1. Audi A8 3.0 litre turbo-diesel engine (171 kW, 155 kW - 6-cylinder), engine codes ASB, BNG	736-740
2. Battery, energy management control unit, battery cut-off relay, fuses	741
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	742
4. Automatic glow period control unit, terminal 30 voltage supply relay, glow plugs, fuse for glow plugs	743
5. Diesel direct injection system control unit	744
6. Diesel direct injection system control unit, fuel pressure regulating valve, fuel metering valve	745
7. Diesel direct injection system control unit, fuel temperature sender, fuel pressure sender, injectors for cylinders 1 - 6	746
8. Diesel direct injection system control unit, Hall sender, air mass meter, engine speed sender, coolant temperature sender, suppression filter	747
9. Diesel direct injection system control unit, exhaust gas recirculation valve, kick-down switch, accelerator pedal position senders, fuses	748
10. Diesel direct injection system control unit, throttle valve module, intake manifold flap motor, exhaust gas recirculation cooler change-over valve, intake air temperature sender, charge air pressure sender, lambda probe	749
11. Diesel direct injection system control unit, turbocharger 1 control unit, exhaust gas temperature sender, electro-hydraulic engine mounting solenoid valve, gearbox mounting valve, temperature sender before particulate filter, exhaust gas pressure sensor 1	750
12. Diesel direct injection system control unit, brake light switch, air filter bypass flap valve	751
13. Diesel direct injection system control unit, radiator fan, high pressure sender	752
14. Control unit with display in dash panel insert, fuel pump relay	753
15. Control unit with display in dash panel insert, fuel gauge, fuel pump, fuel gauge senders, oil pressure warning lamp, oil pressure switch	754
16. Control unit with display in dash panel insert, coolant shortage indicator switch, oil level and oil temperature sender	755
074 - Electric seat adjustment with memory front passenger seat, heated front passenger seat with seat ventilation	756-769
1. Electric seat adjustment with memory front passenger seat, heated front passenger seat with seat ventilation	756-758
2. Front passenger seat, front passenger seat adjustment with memory control unit, fuses	759
3. Front passenger seat adjustment with memory control unit, seat-, head restraint- and backrest adjustment button	760
4. Front passenger seat adjustment with memory control unit, lumbar support- and seat belt height adjustment button, front passenger seat adjustment switch	761
5. Front passenger seat adjustment with memory control unit, front passenger seat rake adjustment motor, front passenger seat height adjustment motor, seat longitudinal adjustment motor	762
6. Front passenger seat adjustment with memory control unit, Front passenger side seat head restraint adjustment motor, Seat belt height adjustment motor, Depth adjustment motor for front passenger seat	763
7. Front passenger seat adjustment with memory control unit, Front passenger seat backrest adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor with and without massage	764
8. Front passenger seat memory operating unit, front passenger side emergency off button, front passenger door control unit	765
9. Front passenger seat ventilation control unit, fuses	766
10. Front passenger seat ventilation control unit, front seat fan, front seat backrest fan	767
11. Front passenger seat ventilation control unit, heated front passenger seat, front passenger seat	768

cushion lateral support heater, seat occupied sensor, front passenger side, front passenger seat temperature sensor	
12. Heated front passenger seat backrest, front passenger seat backrest lateral support heater	769
075 - Electric seat adjustment with memory driver seat, heated driver side seat with seat ventilation	770-783
1. Electric seat adjustment with memory driver seat, heated driver side seat with seat ventilation	770-772
2. Driver seat, seat adjustment with memory control unit, fuses	773
3. Driver seat, seat adjustment with memory control unit, seat-, head restraint- and backrest adjustment button	774
4. Driver seat, seat adjustment with memory control unit, lumbar support- and seat belt height adjustment button	775
5. Seat and steering column adjustment control unit with memory function, driver seat rake adjustment motor, driver seat height adjustment motor, seat longitudinal adjustment motor	776
6. Seat and steering column adjustment control unit with memory function, driver seat rake adjustment motor, seat belt height adjustment motor, driver seat depth adjustment motor	777
7. Seat and steering column adjustment control unit with memory function, driver seat backrest adjustment motor, driver seat lumbar support longitudinal adjustment motor, driver seat lumbar support height adjustment motor with and without massage	778
8. Driver seat memory operating unit, emergency-off button, driver door control unit	779
9. Driver seat ventilation control unit, front passenger seat ventilation control unit	780
10. Driver seat ventilation control unit, front seat fan, front seat backrest fan	781
11. Driver seat ventilation control unit, heated driver seat cushion, driver seat cushion lateral support heater, driver seat temperature sensor	782
12. Heated driver seat backrest, driver seat backrest lateral support heater	783
076 - Electric seat adjustment without memory driver seat, electric seat adjustment without memory front passenger	784-790
1. Electric seat adjustment without memory driver seat, electric seat adjustment without memory front passenger	784-786
2. Seat adjustment without memory, seat adjustment driver seat, seat longitudinal adjustment motor	787
3. Driver seat lumbar support adjustment switch, driver seat lumbar support longitudinal adjustment motor, driver seat lumbar support height adjustment motor, rear left footwell illumination bulb	788
4. Seat adjustment without memory, seat adjustment front passenger seat, seat longitudinal adjustment motor	789
5. Front passenger seat lumbar support adjustment switch, lumbar support longitudinal adjustment motor, lumbar support height adjustment motor, rear right footwell illumination bulb	790
077 - Heated front and rear seats	791-798
1. Heated front and rear seats	791-792
2. Seat heating, heated driver seat regulator, heated front passenger seat regulator	793
3. Seat heating driver seat	794
4. Seat heating front passenger seat	795
5. Seat heating rear, heated rear left and right seat switch with regulator	796
6. Heated rear left seat, heated rear left seat backrest, rear seat occupied sensor on driver side	797
7. Heated rear right seat, heated rear right seat backrest, rear seat occupied sensor on front passenger side	798
078 - Lumbar support adjustment rear seat	799-802
1. Lumbar support adjustment rear seat	799-800
2. Rear left seat lumbar support adjustment switch, rear left seat lumbar support longitudinal adjustment motor, rear left seat lumbar support height adjustment motor	801
3. Rear right seat lumbar support adjustment switch, rear right seat lumbar support longitudinal adjustment motor, rear right seat lumbar support height adjustment motor	802
079 - Electric seat adjustment and lumbar support adjustment for rear seats with memory function	803-813
1. Electric seat adjustment and lumbar support adjustment for rear seats with memory function	803-804
2. Rear seat adjustment with memory control unit, rear seat adjustment thermo-fuse	805
3. Rear seat adjustment with memory control unit, rear left seat rake adjustment button, rear left seat longitudinal adjustment button, rear left seat massage button	806
4. Rear seat adjustment with memory control unit, rear left seat lumbar support height adjustment button, rear left seat lumbar support longitudinal adjustment button	807
5. Rear seat adjustment with memory control unit, rear left seat longitudinal adjustment motor, rear left seat rake adjustment motor, upper backrest adjustment motor	808
6. Rear seat adjustment with memory control unit, rear left seat lumbar support longitudinal adjustment motor, rear left seat lumbar support height adjustment motor	809
7. Rear seat adjustment with memory control unit, rear right seat rake adjustment button, rear right seat longitudinal adjustment button, rear right seat massage button	810
8. Rear seat adjustment with memory control unit, rear right seat lumbar support height adjustment button, rear right seat lumbar support longitudinal adjustment button	811
9. Rear seat adjustment with memory control unit. rear right seat longitudinal adjustment motor.	812

rear right seat rake adjustment motor, upper backrest adjustment motor	
10. Rear seat adjustment with memory control unit, rear right seat lumbar support longitudinal adjustment motor, rear right seat lumbar support height adjustment motor	813
080 - Rear seats - seat ventilation, seat heating	814-820
1. Rear seats - seat ventilation, seat heating	814-815
2. Driver s side rear seat ventilation control unit	816
3. Driver s side rear seat ventilation control unit, rear left seat fan	817
4. Driver s side rear seat ventilation control unit, rear left seat temperature sensor, rear seat occupied sensor on driver s side, heated rear left seat	818
5. Front passenger s side rear seat ventilation control unit, rear right seat fan	819
6. Front passenger s side rear seat ventilation control unit, rear right seat temperature sensor, rear seat occupied sensor (front passenger s side), heated rear right seat	820
081 - Basic equipment	821-860
1. Basic equipment	821-825
2. Earth connections	826
3. Earth connections	827
4. Battery, energy management control unit, battery isolation igniter, fuses	828
5. Terminal 15 voltage supply relay, terminal 75 voltage supply relay 1	829
6. Steering column electronics control unit, steering column voltage supply	830
7. Turn signal switch, intermittent wiper switch, horn plate, steering angle sender, steering column electronics control unit	831
8. Steering column electronics control unit, cruise control system switch	832
9. Entry and start authorisation control unit, entry and start authorisation switch, steering column lock control element, entry and start authorisation button	833
10. Onboard supply control unit, light switch, hazard warning lights button, operating unit in front of centre console	834
11. Onboard supply control unit, power output module for left headlight, left side light bulb, front left turn signal bulb, left side mounted turn signal bulb, left headlight dipped beam bulb, left headlight main beam bulb, left headlight range control mo or	835
12. Onboard supply control unit, power output module for right headlight, right side light bulb, front right turn signal bulb, right side mounted turn signal bulb, right headlight dipped beam bulb, right headlight main beam bulb, right headlight range con rol motor	836
13. Onboard supply control unit, left and right fog light bulb, headlight range control, control unit, treble tone horn, bass tone horn	837
14. Voltage supply onboard power supply control unit, fuses	838
15. Convenience system central control unit	839
16. Convenience system central control unit, left tail light bulb, rear left turn signal bulb, left brake light bulb, left reversing light bulb, rear left fog light bulb	840
17. Convenience system central control unit, right tail light bulb, right brake light bulb, rear right turn signal bulb, right reversing light bulb, rear right fog light bulb	841
18. Convenience system central control unit, number plate light, heated rear window, release button for rear lid lock cylinder	842
19. Convenience system central control unit, brake light switch, high level brake light bulb	843
20. Convenience system central control unit, luggage compartment light, rear lid light, rear footwell illumination	844
21. Wiper motor control unit, windscreen wiper motor, washer pump, diagnostic connector, rain and light detector sensor	845
22. Onboard supply control unit 2, servotronic	846
23. Onboard supply control unit 2, headlight washer system pump, left and right headlight washer system pop-up washer jet motor, headlight washer system relay, washer jet heater element	847
24. Control unit in dash panel insert, front brake pad wear sender, oil pressure switch	848
25. Control unit in dash panel insert, oil level and oil temperature sender, brake fluid level warning contact, windscreen washer fluid level sender, coolant shortage indicator switch, ambient temperature sensor	849
26. Control unit in dash panel insert, radio controlled clock, electromechanical parking brake control unit, radio controlled clock receiver, data bus diagnostic interface	850
27. Control unit in dash panel insert, data bus diagnostic interface, front information display and operating unit control unit, storage compartment illumination bulb	851
28. Control unit in dash panel insert, fuel gauge sender, fuel system pressurisation pump, fuel pump, fuel gauge	852
29. Fuel pump relay, electric fuel pump 2 relay	853
30. Roof electronics control unit, illuminated vanity mirror, interior monitor send and receive module 1, automatic anti-dazzle interior mirror, light sensor, humidity sender, interior light switch	854
31. Roof electronics control unit, interior light, front interior light button, reading light button	855
32. Roof electronics control unit. rear operatind unit for roof module. rear switch for rear roller	856

blind	
33. Rear operating unit for roof module, rear reading light, rear interior light	857
34. Rear operating unit for roof module, rear illuminated vanity mirror, glove compartment light, left and right footwell light	858
35. Illuminated centre armrest, centre console rear storage compartment illumination bulb, 12 V socket	859
36. Cigarette lighter, rear cigarette lighter	860
082 - Audi A8 3.0 I - Fuel injection engine (162 kW/ 160 kW - Motronic - 6-cylinder) engine code ASN/ BBJ	861-881
1. Audi A8 3.0 I - Fuel injection engine (162 kW/ 160 kW - Motronic - 6-cylinder) engine code ASN/ BBJ	861-865
2. Battery, energy management control unit, battery isolation igniter	866
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	867
4. Engine control unit, Motronic current supply relay	868
5. Engine control unit, injector, cylinder 1 - 4, ignition coil 1 - 4 with output stage	869
6. Engine control unit, injector, cylinder 5 and 6, ignition coil 5 and 6 with output stage, throttle valve module, accelerator position sender	870
7. Engine control unit, knock sensor 1, knock sensor 2, engine speed sender	871
8. Engine control unit, Hall sender, inlet camshaft control valve	872
9. Engine control unit, lambda probe, lambda probe 2	873
10. Engine control unit, lambda probe after catalytic converter, air mass meter, variable intake manifold change-over valve, secondary air inlet valve, active charcoal filter system solenoid valve 1	874
11. Engine control unit, electro-hydraulic engine mounting solenoid valve, gearbox mounting valve, secondary air pump motor, secondary air pump relay, high pressure sender	875
12. Engine control unit, brake servo relay, vacuum pump for brakes, brake servo pressure sensor	876
13. Engine control unit, brake light switch, kick-down switch, brake pedal switch, cruise control system switch	877
14. Engine control unit, radiator fan, radiator fan 2, continued coolant circulation relay, continued coolant circulation pump	878
15. Fuel pump relay, electric fuel pump 2 relay, control unit in dash panel insert	879
16. Control unit in dash panel insert, fuel pump, fuel gauge, oil pressure warning lamp, fuel gauge sender	880
17. Control unit in dash panel insert, coolant shortage indicator switch, oil level and oil temperature sender, coolant temperature and coolant shortage warning lamp	881
083 - Audi A8 4.2 I - Fuel injection engine (246 kW - Motronic - 8-cylinder) engine code BFM, BGK	882-902
Audi A8 3.7 I - Fuel injection engine (206 kW - Motronic - 8-cylinder) engine code BFL	
1. Audi A8 4.2 I - Fuel injection engine (246 kW - Motronic - 8-cylinder) engine code BFM, BGK Audi A8 3.7 I - Fuel injection engine (206 kW - Motronic - 8-cylinder) engine code BFL	882-886
2. Battery, energy management control unit, battery isolation igniter	887
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	888
4. Engine control unit, Motronic current supply relay	889
5. Engine control unit, ignition coils, injectors for cylinders 1 - 4	890
6. Engine control unit, ignition coils, injectors for cylinders 5 - 8	891
7. Engine control unit, throttle valve module, accelerator position sender, kickdown switch	892
8. Engine control unit, knock sensor 1, engine speed sender, coolant temperature sender	893
9. Engine control unit, inlet camshaft control valve 1, Hall sender, brake light switch, torque rod valve	894
10. Engine control unit, air mass meter, lambda probe, lambda probe 2	895
11. Engine control unit, variable intake manifold change-over valve, variable intake manifold change-over valve 2, variable intake manifold change-over valve, active charcoal filter system solenoid valve 1, left electrohydraulic engine mounting solenoid valve, Lambda probe after catalytic converter	896
12. Engine control unit, secondary air pump relay, secondary air pump motor, high pressure sender, secondary air inlet valve	897
13. Engine control unit, radiator fan, radiator fan 2, fuel system diagnostic pump	898
14. Engine control unit, fuse	899
15. Fuel pump relay, electric fuel pump 2 relay, fuel system pressurisation pump, fuel gauge sender, control unit in dash panel insert	900
16. Control unit in dash panel insert, fuel gauge, fuel pump, fuel gauge sender, oil pressure warning lamp	901
17. Control unit in dash panel insert, coolant shortage indicator switch, oil level and oil temperature sender	902
084 - Audi A8 6.0 I - Fuel injection engine (331 kW - Motronic - 12-cylinder) engine codes BHT, BSB, BTE	903-928
1. Audi A8 6.0 I - Fuel injection engine (331 kW - Motronic - 12-cylinder) engine codes BHT, BSB.	903

BTE	
2. Battery, energy management control unit, battery isolation igniter, fuses	904
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	905
4. Engine control unit, Motronic current supply relay	906
5. Engine control unit, ignition coils 1 - 4 with output stage, injector, cylinder 1 - 4	907
6. Engine control unit, ignition coils 5 and 6 with output stage, injectors cylinder 5 and 6	908
7. Engine control unit, knock sensor 1, knock sensor 2, coolant temperature sender, engine speed sender	909
8. Engine control unit, Hall sender, Hall sender 3, fuses	910
9. Engine control unit, accelerator position sender, throttle valve module, kickdown switch	911
10. Engine control unit, air mass meter, intake air temperature sender, inlet camshaft control valve 1, exhaust camshaft control valve 1, torque rod valve, right electrohydraulic engine mounting solenoid valve, map-controlled engine cooling system thermostat, activated charcoal filter system solenoid valve 1	912
11. Engine control unit, lambda probe, lambda probe after catalytic converter, exhaust flap valve	913
12. Engine control unit, lambda probe 2, lambda probe 2 after catalytic converter	914
13. Engine control unit, brake light switch	915
14. Engine control unit, secondary air pump relay, secondary air pump motor	916
15. Engine control unit, radiator fan, radiator fan 2, additional coolant pump relay, continued coolant circulation pump	917
16. Engine control unit, engine control unit 2	918
17. Engine control unit 2, air mass meter 2, intake air temperature sender 2	919
18. Engine control unit 2, ignition coils 7 - 10 with output stage, injectors, cylinder 7 - 10	920
19. Engine control unit 2, ignition coils 11 and 12 with output stage, injectors cylinder 11 and 12	921
20. Engine control unit 2, knock sensor 3, knock sensor 4, Hall sender 2, Hall sender 4, inlet camshaft control valve 2, exhaust camshaft control valve 2, left electrohydraulic engine mounting solenoid valve, exhaust flap 2 valve	922
21. Engine control unit 2, throttle valve module 2, active charcoal filter system solenoid valve 2, lambda probe 3, lambda probe 3 after catalytic converter	923
22. Engine control unit 2, lambda probe 4, lambda probe 4 after catalytic converter	924
23. Engine control unit 2, secondary air pump relay 2, coolant pump relay 3, secondary air pump motor 2, high pressure sender	925
24. Fuel pump relay, electric fuel pump 2 relay, fuel gauge sender, fuel system pressurisation pump, control unit in dash panel insert	926
25. Control unit in dash panel insert, oil pressure switch, fuel pump, fuel gauge sender, oil pressure warning lamp	927
26. Control unit in dash panel insert, coolant shortage indicator switch, oil level and oil temperature sender	928
085 - Audi A8 3.0 I - TDI, Common Rail, (171 kW 155 kW - 6-cylinder) engine code ASB, BNG	929-945
1. Audi A8 3.0 I - TDI, Common Rail, (171 kW 155 kW - 6-cylinder) engine code ASB, BNG	929
2. Battery, energy management control unit, battery isolation igniter, fuses	930
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	931
4. Automatic glow period control unit, terminal 30 voltage supply relay, glow plugs, glow plug fuse	932
5. Engine control unit	933
6. Engine control unit, fuel pressure regulating valve, fuel metering valve	934
7. Engine control unit, fuel temperature sender, fuel pressure sender, injector, cylinder 1 - 3	935
8. Engine control unit, injectors cylinder 4 up to 6	936
9. Engine control unit, Hall sender, air mass meter, engine speed sender, coolant temperature sender, suppression filter	937
10. Engine control unit, exhaust gas recirculation valve, kick-down switch, accelerator position sender, fuses	938
11. Engine control unit, throttle valve module, intake manifold flap motor, exhaust gas recirculation cooler change-over valve, intake air temperature sender, charge air pressure sender, lambda probe	939
12. Engine control unit, turbocharger 1 control unit, exhaust temperature sender, electro-hydraulic engine mounting solenoid valve, gearbox mounting valve, temperature sender before particulate filter, exhaust gas pressure sensor 1	940
13. Engine control unit, brake light switch, air filter bypass flap valve	941
14. Engine control unit, radiator fan, high-pressure sender	942
15. Control unit in dash panel insert, fuel pump relay	943
16. Control unit in dash panel insert, fuel gauge, fuel pump, fuel gauge sender, oil pressure warning lamp, oil pressure switch	944
17. Control unit in dash panel insert, coolant shortage indicator switch, oil level and oil temperature sender	945
086 - Audi A8 4.0 I - TDI, Common Rail, (202 kW - 8-cylinder) engine code ASE	946-969
1. Audi A8 4.0 I - TDI. Common Rail. (202 kW - 8-cylinder) engine code ASE	946-951

2. Battery, energy management control unit, battery isolation igniter	952
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	953
4. Glow plug relay, glow plugs	954
5. Diesel direct injection system control unit, terminal 30 voltage supply relay	955
6. Diesel direct injection system control unit, fuel pressure regulating valve, water spray protection flap valve in intake manifold, fuel metering valve	956
7. Diesel direct injection system control unit, coolant temperature sender, oil temperature sender, fuel temperature sender, air mass meter, engine speed sender, Hall sender, fuel pressure sender, oil pressure switch	957
8. Diesel direct injection system control unit, brake light switch	958
9. Diesel direct injection system control unit, injector, cylinder 1 - 4, 6 and 7, fuses	959
10. Diesel direct injection system control unit, throttle valve module, turbocharger 1 control unit, intake manifold flap motor	960
11. Diesel direct injection system control unit, exhaust gas recirculation valve, kick-down switch, accelerator position sender, right electrohydraulic engine mounting solenoid valve, torque rod valve, charge air pressure sender, intake air temperature sender	961
12. Diesel direct injection system control unit, radiator fan, exhaust gas temperature sender 1	962
13. Diesel direct injection system control unit 2, injectors for cylinders 2, 3, 5 and 8, exhaust gas recirculation valve 2, left electrohydraulic engine mounting solenoid valve, intake manifold flap motor	963
14. Diesel direct injection system control unit 2, throttle valve module 2, turbocharger 2 control unit	964
15. Diesel direct injection system control unit 2, air mass meter 2, exhaust gas temperature sender 1 for bank 2	965
16. Fuel cooling pump relay, high pressure sender, fuel cooling pump, heater element for crankcase breather	966
17. Control unit in dash panel insert, fuel pump relay	967
18. Control unit in dash panel insert, fuel gauge, fuel pump, fuel gauge sender, oil pressure warning lamp	968
19. Control unit in dash panel insert, coolant shortage indicator switch, oil level and oil temperature sender	969
087 - Convenience system	970-1004
1. Convenience system	970-973
2. Driver door control unit, window regulator thermal fuse, Card system (Telepass) Italy	974
3. Driver door control unit, driver door exterior handle touch sensor, driver side aerial for entry and start authorisation, entry and start authorisation control unit, driver door exterior handle central locking button	975
4. Driver door control unit, front left door exterior handle illumination bulb, driver side central locking lock unit, driver door power latching system contact switch, driver door exterior handle switch	976
5. Driver door control unit, window regulator switch, driver side window regulator motor, operating unit for window regulator in driver door	977
6. Driver door control unit, childproof lock button, power latching control unit for driver door, driver door power latching motor	978
7. Driver door control unit, mirror adjustment switch, mirror adjustment change-over switch, adjustment switch for mirror with fold-in feature, interior monitor deactivation switch, alarm system off switch, interior monitor send and receive module 1	979
8. Driver door control unit, driver side mirror adjustment motors, driver side heated exterior mirror, driver side automatic anti-dazzle exterior mirror	980
9. Driver door control unit, central locking deadlock function warning lamp, driver side interior locking switch, driver side door warning lamp, front left entry light	981
10. Driver door control unit, fuel tank flap release button, rear lid remote release button, driver door storage compartment illumination bulb	982
11. Front passenger door control unit, front passenger side window regulator fuse, front passenger door power latching motor, power latching control unit for front passenger door	983
12. Front passenger door control unit, entry and start authorisation control unit, front passenger door exterior handle touch sensor, front passenger side aerial for entry and start authorisation, front passenger door exterior handle central locking button	984
13. Front passenger side door control unit, front right door exterior handle illumination bulb, front passenger door exterior handle switch, front passenger side central locking lock unit, front passenger door power latching system contact switch	985
14. Front passenger door control unit, window regulator switch in front passenger door, front passenger side interior locking switch	986
15. Front passenger door control unit, central locking deadlock function warning lamp on front passenger side, front right entry light, front passenger side door warning lamp, front passenger door storage compartment illumination bulb	987

16. Front passenger door control unit, mirror adjustment motors, heated exterior mirror on front passenger side, front passenger side entry light in exterior mirror	988
17. Rear left door control unit, rear left door exterior handle touch sensor, driver side rear entry and start authorisation aerial, power latching control unit for rear left door, rear left door power latching motor, rear left side roller blind control u it	989
18. Rear left door control unit, rear left central locking lock unit, rear left door exterior handle switch, rear left exterior door handle illumination bulb	990
19. Rear left door control unit, rear left central locking lock unit, rear left door power latching system contact switch	991
20. Rear left door control unit, rear left entry light, rear left door warning lamp, rear left interior locking switch	992
21. Rear left door control unit, rear left window regulator switch, in door, rear left ashtray illumination bulb, rear left window regulator motor, rear left door storage compartment illumination bulb	993
22. Rear right door control unit, rear right door exterior handle touch sensor, front passenger side rear entry and start authorisation aerial, power latching control unit for rear right door, rear right door power latching motor, rear right side roller blind control unit, rear right door exterior handle central locking button	994
23. Rear right door control unit, rear right door exterior handle central locking button, rear right central locking lock unit	995
24. Rear right door control unit, rear right central locking lock unit	996
25. Rear right door control unit, rear right door control unit, rear right door warning lamp, rear right interior locking switch, rear right door opener illumination bulb, rear right door ambient lighting bulb	997
26. Rear right door control unit, rear right window regulator motor, rear right window regulator switch, in door, rear right ashtray illumination bulb, rear right door storage compartment illumination bulb	998
27. Convenience system central control unit, fuses	999
28. Convenience system central control unit, rear lid, tank filler flap locking motor, switch in lock cylinder for rear lid, anti-theft alarm system, central locking system, release button for rear lid lock cylinder, rear lid central locking motor, alarm horn	1000
29. Convenience system central control unit, rear lid electric release motor, rear lid control unit, power latching system limit switch, luggage compartment locked, anti-theft and tilt system control unit, power latching control unit	1001
30. Convenience system central control unit, luggage compartment light, rear lid light, rear left and right footwell illumination bulb	1002
31. Rear switch for rear roller blind, rear roller blind motor	1003
32. Onboard supply control unit, bonnet contact switch, left footwell light, right footwell light	1004
088 - Airbag	1005-1014
1. Airbag	1005-1006
2. Airbag control unit, battery isolation igniter	1007
3. Airbag control unit, driver side airbag igniter, front passenger side airbag igniter 1	1008
4. Airbag control unit, side airbag	1009
5. Airbag control unit, curtain airbag, front belt tensioner	1010
6. Airbag control unit, rear belt tensioner, belt switch	1011
7. Airbag control unit, crash sensor for side airbag, crash sensor for front airbag	1012
8. Airbag control unit, rear side airbag crash sensor, crash sensor for front airbag	1013
9. Airbag control unit, key operated switch to deactivate front passenger side airbag, front passenger side airbag deactivated warning lamp	1014
089 - Anti-lock brake system 5.7 (ABS) with traction control system (TCS) and electronic stabilisation program (ESP)	1015-1023
1. Anti-lock brake system 5.7 (ABS) with traction control system (TCS) and electronic stabilisation program (ESP)	1015-1017
2. ABS control unit, ABS control unit fuse 1	1018
3. ABS control unit, TCS and ESP button, operating unit in front of centre console	1019
4. ABS control unit, speed sensor, lateral acceleration sender, yaw rate sender	1020
5. ABS control unit, speed sensor for 6.0 l engine BHT	1021
6. ABS control unit, ABS return flow pump, inlet and outlet valve, brake pressure sender 1	1022
7. ABS control unit, brake light switch, output speedometer	1023
090 - Multifunction steering wheel	1024-1028
1. Multifunction steering wheel	1024
2. Steering column electronics control unit voltage supply	1025
3. Steering column electronics control unit, operating unit in steering wheel	1026
4. Steering column electronics control unit, operating unit in steering wheel, horn plate	1027
5. Steering column electronics control unit, operating unit in steering wheel, driver side airbag igniter. heated steering wheel	1028

091 - Electric tyre pressure monitor	1029-1031
1. Electric tyre pressure monitor	1029
2. Tyre pressure monitor control unit, fuse	1030
3. Tyre pressure monitor control unit, tyre pressure sensors, tyre pressure monitor aerials	1031
092 - Entry and start authorisation, entry and start authorisation with Kessy	1032-1039
1. Entry and start authorisation, entry and start authorisation with Kessy	1032
2. Entry and start authorisation control unit	1033
3. Entry and start authorisation control unit, entry and start authorisation switch, steering column lock control element, start/stop motor button, driver identification control unit	1034
4. Entry and start authorisation control unit, exterior handle touch sensor, right aerial for entry and start authorisation, door control unit	1035
5. Entry and start authorisation control unit, front passenger door exterior handle touch sensor, front passenger side aerial, door control unit	1036
6. Entry and start authorisation control unit, aerials	1037
7. Entry and start authorisation control unit	1038
8. Entry and start authorisation control unit, starter motor relay, starter motor relay 2	1039
093 - Trailer towing attachment	1040-1044
1. Trailer towing attachment	1040-1041
2. Trailer detector control unit, fuses	1042
3. Trailer detector control unit, trailer socket, brake light switch	1043
4. Trailer detector control unit, trailer socket	1044
094 - Ultrasonic parking aid, front and rear	1045-1049
1. Ultrasonic parking aid, front and rear	1045-1046
2. Parking aid control unit, parking aid button, parking aid warning lamp	1047
3. Parking aid control unit, front parking aid sender, parking aid warning buzzer	1048
4. Parking aid control unit, rear parking aid sender	1049
095 - Telephone	1050-1055
1. Telephone	1050-1051
2. Telephone transmitter and receiver unit, fuses	1052
3. Telephone transmitter and receiver unit, microphone unit in front roof module	1053
4. Telephone transmitter and receiver unit, aerial for Bluetooth, telephone handset	1054
5. Telephone transmitter and receiver unit, aerial for Bluetooth, telephone aerial, chip card reader for telephone	1055
096 - Preparation for mobile telephone	1056-1060
1. Preparation for mobile telephone	1056
2. Telephone transmitter and receiver unit, fuses	1057
3. Telephone transmitter and receiver unit, aerial for Bluetooth, microphone unit in front roof module	1058
4. Telephone transmitter and receiver unit, mobile telephone	1059
5. Aerial amplifier for mobile telephone, telephone aerial	1060
097 - Navigation system	1061-1065
1. Navigation system	1061-1063
2. Navigation system with CD drive control unit, fuses, navigation system aerial, telephone aerial	1064
3. Microphone unit in front roof module, digital sound package control unit	1065
098 - Headlights with gas discharge bulbs (xenon, bi-xenon), cornering lights and automatic headlight range control	1066-1072
1. Headlights with gas discharge bulbs (xenon, bi-xenon), cornering lights and automatic headlight range control	1066-1067
2. Onboard power supply control unit, fuses	1068
3. Onboard power supply control unit, light switch, fog light switch, rear fog light switch, hazard warning lights button	1069
4. Onboard power supply control unit, left gas discharge light control unit, power output module for left headlight, left side light bulb, front left turn signal bulb, left main beam bulb, left cornering light bulb	1070
5. Onboard power supply control unit, right gas discharge light control unit, power output module for right headlight, right cornering light bulb, front right turn signal bulb, right side light bulb, right main beam bulb	1071
6. Onboard power supply control unit, control unit for headlight range control, front left fog light bulb, front right fog light bulb	1072
099 - Electronic steering column lock	1073-1077
1. Electronic steering column lock	1073-1074
2. Onboard power supply control unit, fuses	1075
3. Onboard supply control unit, steering column vertical adjustment motor, steering column axial adjustment motor	1076
4. Steering column electronics control unit, steering column adjustment switch	1077
100 - Electrical rear roller blind. rear left and right roller blind	1078-1087

1. Electrical rear roller blind, rear left and right roller blind	1078-1080
2. Rear roller blind, rear roller blind switch	1081
3. Rear roller blind, rear roller blind motor, fuses	1082
4. Roof electronics control unit, fuses	1083
5. Roof electronics control unit, rear operating unit for roof module, rear switch for rear roller blind	1084
6. Rear left door control unit, window regulator thermal fuse	1085
7. Rear left door control unit, rear right door control unit, side roller blind control unit	1086
8. Rear right door control unit, front passenger side window regulator fuse	1087
101 - Communication	1088-1108
1. Communication	1088-1091
2. Data bus diagnostic interface, fuses	1092
3. Data bus diagnostic interface, control unit in dash panel insert	1093
4. Front information display and operating unit control unit, multimedia system operating unit, open and close button for front display	1094
5. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	1095
6. Front information display and operating unit control unit, display unit for front information display and operating unit control unit, open and close display motor	1096
7. Telephone transmitter and receiver unit, onboard supply control unit 2, fuses	1097
8. Telephone transmitter and receiver unit, aerial for Bluetooth, chip card reader for telephone	1098
9. Telephone transmitter and receiver unit, telephone handset, aerial for Bluetooth, telephone aerial	1099
10. Digital sound package control unit, microphone unit in front roof module	1100
11. Digital sound package control unit, front left and right bass loudspeaker, loudspeaker in rear shelf, subwoofer in rear shelf	1101
12. Digital sound package control unit, front left mid-range and treble loudspeaker, front right mid-range and treble loudspeaker, centre mid-range and treble loudspeaker, rear left mid-range and bass loudspeaker, rear left treble loudspeaker	1102
13. Digital sound package control unit, rear right mid-range and bass loudspeaker, rear right treble loudspeaker, navigation system with CD drive control unit	1103
14. Navigation system with CD drive control unit, navigation system aerial, TV tuner, fuses left luggage compartment	1104
15. TV tuner, aerial amplifier	1105
16. Digital radio, radio (K-box)	1106
17. Radio, language input control unit	1107
18. Media player, CD changer, CD ROM drive	1108
102 - Digital TV tuner	1109-1112
1. Digital TV tuner	1109
2. TV tuner, digital TV tuner, fuses	1110
3. TV tuner, digital TV tuner, aerial amplifier	1111
4. TV tuner, digital TV tuner, aerial amplifier	1112
103 - Rear-Seat-Entertainment (RSE)	1113-1130
1. Rear-Seat-Entertainment (RSE)	1113
2. Trailer detector control unit, fuses	1114
3. Current supply relay, communications fuse	1115
4. Rear-Seat-Entertainment voltage supply, rear DVD changer, multimedia system signal splitter	1116
5. Rear DVD changer, multimedia system signal splitter, multimedia system display unit 1 control unit	1117
6. Multimedia system signal splitter, multimedia system display unit 1 control unit	1118
7. Multimedia system signal splitter, multimedia system display unit 1 control unit, multimedia system display unit 2 control unit, multimedia display unit 1, multimedia display unit 2	1119
8. Multimedia system signal splitter, multimedia system display unit 2 control unit	1120
9. Multimedia system signal splitter	1121
10. Additional connections unit for audio and video, multimedia headphones for left side	1122
11. Additional connections unit for audio and video, multimedia headphones for right side	1123
12. TV tuner, fuses left luggage compartment	1124
13. TV tuner	1125
14. Front information display and operating unit control unit, display unit for front information display and operating unit control unit, fuses	1126
15. Fax unit, telephone and navigation systems loudspeaker, telephone handset 2 (fax), rear right microphone, rear charger unit for telephone	1127
16. Fax unit, fax device control unit, aerial	1128
17. Fax unit, fax device control unit	1129
18. Fax unit, fax device control unit, ethernet socket	1130
104 - Voltage supply external equipment	1131-1133

1. Voltage supply external equipment	1131
2. Trailer detector control unit, fuses	1132
3. Current supply relay, communications fuse	1133
105 - Basic equipment	1134-1167
1. Basic equipment	1134
2. Battery, energy management control unit, battery isolation igniter, fuses	1135
3. Terminal 15 voltage supply relay, terminal 75 voltage supply relay 1	1136
4. Steering column electronics control unit, steering column voltage supply	1137
5. Turn signal switch, intermittent wiper switch, horn plate, steering angle sender, steering column electronics control unit	1138
6. Steering column electronics control unit, cruise control system switch	1139
7. Entry and start authorisation control unit, entry and start authorisation switch, steering column lock control element, entry and start authorisation button	1140
8. Onboard supply control unit, light switch, hazard warning lights button, operating unit in front of centre console	1141
9. Onboard supply control unit, left side light bulb, front left turn signal bulb, left side repeater turn signal bulb, left dipped beam bulb, left headlight main beam bulb	1142
10. Onboard supply control unit, right side light bulb, front right turn signal bulb, right side repeater turn signal bulb, right dipped beam bulb, right headlight main beam bulb	1143
11. Onboard supply control unit, left and right fog light bulb, treble tone horn, bass tone horn	1144
12. Voltage supply onboard power supply control unit, fuses	1145
13. Convenience system central control unit	1146
14. Convenience system central control unit, left tail light bulb, rear left turn signal bulb, left brake light bulb, left reversing light bulb, rear left fog light bulb	1147
15. Convenience system central control unit, right tail light bulb, right brake light bulb, rear right turn signal bulb, right reversing light bulb, rear right fog light bulb	1148
16. Convenience system central control unit, number plate light, heated rear window, release button for rear lid lock cylinder	1149
17. Convenience system central control unit, brake light switch, high level brake light bulb	1150
18. Convenience system central control unit, luggage compartment light, rear lid light, rear footwell illumination	1151
19. Wiper motor control unit, windscreen wiper motor, washer pump, diagnostic connector, rain and light detector sensor	1152
20. Onboard supply control unit 2, servotronic	1153
21. Onboard supply control unit 2, headlight washer system pump, left and right headlight washer system pop-up washer jet motor, headlight washer system relay, washer jet heater element	1154
22. Control unit in dash panel insert, front brake pad wear sender, oil pressure switch	1155
23. Control unit in dash panel insert, oil level and oil temperature sender, brake fluid level warning contact, windscreen washer fluid level sender, coolant shortage indicator switch, ambient temperature sensor	1156
24. Control unit in dash panel insert, radio controlled clock, electromechanical parking brake control unit, radio controlled clock receiver, data bus diagnostic interface	1157
25. Control unit in dash panel insert, data bus diagnostic interface, front information display and operating unit control unit, storage compartment illumination bulb	1158
26. Control unit in dash panel insert, fuel gauge sender, fuel system pressurisation pump, fuel pump, fuel gauge	1159
27. Fuel pump relay, electric fuel pump 2 relay	1160
28. Roof electronics control unit, illuminated vanity mirror, interior monitor send and receive module 1, automatic anti-dazzle interior mirror, light sensor, humidity sender, interior light switch	1161
29. Roof electronics control unit, interior light, front interior light button, reading light button	1162
30. Roof electronics control unit, rear operating unit for roof module, rear switch for rear roller blind	1163
31. Rear operating unit for roof module, rear reading light, rear interior light	1164
32. Rear operating unit for roof module, rear illuminated vanity mirror, glove compartment light, left and right footwell light	1165
33. Illuminated centre armrest, centre console rear storage compartment illumination bulb, 12 V socket	1166
34. Cigarette lighter, rear cigarette lighter	1167
106 - Audi A8 4.2 I - TDI, Common Rail (240 kW - 8-cylinder), engine code BVN	1168-1188
1. Audi A8 4.2 I - TDI, Common Rail (240 kW - 8-cylinder), engine code BVN	1168
2. Battery, energy management control unit, battery isolation igniter	1169
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	1170
4. Automatic glow period control unit, glow period control unit 2, glow plugs	1171
5. Engine control unit, terminal 30 voltage supply relay	1172
6. Engine control unit. fuel pressure regulating valve. fuel metering valve. air filter bypass flap	1173

valve	
7. Engine control unit, coolant temperature sender, oil temperature sender, fuel temperature sender, air mass meter, engine speed sender, Hall sender, fuel pressure sender	1174
8. Engine control unit, brake light switch	1175
9. Engine control unit, injectors for cylinders 1, 4, 6 and 7, fuses	1176
10. Engine control unit, throttle valve drive, intake manifold flap motor, high-pressure sender	1177
11. Engine control unit, accelerator position sender	1178
12. Engine control unit, radiator fan, exhaust gas temperature sender 1, temperature sender before particulate filter	1179
13. Engine control unit, lambda probe, pressure differential sender	1180
14. Engine control unit, turbocharger 1 and 2 control unit, exhaust gas recirculation control motor, exhaust gas recirculation potentiometer	1181
15. Engine control unit 2, injector for cylinders 2, 3, 5 and 8, left electrohydraulic engine mounting solenoid valve, intake manifold flap 2 motor, heater element for crankcase breather	1182
16. Engine control unit 2, throttle valve module 2	1183
17. Engine control unit 2, air mass meter 2, exhaust gas temperature sender 1 for bank 2, temperature sender 2 before particulate filter	1184
18. Engine control unit 2, lambda probe 2, exhaust gas recirculation control motor 2, pressure differential sender 2, exhaust gas recirculation potentiometer 2	1185
19. Control unit in dash panel insert, fuel pump relay	1186
20. Control unit in dash panel insert, fuel gauge, fuel pump, fuel gauge sender, oil pressure warning lamp, oil pressure switch	1187
21. Control unit in dash panel insert, coolant shortage indicator switch, oil level and oil temperature sender	1188
107 - Automatic gearbox 09E, automatic gearbox 09L	1189-1194
1. Automatic gearbox 09E, automatic gearbox 09L	1189
2. Automatic gearbox control unit	1190
3. Automatic gearbox control unit	1191
4. Automatic gearbox control unit, Tiptronic switch, selector lever lock solenoid	1192
5. Automatic gearbox control unit	1193
6. Automatic gearbox control unit	1194
108 - Audi A8 3.2 l - Fuel injection engine (191 kW - Motronic - 6-cylinder) engine code BPK	1195-1214
1. Audi A8 3.2 l - Fuel injection engine (191 kW - Motronic - 6-cylinder) engine code BPK	1195
2. Battery, energy management control unit, battery isolation igniter, fuses	1196
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	1197
4. Engine control unit, Motronic current supply relay	1198
5. Engine control unit, CAN separating connector, earth connections	1199
6. Engine control unit, injector, cylinder 1 - 4, ignition coil 1 - 4 with output stage	1200
7. Engine control unit, injector, cylinder 5 and 6, ignition coil 5 and 6 with output stage, throttle valve module	1201
8. Engine control unit, knock sensor 1 and 2, accelerator position sender	1202
9. Engine control unit, Hall sender, engine speed sender, coolant temperature sender	1203
10. Engine control unit, intake air temperature sender, intake manifold pressure sender, intake manifold flap potentiometer, fuel pressure sender for low pressure, intake manifold flap potentiometer 2	1204
11. Engine control unit, fuel pressure sender, inlet camshaft control valve	1205
12. Engine control unit, active charcoal filter system solenoid valve 1, electro-hydraulic engine mounting solenoid valve, variable intake manifold change-over valve, gearbox mounting valve, fuel metering valve	1206
13. Engine control unit, intake manifold flap valve, variable intake manifold change-over valve, fuel system diagnostic pump	1207
14. Engine control unit, lambda probe, lambda probe 2, lambda probe heater	1208
15. Engine control unit, lambda probe after catalytic converter, lambda probe 2 after catalytic converter, variable intake manifold position sender, lambda probe 1 heater after catalytic converter	1209
16. Engine control unit, brake light switch, kick-down switch, brake pedal switch	1210
17. Engine control unit, engine component current supply relay, suppression filter	1211
18. Engine control unit, cold start relay for fuel pump, fuel pump fuse, radiator fan	1212
19. Control unit in dash panel insert, fuel gauge sender, fuel gauge sender 3, fuel system pressurisation pump, fuel pump control unit	1213
20. Control unit in dash panel insert, fuel gauge, fuel pump, fuel gauge sender, oil pressure switch, oil level and oil temperature sender	1214
109 - Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light	1215-1224
1. Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light	1215
2. Fuse holder B	1216
3. Onboard supply control unit. Fuse holder B	1217

4. Light switch, Onboard supply control unit	1218
5. Onboard supply control unit, Driver side turn signal repeater bulb, Left turn signal repeater bulb	1219
6. Onboard supply control unit, Front passenger side turn signal repeater bulb, Right turn signal repeater bulb	1220
7. Left gas discharge bulb control unit, Onboard supply control unit, Output module for left headlight, Front left headlight	1221
8. Right gas discharge bulb control unit, Onboard supply control unit, Output module for right headlight, Front right headlight	1222
9. Onboard supply control unit, Tail light control unit for lights on left in rear lid, Left fog light bulb, Right fog light bulb	1223
10. Headlight range control unit	1224
110 - Headlight for gaseous discharge light (Xenon, Bixenon) and automatic headlight range control	1225-1231
1. Headlight for gaseous discharge light (Xenon, Bixenon) and automatic headlight range control	1225
2. Onboard power supply control unit, fuses	1226
3. Onboard power supply control unit, light switch, fog light switch, rear fog light switch, illumination bulb light switch	1227
4. Left headlight, onboard supply control unit, left side repeater turn signal bulb, left headlight screen adjustment solenoid, left headlight range control motor	1228
5. Right headlight, onboard supply control unit, right side repeater turn signal bulb, right headlight screen adjustment solenoid, right headlight range control motor	1229
6. Onboard supply control unit, left fog light bulb, right fog light bulb	1230
7. Headlight range control, control unit	1231
111 - Airbag systems	1232-1242
1. Airbag systems	1232
2. Airbag control unit	1233
3. Airbag coil connector and return ring with slip ring, Airbag control unit, Driver side airbag igniter, Driver side airbag igniter 2, Battery isolation igniter	1234
4. Airbag control unit, Front passenger side airbag igniter 2, Side airbag igniter on driver side	1235
5. Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on front passenger side	1236
6. Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter, Front passenger side knee airbag igniter	1237
7. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on front passenger side	1238
8. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on front passenger side, Airbag control unit, Rear centre belt tensioner igniter	1239
9. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	1240
10. Driver side belt switch, Front passenger side belt switch, Pressure sensor for seat occupied recognition, Airbag control unit, Seat occupied recognition control unit	1241
11. Key operated switch to deactivate front passenger side airbag, Airbag control unit	1242
112 - Trailer towing attachment	1243-1246
1. Trailer towing attachment	1243
2. Trailer detector control unit, fuses	1244
3. Trailer detector control unit, trailer socket, brake light switch	1245
4. Trailer detector control unit, trailer socket	1246
113 - Electric seat- and lumbar support adjustment rear seat with memory	1247-1256
1. Electric seat- and lumbar support adjustment rear seat with memory	1247
2. Rear seat adjustment with memory control unit, rear seat adjustment thermal fuse 2	1248
3. Rear seat adjustment with memory control unit, rear left seat rake adjustment switch, rear left seat longitudinal adjustment button, rear left seat massage function button	1249
4. Rear seat adjustment with memory control unit, rear left seat lumbar support height adjustment button, rear left seat lumbar support longitudinal adjustment button	1250
5. Rear seat adjustment with memory control unit, rear left seat longitudinal adjustment motor, rear left seat rake adjustment motor, upper backrest adjustment motor	1251
6. Rear seat adjustment with memory control unit, Rear left seat lumbar support longitudinal adjustment motor, Rear left seat lumbar support height adjustment motor	1252
7. Rear seat adjustment with memory control unit, rear right seat rake adjustment switch, rear right seat longitudinal adjustment button, rear right seat massage function button	1253
8. Rear seat adjustment with memory control unit, rear right seat lumbar support height adjustment button, rear right seat lumbar support longitudinal adjustment button	1254
9. Rear seat adjustment with memory control unit, rear right seat longitudinal adjustment motor, rear right seat rake adjustment motor. upper backrest adjustment motor	1255

10. Rear seat adjustment with memory control unit, Rear right seat lumbar support longitudinal adjustment motor, Rear right seat lumbar support height adjustment motor	1256
114 - Rear seats - seat ventilation, seat heating	1257-1262
1. Rear seats - seat ventilation, seat heating	1257
2. Driver side rear seat ventilation control unit	1258
3. Driver side rear seat ventilation control unit, rear left seat fan	1259
4. Driver side rear seat ventilation control unit, rear left seat temperature sensor, rear seat occupied sensor on driver side, heated bench seat cushion for rear left seat	1260
5. Front passenger side rear seat ventilation control unit, rear right seat fan	1261
6. Front passenger side rear seat ventilation control unit, rear right seat temperature sensor, rear seat occupied sensor on front passenger side, heated bench seat cushion for rear right seat	1262
115 - Rear Seat Entertainment (RSE) light	1263-1269
1. Rear Seat Entertainment (RSE) light	1263
2. Trailer detector control unit, fuses	1264
3. Rear-Seat-Entertainment voltage supply, multimedia system signal splitter, current supply relay	1265
4. Multimedia system signal splitter, rear DVD changer, multimedia headphones for left side, driver side volume button	1266
5. Multimedia system signal splitter, multimedia headphones for right side, front passenger side volume button	1267
6. Multimedia system signal splitter, multimedia display unit 1	1268
7. Multimedia system signal splitter, multimedia display unit 2	1269
116 - Refrigerator box	1270-1272
1. Refrigerator box	1270
2. Refrigerator box, from model year 2006	1271
3. Refrigerator box up to model year 2005	1272
117 - Optimal equipment, rental car	1273-1278
1. Optimal equipment, rental car	1273
2. Special vehicle control unit, fuses	1274
3. Special vehicle control unit, remote controlled taxi alarm aerial, taxi alarm active button, taxi alarm off button, remote controlled taxi alarm aerial	1275
4. Special vehicle control unit, two-way radio, taxi roof sign light bulb, two-way radio loudspeaker	1276
5. Special vehicle control unit, chip card reader, taxi meter	1277
6. Special vehicle control unit, chip card reader, taxi meter	1278
118 - Radio digital sound package BOSE 6000 (8RY)	1279-1284
1. Radio digital sound package BOSE 6000 (8RY)	1279
2. Digital sound package control unit, fuses	1280
3. Digital sound package control unit, front left and right bass loudspeaker, loudspeaker in rear shelf, subwoofer in rear shelf	1281
4. Digital sound package control unit, rear left treble loudspeaker, front left and right mid-range and treble loudspeaker, centre mid-range and treble loudspeaker, rear left mid-range and bass loudspeaker	1282
5. Digital sound package control unit, rear right treble loudspeaker, rear right mid-range and bass loudspeaker, microphone unit in front roof module	1283
6. Radio, aerial amplifier, CD changer, media player in position 1	1284
119 - Radio High-End-Sound system BANG and OLUFSEN (8RF)	1285-1294
1. Radio High-End-Sound system BANG and OLUFSEN (8RF)	1285
2. Digital sound package control unit, fuses	1286
3. Digital sound package control unit, microphone unit in front roof module	1287
4. Digital sound package control unit, front left and right bass loudspeaker, front left and right mid-range loudspeaker, centre mid-range and treble loudspeaker	1288
5. Digital sound package control unit, front left and right treble loudspeaker, control motor for front left and right treble speaker	1289
6. Digital sound package control unit, rear left and right treble loudspeaker, rear left and right mid-range loudspeaker	1290
7. Digital sound package control unit, digital sound package control unit 2	1291
8. Digital sound package control unit, digital sound package control unit 2	1292
9. Digital sound package control unit 2, subwoofer in rear shelf, rear right and left mid-range and bass loudspeaker	1293
10. Radio, aerial amplifier, CD changer, media player in position 1	1294
120 - Audi S8 5.2 I Fuel injection engine (331 kW -10 cylinder), engine code BSM	1295-1321
1. Audi S8 5.2 I Fuel injection engine (331 kW -10 cylinder), engine code BSM	1295
2. Battery, energy management control unit, battery isolation igniter, fuses	1296
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, starter motor relay 2	1297
4. Engine control unit, Motronic current supply relay	1298
5. Engine control unit	1299
6. Engine control unit. injectors cvlinder 1 up to 4. ignition coils 1 up to 4 with output stage	1300

7. Engine control unit, accelerator position sender, injector, cylinder 5, ignition coil 5 with output stage	1301
8. Engine control unit, Hall sender, knock sensors	1302
9. Engine control unit, engine speed sender, fuel pressure sender, intake manifold flap potentiometer, throttle valve module	1303
10. Engine control unit, coolant temperature sender, air mass meter, brake servo pressure sensor, fuel pressure sender for low pressure, intake air temperature sender	1304
11. Engine control unit, activated charcoal filter system solenoid valve 1, secondary air inlet valve, right electrohydraulic engine mounting solenoid valve, fuel metering valve, exhaust flap 1 valve, variable intake manifold change-over valve	1305
12. Engine control unit, lambda probe, lambda probe heater, fuses	1306
13. Engine control unit, lambda probe after catalytic converter, lambda probe 1 heater after catalytic converter, map-controlled engine cooling system thermostat, inlet camshaft control valve 1, variable intake manifold motor, fuel system diagnostic pump	1307
14. Engine control unit, kick-down switch, additional coolant pump relay, engine component current supply relay, continued coolant circulation pump, intake manifold flap motor	1308
15. Engine control unit, secondary air pump relay, brake servo relay, secondary air pump fuse, secondary air pump motor, vacuum pump for brakes	1309
16. Engine control unit, brake light switch	1310
17. Engine control unit, radiator fan, radiator fan 2	1311
18. Engine control unit, engine control unit 2	1312
19. Engine control unit 2, throttle valve module 2	1313
20. Engine control unit 2, injectors cylinder 6 up to 9, ignition coils 6 up to 9 with output stage	1314
21. Engine control unit 2, injector, cylinder 10, ignition coil 10 with output stage	1315
22. Engine control unit 2, knock sensor 3, knock sensor 4, Hall sender 2, Hall sender 4, exhaust flap 2 valve	1316
23. Engine control unit 2, air mass meter 2, intake air temperature sender 2, intake manifold flap 2 potentiometer, left electrohydraulic engine mounting solenoid valve, inlet camshaft control valve 2, fuel metering valve 2	1317
24. Engine control unit 2, lambda probe 3 and 4, lambda probe 3 and 4 heater	1318
25. Engine control unit 2, lambda probe 3 and 4 after catalytic converter, lambda probe 3 and 4 heater after catalytic converter, fuel pump relay	1319
26. Control unit in dash panel insert, fuel gauge sender, fuel gauge sender 3, fuel system pressurisation pump, fuel pump control unit	1320
27. Control unit in dash panel insert, fuel gauge, fuel pump, fuel gauge sender, oil pressure switch, oil level and oil temperature sender	1321
121 - Audi A8 4.2 I Fuel injection engine (257 kW - FSI - 8-cylinder) engine code BVJ, CDR	1322-1340
1. Audi A8 4.2 I Fuel injection engine (257 kW - FSI - 8-cylinder) engine code BVJ, CDR	1322
2. Battery, energy management control unit, battery isolation igniter	1323
3. Starter, alternator, terminal 15 voltage supply relay, starter relay	1324
4. Engine control unit, Motronic current supply relay	1325
5. Engine control unit, ignition coils with output stage, injectors for cylinders	1326
6. Engine control unit, ignition coils with output stage, injectors for cylinders	1327
7. Engine control unit, accelerator position sender, kickdown switch	1328
8. Engine control unit, knock sensors	1329
9. Engine control unit, Hall sender, intake manifold flap potentiometer, throttle valve module	1330
10. Engine control unit, engine speed sender, Hall sender, air mass meter, coolant temperature sender	1331
11. Engine control unit, coolant temperature sender, brake servo pressure sensor, fuel pressure sender for low pressure	1332
12. Engine control unit, brake light switch, brake pedal switch, fuses	1333
13. Engine control unit, lambda probe, lambda probe 2, fuses	1334
14. Engine control unit, inlet camshaft control valve, map-controlled engine cooling system thermostat, lambda probe after catalytic converter, intake manifold flap motor	1335
15. Engine control unit, brake servo relay, variable intake manifold motor, secondary air pump motor	1336
16. Engine control unit, electrohydraulic engine mounting solenoid valves, activated charcoal filter system solenoid valves, fuel metering valve, variable intake manifold change-over valve, fuel system diagnostic pump	1337
17. Engine control unit, engine component current supply relay, radiator fan	1338
18. Control unit in dash panel insert, fuel gauge sender, fuel gauge sender 3, fuel system pressurisation pump, fuel pump control unit, fuel pump relay, fuel pump relay	1339
19. Control unit in dash panel insert, fuel gauge, fuel pump, fuel gauge sender, oil pressure switch, coolant shortage indicator switch, oil level and oil temperature sender	1340
122 - Reversing camera system	1341-1342
1. Reversing camera system	1341
2. Reversing camera system control unit. reversing camera	1342

123 - Preparation for mobile telephone (9ZD)	1343-1345
1. Preparation for mobile telephone (9ZD)	1343
2. Telephone preparation	1344
3. Telephone preparation	1345
124 - Rear-Seat-Entertainment (RSE) plus	1346-1358
1. Rear-Seat-Entertainment (RSE) plus	1346
2. Trailer detector control unit, fuses	1347
3. Rear-Seat-Entertainment voltage supply, multimedia control unit, current supply relay	1348
4. Multimedia control unit, multimedia headphones for left side	1349
5. Multimedia control unit, multimedia headphones for right side, additional connections unit for audio and video	1350
6. Multimedia control unit, additional connections unit for audio and video	1351
7. Multimedia control unit, rear DVD changer	1352
8. Multifunction unit control unit, multimedia display unit 1	1353
9. Multifunction unit control unit, multimedia display unit 2	1354
10. Multimedia control unit, TV tuner	1355
11. Multimedia control unit, TV tuner	1356
12. Front information display and operating unit control unit, fuses	1357
13. Front information display and operating unit control unit, multimedia system operating unit, open and close button for front display	1358
125 - Rear-Seat-Entertainment (RSE)	1359-1367
1. Rear-Seat-Entertainment (RSE)	1359
2. Trailer detector control unit, fuses	1360
3. Rear-Seat-Entertainment voltage supply, multimedia control unit, current supply relay	1361
4. Multimedia control unit, multimedia headphones for left side	1362
5. Multimedia control unit, multimedia headphones for right side, additional connections unit for audio and video	1363
6. Multimedia control unit	1364
7. Multimedia control unit, rear DVD changer	1365
8. Multifunction unit control unit, multimedia display unit 1	1366
9. Multifunction unit control unit, multimedia display unit 2	1367
126 - Voltage supply external equipment	1368-1370
1. Voltage supply external equipment	1368
2. Trailer detector control unit, fuses	1369
3. Communications fuse	1370
127 - Communication Japan (7Q6, 7D0, QV1)	1371-1385
1. Communication Japan (7Q6, 7D0, QV1)	1371
2. Data bus diagnostic interface, fuses	1372
3. Data bus diagnostic interface, front information display and operating unit control unit	1373
4. Front information display and operating unit control unit, multimedia system operating unit, operating unit in front of centre console	1374
5. Front information display and operating unit control unit, display and operating unit change-over unit	1375
6. Front information display and operating unit control unit, display and operating unit change-over unit	1376
7. Navigation system with CD drive control unit, display unit for front information display and operating unit control unit, display and operating unit change-over unit	1377
8. Navigation system with CD drive control unit, display unit for front information display and operating unit control unit, display and operating unit change-over unit	1378
9. Navigation system with CD drive control unit, telephone transmitter and receiver unit, microphone unit in front roof module	1379
10. Navigation system with CD drive control unit, telephone transmitter and receiver unit, chip card reader control unit, traffic data aerial	1380
11. Navigation system with CD drive control unit, chip card reader control unit, traffic data aerial	1381
12. Navigation system with CD drive control unit, navigation system aerial, fuses	1382
13. TV tuner, aerial, aerial amplifier	1383
14. Radio	1384
15. DVD player, CD changer, media player in position 1 and 2, MiniDisc player, connection for external audio source	1385
128 - Communication USA (7Q2, QV4, 7A2, 8RY)	1386-1404
1. Communication USA (7Q2, QV4, 7A2, 8RY)	1386
2. Data bus diagnostic interface, fuses	1387
3. Data bus diagnostic interface, control unit in dash panel insert	1388
4. Front information display and operating unit control unit, multimedia system operating unit, open and close button for front display	1389
5. Front information display and operating unit control unit, display unit for front information	1390

display and operating unit control unit	
6. Front information display and operating unit control unit, display unit for front information display and operating unit control unit, open and close display limit switch	1391
7. Telephone and telematics control unit, onboard supply control unit 2, fuses	1392
8. Telephone and telematics control unit, emergency battery, telematics	1393
9. Telephone and telematics control unit, mobile telephone, navigation system aerial, radio, telephone and navigation system aerial, telephone aerial	1394
10. Telephone and telematics control unit, additional loudspeaker for telematics, telematics operating unit, breakdown assistance call button, emergency assistance call button	1395
11. Digital sound package control unit, microphone unit in front roof module	1396
12. Digital sound package control unit, front left and right bass loudspeaker, loudspeaker in rear shelf, subwoofer in rear shelf	1397
13. Digital sound package control unit, rear left treble loudspeaker, front left and right mid-range and treble loudspeaker, centre mid-range and treble loudspeaker, rear left mid-range and bass loudspeaker	1398
14. Digital sound package control unit, navigation system with CD drive control unit, rear right treble loudspeaker, rear right mid-range and bass loudspeaker	1399
15. Navigation system with CD drive control unit, navigation system aerial	1400
16. Satellite radio, TV tuner, aerial amplifier	1401
17. Satellite radio, radio, radio, telephone and auxiliary heater aerial, radio aerial 2	1402
18. Radio	1403
19. Media player in position 1 and 2, CD changer, DVD player, CD ROM drive, connection for external audio source	1404
129 - Basic equipment	1405-1439
1. Basic equipment	1405
2. Battery, energy management control unit, battery isolation igniter, fuses	1406
3. Terminal 15 voltage supply relay, terminal 75 voltage supply relay 1	1407
4. Steering column electronics control unit, steering column voltage supply	1408
5. Turn signal switch, intermittent wiper switch, horn plate, steering angle sender, steering column electronics control unit	1409
6. Steering column electronics control unit, cruise control system switch	1410
7. Entry and start authorisation control unit, entry and start authorisation switch, steering column lock control element, entry and start authorisation button	1411
8. Onboard supply control unit, light switch	1412
9. Onboard supply control unit, hazard warning lights button, operating unit in front of centre console	1413
10. Onboard supply control unit, left side light bulb, front left turn signal bulb, left dipped beam bulb, left main beam bulb, driver side exterior mirror turn signal bulb	1414
11. Onboard supply control unit, right side light bulb, front right turn signal bulb, right dipped beam bulb, right main beam bulb, front passenger side exterior mirror turn signal bulb	1415
12. Onboard supply control unit, left and right fog light bulb, treble tone horn, bass tone horn	1416
13. Voltage supply onboard power supply control unit, fuses	1417
14. Convenience system central control unit	1418
15. Convenience system central control unit, left tail light bulb, rear left turn signal bulb, left brake light bulb, left reversing light bulb, rear left fog light bulb	1419
16. Convenience system central control unit, right tail light bulb, right brake light bulb, rear right turn signal bulb, right reversing light bulb, rear right fog light bulb	1420
17. Convenience system central control unit, number plate light, heated rear window, release button for rear lid lock cylinder	1421
18. Convenience system central control unit, brake light switch, high level brake light bulb	1422
19. Convenience system central control unit, luggage compartment light, rear lid light, rear footwell illumination	1423
20. Wiper motor control unit, windscreen wiper motor, washer pump, diagnostic connector, rain and light detector sensor	1424
21. Onboard supply control unit 2, servotronic	1425
22. Onboard supply control unit 2, headlight washer system pump, left and right headlight washer system pop-up washer jet motor, headlight washer system relay, washer jet heater element	1426
23. Control unit in dash panel insert, front brake pad wear sender, oil pressure switch	1427
24. Control unit in dash panel insert, oil level and oil temperature sender, brake fluid level warning contact, windscreen washer fluid level sender, coolant shortage indicator switch, ambient temperature sensor	1428
25. Control unit in dash panel insert, radio controlled clock, control unit for electromechanical parking brake, radio controlled clock receiver, data bus diagnostic interface	1429
26. Control unit in dash panel insert, data bus diagnostic interface, front information display and operating unit control unit, storage compartment illumination bulb, cup holder illumination	1430
27. Control unit in dash panel insert. fuel gauge sender. fuel system pressurisation pump. fuel pump.	1431

fuel gauge	
28. Fuel pump relay, electric fuel pump 2 relay	1432
29. Roof electronics control unit, illuminated vanity mirror, interior monitor send and receive module 1, automatic anti-dazzle interior mirror, light sensor, humidity sender, interior light switch	1433
30. Roof electronics control unit, interior light, front interior light button, reading light button	1434
31. Roof electronics control unit, rear operating unit for roof module, rear switch for rear roller blind	1435
32. Rear operating unit for roof module, rear reading light, rear interior light, rear reading light switch	1436
33. Rear operating unit for roof module, rear illuminated vanity mirror, glove compartment light, left and right footwell light	1437
34. Illuminated centre armrest, centre console rear storage compartment illumination bulb, 12 V socket	1438
35. Cigarette lighter, rear cigarette lighter	1439
130 - Convenience system	1440-1474
1. Convenience system	1440
2. Driver door control unit, window regulator thermal fuse	1441
3. Driver door control unit, driver door exterior handle touch sensor, driver side aerial for entry and start authorisation, entry and start authorisation control unit, driver door exterior handle central locking button	1442
4. Driver door control unit, front left door exterior handle illumination bulb, driver side central locking lock unit, driver door power latching system contact switch, driver door exterior handle switch	1443
5. Driver door control unit, window regulator switch, driver side window regulator motor, operating unit for window regulator in driver door	1444
6. Driver door control unit, childproof lock button, power latching control unit for driver door, driver door power latching motor	1445
7. Driver door control unit, mirror adjustment switch, mirror adjustment change-over switch, adjustment switch for mirror with fold-in feature, interior monitor deactivation switch, alarm system off switch, interior monitor send and receive module 1	1446
8. Driver door control unit, mirror adjustment motors, heated exterior mirror on driver side, entry light in exterior mirror, potentiometer for horizontal and vertical adjustment of driver side mirror	1447
9. Driver side door control unit, button for lane change assist, driver side automatic anti-dazzle exterior mirror	1448
10. Driver door control unit, central locking deadlock function warning lamp, driver side interior locking switch, driver side door warning lamp, front left entry light	1449
11. Driver door control unit, fuel tank flap release button, rear lid remote release button, driver door storage compartment illumination bulb	1450
12. Front passenger door control unit, front passenger side window regulator fuse, front passenger door power latching motor, power latching control unit for front passenger door	1451
13. Front passenger door control unit, entry and start authorisation control unit, front passenger door exterior handle touch sensor, front passenger side aerial for entry and start authorisation, front passenger door exterior handle central locking button	1452
14. Front passenger side door control unit, front right door exterior handle illumination bulb, front passenger door exterior handle switch, front passenger side central locking lock unit, front passenger door power latching system contact switch	1453
15. Front passenger door control unit, window regulator switch in front passenger door, front passenger side interior locking switch	1454
16. Front passenger door control unit, central locking deadlock function warning lamp on front passenger side, front right entry light, front passenger side door warning lamp, front passenger door storage compartment illumination	1455
17. Front passenger door control unit, front passenger side mirror adjustment motors, front passenger side entry light in exterior mirror, front passenger side heated exterior mirror, potentiometer for horizontal and vertical adjustment of front passenger side mirror	1456
18. Front passenger door control unit, lane change assist warning lamp in front passenger side exterior mirror, front passenger side exterior mirror turn signal bulb, front passenger side automatic anti-dazzle exterior mirror	1457
19. Rear left door control unit, rear left door exterior handle touch sensor, driver side rear entry and start authorisation aerial, power latching control unit for rear left door, rear left door power latching motor, rear left side roller blind control unit	1458
20. Rear left door control unit, rear left central locking lock unit, rear left door exterior handle switch, rear left exterior door handle illumination bulb	1459
21. Rear left door control unit, rear left central locking lock unit, rear left door power latching system contact switch	1460
22. Rear left door control unit. rear left entry light. rear left door warning lamp. rear left	1461

interior locking switch	
23. Rear left door control unit, rear left window regulator switch, in door, rear left ashtray illumination bulb, rear left window regulator motor, rear left door storage compartment illumination bulb	1462
24. Rear right door control unit, rear right door exterior handle touch sensor, front passenger side rear entry and start authorisation aerial, power latching control unit for rear right door, rear right door power latching motor, rear right side roller blind control unit, rear right door exterior handle central locking button	1463
25. Rear right door control unit, rear right door exterior handle switch, rear right central locking lock unit	1464
26. Rear right door control unit, rear right central locking lock unit	1465
27. Rear right door control unit, rear right door control unit, rear right door warning lamp, rear right interior locking switch, rear right door opener illumination bulb, rear right door ambient lighting bulb	1466
28. Rear right door control unit, rear right window regulator motor, rear right window regulator switch, in door, rear right ashtray illumination bulb, rear right door storage compartment illumination bulb	1467
29. Convenience system central control unit, fuses	1468
30. Convenience system central control unit, rear lid, switch in lock cylinder for rear lid, anti-theft alarm system, central locking system, release button for rear lid lock cylinder, rear lid central locking motor, alarm horn	1469
31. Convenience system central control unit, rear lid electric release motor, rear lid control unit, power latching system limit switch, luggage compartment locked, anti-theft and tilt system control unit, power latching control unit, tank filler flap locking motor	1470
32. Convenience system central control unit, luggage compartment light, rear lid light, button to close rear lid in luggage compartment	1471
33. Convenience system central control unit, rear left and right footwell illumination bulb	1472
34. Rear roller blind switch, rear roller blind motor	1473
35. Onboard supply control unit, bonnet contact switch, left footwell light, right footwell light	1474
131 - Audi A8 2.8 I - Fuel injection engine (154 kW - Motronic - 6-cylinder) engine code BDX	1475-1497
1. Audi A8 2.8 I - Fuel injection engine (154 kW - Motronic - 6-cylinder) engine code BDX	1475
2. Battery, energy management control unit, battery isolation igniter, fuses	1476
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	1477
4. Engine control unit, Motronic current supply relay	1478
5. Engine control unit, CAN disconnecter, fuses	1479
6. Engine control unit, injectors cylinder 1 up to 3, ignition coils 1 up to 3 with output stage	1480
7. Engine control unit, injectors cylinder 4 up to 6, ignition coils 4 up to 6 with output stage	1481
8. Engine control unit, actuator 1 up to 6 for camshaft adjustment	1482
9. Engine control unit, actuator 7 up to 12 for camshaft adjustment	1483
10. Engine control unit, inlet camshaft control valve, exhaust camshaft control valve	1484
11. Engine control unit, accelerator position sender, throttle valve module, variable intake manifold change-over valve, fuel metering valve, valve for oil pressure control	1485
12. Engine control unit, activated charcoal filter solenoid valve 1, electro-hydraulic engine mounting solenoid valve, gearbox mounting valve	1486
13. Engine control unit, engine speed sender, coolant temperature sender, knock sensors	1487
14. Engine control unit, Hall sender	1488
15. Engine control unit, intake air temperature sender, intake manifold pressure sender, fuel pressure sender for low pressure, fuel pressure sender, variable intake manifold position sender	1489
16. Engine control unit, kickdown switch, oil pressure switch, oil pressure switch for reduced oil pressure	1490
17. Engine control unit, lambda probe, lambda probe 2, lambda probe heater	1491
18. Engine control unit, lambda probe after catalytic converter, lambda probe 2 after catalytic converter, lambda probe 1 heater after catalytic converter	1492
19. Engine control unit, engine component current supply relay	1493
20. Engine control unit, brake light switch, kick-down switch, brake pedal switch	1494
21. Engine control unit, cold start relay for fuel pump, fuel pump fuse, radiator fan	1495
22. Control unit in dash panel insert, fuel gauge sender, fuel gauge sender 3, fuel system pressurisation pump, fuel pump control unit	1496
23. Control unit in dash panel insert, fuel gauge, fuel pump, fuel gauge sender, oil level and oil temperature sender	1497
132 - Anti-lock brake system 5.7 (ABS) with traction control system (TCS) and electronic stabilisation program (ESP)	1498-1505
1. Anti-lock brake system 5.7 (ABS) with traction control system (TCS) and electronic stabilisation program (ESP)	1498
2. ABS control unit, ABS control unit fuse 1	1499
3. ABS control unit. TCS and ESP button. operating unit in front of centre console	1500

4. Front-wheel drive, ABS control unit, front and rear speed sensor, lateral acceleration sender, yaw rate sender	1501
5. 6 and 8-cylinder engines four-wheel drive, ABS control unit, front and rear speed sensor	1502
6. 8, 10 and 12-cylinder engines four-wheel drive, ABS control unit, front and rear speed sensor	1503
7. ABS control unit, ABS return flow pump, ABS inlet and outlet valve, brake pressure sender 1	1504
8. ABS control unit, brake light switch, output speedometer	1505
133 - Lane change assist	1506-1509
1. Lane change assist	1506
2. Lane change assist control unit, fuses	1507
3. Lane change assist control unit, lane change assist control unit 2, button for lane change assist, lane change assist warning lamp	1508
4. Lane change assist control unit 2, lane change assist warning lamp in driver side exterior mirror, lane change assist warning lamp in front passenger side exterior mirror	1509
134 - Lane departure warning	1510-1512
1. Lane departure warning	1510
2. Lane departure warning control unit, windscreen heater for lane departure warning	1511
3. Data bus diagnostic interface, steering column electronics control unit, lane departure warning button, steering wheel vibration motor	1512
135 - Communication Japan (7Q6, 7D0, QV2, 8DZ)	1513-1526
1. Communication Japan (7Q6, 7D0, QV2, 8DZ)	1513
2. Data bus diagnostic interface, fuses	1514
3. Data bus diagnostic interface, front information display and operating unit control unit	1515
4. Front information display and operating unit control unit, multimedia system operating unit, operating unit in front of centre console	1516
5. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	1517
6. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	1518
7. Navigation system with CD drive control unit, front information display and operating unit control unit	1519
8. Navigation system with CD drive control unit, telephone transmitter and receiver unit, mobile telephone, microphone unit in front roof module	1520
9. Navigation system with CD drive control unit, chip card reader control unit, traffic data aerial	1521
10. Navigation system with CD drive control unit, telephone transmitter and receiver unit, chip card reader control unit, traffic data aerial	1522
11. Navigation system with CD drive control unit	1523
12. TV tuner, TV card reader, aerial, aerial amplifier	1524
13. Radio, open and close display limit switch, open and close display motor	1525
14. DVD player, CD changer, MiniDisc player, connection for external audio source	1526
136 - Interface for special functions:	1527-1529
1. Interface for special functions:	1527
2. Interface for special functions, fuses	1528
3. Interface for special functions:	1529
137 - Infotainment data bus (Most-Ring)	1530-1531
1. Infotainment data bus (Most-Ring)	1530
2. Infotainment data bus (Most-Ring)	1531
138 - Ringbreak diagnosis	1532-1533
1. Ringbreak diagnosis	1532
2. Ringbreak diagnosis (Wake up)	1533
139 - MMI with CD changer and DVD player (7D1)	1534-1535
1. MMI with CD changer and DVD player (7D1)	1534
2. DVD player and CD changer	1535
140 - MMI with TV tuner (QU1, QV2, QV9)	1536-1538
1. MMI with TV tuner (QU1, QV2, QV9)	1536
2. TV tuner, fuses	1537
3. TV tuner, aerial amplifier	1538
141 - Preparation for mobile telephone without hands-free system control unit (VDA interface) (9ZD)	1539-1541
1. Preparation for mobile telephone without hands-free system control unit (VDA interface) (9ZD)	1539
2. Fuses, microphone unit in front roof module	1540
3. Roof aerial, telephone aerial, navigation system aerial	1541
142 - MMI (information electronics I) with integrated preparation for mobile telephone and hands-free system (9ZF, 9ZG)	1542-1545
1. MMI (information electronics I) with integrated preparation for mobile telephone and hands-free system (9ZF, 9ZG)	1542
2. Control unit 1 for information electronics, fuses	1543
3. Control unit 1 for information electronics. microphone unit in front roof module. telephone	1544

bracket	
4. Aerial amplifier for mobile telephone, roof aerial, fuses	1545
143 - MMI (information electronics I) with integrated Bluetooth car phone (9ZW)	1546-1549
1. MMI (information electronics I) with integrated Bluetooth car phone (9ZW)	1546
2. Control unit for information electronics 1, fuses	1547
3. Control unit 1 for information electronics, microphone unit in front roof module, roof aerial	1548
4. Control unit 1 for information electronics, telephone brackets, fuses	1549
144 - MMI with radio and soundsystem standard (9VD)	1550-1556
1. MMI with radio and soundsystem standard (9VD)	1550
2. Radio, fuses	1551
3. Radio, aerial amplifier, auxiliary heater aerial	1552
4. Radio, aerial amplifier 2	1553
5. Radio, roof aerial	1554
6. Radio, front left and right mid-range and bass loudspeaker, front left and right treble loudspeaker	1555
7. Radio, rear left and right mid-range and bass loudspeaker, rear left and right treble loudspeaker	1556
145 - MMI with radio and soundsystem BOSE 6000 (8RY)	1557-1565
1. MMI with radio and soundsystem BOSE 6000 (8RY)	1557
2. Radio, fuses	1558
3. Radio, aerial amplifier, auxiliary heater aerial	1559
4. Radio, aerial amplifier 2	1560
5. Radio, roof aerial	1561
6. Digital sound package control unit, microphone unit in front roof module	1562
7. Digital sound package control unit, subwoofer in rear shelf, loudspeaker in rear shelf, front left and right bass loudspeaker	1563
8. Digital sound package control unit, centre mid-range and treble loudspeaker, front left and right mid-range and treble loudspeaker	1564
9. Digital sound package control unit, rear left and right mid-range and bass loudspeaker	1565
146 - MMI with radio and soundsystem Premium (Bang and Olufsen) (9VK)	1566-1577
1. MMI with radio and soundsystem Premium (Bang and Olufsen) (9VK)	1566
2. Radio, fuses	1567
3. Radio, aerial amplifier, auxiliary heater aerial	1568
4. Radio, aerial amplifier 2	1569
5. Radio, roof aerial	1570
6. Digital sound package control unit, microphone unit in front roof module	1571
7. Digital sound package control unit, centre mid-range and treble loudspeaker, front left and right bass loudspeaker	1572
8. Digital sound package control unit, front left and right treble loudspeaker, control motor for front left and right treble speaker	1573
9. Digital sound package control unit	1574
10. Digital sound package control unit, digital sound package control unit 2	1575
11. Digital sound package control unit, digital sound package control unit 2	1576
12. Digital sound package control unit 2, subwoofer in rear shelf, rear right and left mid-range and bass loudspeaker	1577
147 - MMI (information electronics I) (8YQ, 8DY, UF7, 7T6, 7D3)	1578-1586
1. MMI (information electronics I) (8YQ, 8DY, UF7, 7T6, 7D3)	1578
2. Data bus diagnostic interface, fuses	1579
3. Data bus diagnostic interface, control unit in dash panel insert	1580
4. Control unit for information electronics 1, multimedia system operating unit, display unit button, operating unit in front of centre console	1581
5. Control unit 1 for information electronics, microphone unit in front roof module	1582
6. Control unit 1 for information electronics, display unit for front information display and operating unit control unit	1583
7. Control unit for information electronics 1	1584
8. Control unit for information electronics 1, connection for external audio source	1585
9. Control unit 1 for information electronics, connection for external audio source, open and close display limit switch, open and close display motor	1586
148 - MMI (information electronics I) (8DZ, UF7, 7D3, 7Q6)	1587-1597
1. MMI (information electronics I) (8DZ, UF7, 7D3, 7Q6)	1587
2. Data bus diagnostic interface, fuses	1588
3. Data bus diagnostic interface, control unit in dash panel insert	1589
4. Control unit for information electronics 1, multimedia system operating unit, display unit button, operating unit in front of centre console	1590
5. Control unit 1 for information electronics, microphone unit in front roof module	1591
6. Control unit 1 for information electronics, display unit for front information display and operating unit control unit	1592

7. Control unit 1 for information electronics, chip card reader control unit, traffic data aerial	1593
8. Control unit 1 for information electronics, chip card reader control unit, traffic data aerial	1594
9. Control unit for information electronics 1, roof aerial, navigation system	1595
10. Control unit for information electronics 1, connection for external audio source	1596
11. Control unit 1 for information electronics, connection for external audio source, open and close display limit switch, open and close display motor	1597
801 - -Fitting locations: Earth points - 3	1598-1611
1. Earth points	1598-1611
1.1 Overview of earth points in engine compartment	1598-1600
1.2 Overview of earth points in vehicle interior	1601-1611
802 - -Fitting Locations: Fuses - 3	1612-1653
1. Fuses	1612-1653
1.1 Overview of fuses	1612-1613
1.2 Location of fuses (SB)	1614-1623
1.2.1 Fuses in fuse holder, left dash panel	1615-1618
1.2.2 Position of fuses on fuse holder, left dash panel, right-hand drive	1619-1623
1.3 Location of fuses (SC)	1624-1634
1.3.1 Fuses in fuse holder, right dash panel	1625-1630
1.3.2 Position of fuses on fuse holder, right dash panel, right-hand drive	1631-1634
1.4 Fuse locations on fuse holder, in electronics box	1635
1.5 Fuse locations on fuse holder, in electronics box, right-hand drive	1636
1.6 Position of fuses on fuse holder, on left behind dash panel	1637
1.7 Position of fuses on fuse holder, on right behind dash panel, right-hand drive	1638
1.8 Fuses on fuse holder, in front right footwell	1639
1.9 Fuses on fuse holder, in front right footwell, right-hand drive	1640
1.10 Position of fuses on main fuse carrier, right A-pillar	1641
1.11 Position of fuses on fuse holder, in right luggage compartment	1642
1.12 Fuses on fuse holder, on right in luggage compartment	1643
1.13 Position of fuses (SF) on fuse holder, on right in luggage compartment, up to model year 2003	1644
1.14 Position of fuses (SF) on fuse holder, on right in luggage compartment, from model year 2004	1645-1646
1.15 Position of fuses (SF) on fuse holder, in right luggage compartment, right-hand drive	1647-1648
1.16 Position of fuses (SD) on fuse holder, on left in luggage compartment, up to model year 2003	1649
1.17 Position of fuses (SD) on fuse holder, on left in luggage compartment, from model year 2004	1650-1651
1.18 Position fuse holder on left in luggage compartment, right-hand drive	1652-1653
803 - - Fitting locations: Relays - 3	1654-1660
1. Relay	1654-1660
1.1 Overview of relay carriers	1654-1660
1.1.1 Relay and fuse holder, in electronics box plenum chamber	1655
1.1.2 Position, relay and fuse holder behind left dash panel	1656
1.1.3 Position, relay and fuse holder behind right dash panel	1657
1.1.4 Position, relay and fuse holder in front right footwell, left-hand drive	1658
1.1.5 Position, relay and fuse holder in front left footwell, right-hand drive	1659
1.1.6 Position, relay and fuse holder, on right in luggage compartment	1660
804 - -Fitting Locations: Control units in front part of vehicle - 3	1661-1690
1. Control units in front part of vehicle	1661-1690
1.1 Control units overview	1661-1663
1.2 Front information display and operating unit control unit -J523-	1664
1.3 Display unit for front information display and operating unit control unit -J685-	1664
1.4 Steering column electronics control unit -J527-	1665
1.5 Driver side door control unit -J386-, front passenger door control unit -J387-	1665-1666
1.5.2 Location -J387-:	1665
1.5.3 Connector assignment:	1666
1.5.4 Pin connector front door:	1666
1.6 Power latching control unit for driver door -J760-, power latching control unit for front passenger door -J761-	1667
1.7 Onboard supply control unit 2 -J520-	1668-1669
1.7.2 Connector assignment:	1669
1.8 Roof electronics control unit -J528-	1670
1.9 Airbag control unit -J234-	1671-1672
1.9.2 Connector assignment:	1672
1.10 Seat and steering column adjustment control unit with memory -J136-	1673-1674
1.10.2 Connector assignment:	1674
1.11 Entry and start authorisation control unit -J518-	1675-1676
1.11.2 Location right-hand drive:	1675
1.11.3 Connector assignment:	1676
1.12 Onboard power supply control unit -J519-	1677-1678

1.12.2 Connector assignment:	1678
1.13 Headlight range control, control unit -J431-	1679-1680
1.13.2 Connector assignment:	1680
1.14 ABS control unit -J104-	1681
1.14.1 Connector assignment:	1681
1.15 Control unit in dash panel insert -J285-	1682
1.15.1 Connector assignment:	1682
1.16 Wiper motor control unit -J400-	1683
1.17 Automatic gearbox control unit -J217-, gearbox 09E/09L	1684
1.17.1 Connector assignment:	1684
1.18 Automatic gearbox control unit -J217-, gearbox 01J/01T	1685
1.18.1 Connector assignment:	1685
1.19 Data bus diagnostic interface -J533-	1686
1.20 Adaptive suspension control unit -J197-	1686-1687
1.20.2 Connector assignment:	1687
1.21 Engine control unit -J623-, engine control unit 2 -J624-	1688
1.22 Adaptive cruise control unit -J428-	1688-1689
1.22.2 Connector assignment:	1689
1.23 Garage door operation control unit -J530-	1690
1.23.1 Location:	1690
805 - -Fitting locations: Control units in rear part of vehicle - 3	1691-1707
1. Control units in rear part of vehicle	1691-1707
1.1 Control units overview	1691-1693
1.2 Anti-theft and tilt system control unit -J529-	1694
1.3 Rear right door control unit -J389- and rear left door control unit -J388-	1694-1695
1.3.2 Location -J388-:	1694
1.3.3 Connector assignment:	1695
1.3.4 Connector front door:	1695
1.4 Power latching control unit for rear right door -J763- and power latching control unit for rear left door -J762-	1696
1.4.1 Connector assignment:	1696
1.5 Rear seat adjustment with memory control unit -J522-, heated rear left seat control unit -J215- and heated rear right seat control unit -J216-	1697
1.6 Energy management control unit -J644- and convenience system central control unit -J393-	1697-1699
1.6.2 Connector assignment of energy management control unit -J644-:	1698
1.6.3 Connector assignment of convenience system central control unit -J393-:	1699
1.7 Heated windscreen control unit -J505-, electric park and handbrake control unit -J540- and trailer detector control unit -J345-	1700-1703
1.7.2 Connector assignment of trailer detector control unit -J345-:	1701
1.7.3 Connector assignment of heated windscreen control unit -J505-:	1702
1.7.4 Connector assignment of electric park and handbrake control unit -J540-:	1703
1.8 Aerial selection control unit -J515-	1704
1.9 Digital sound package control unit -J525-, TV tuner -R78-, navigation system with CD drive control unit -J401-, parking aid control unit -J446-, radio -R-, speech input control unit -J507- and digital radio -R147-	1704-1705
1.9.2 Connector assignment:	1705
1.10 Radio controlled clock receiver -J489-	1706
1.11 Tyre pressure monitor control unit -J502-	1706-1707
1.11.2 Connector assignment:	1707
806 - -Fitting locations: Coupling station and connectors from wiring harness set - 3	1708-1714
1. Coupling station and connectors from wiring harness set	1708-1714
1.1 Overview of coupling station and connectors, electronics box in plenum chamber	1708
1.2 Position electronics box in plenum chamber V6/V8/V10 - petrol engines	1709
1.3 Position electronics box in plenum chamber V6/V8 - TDI engines	1710
1.4 Position electronics box in plenum chamber, W12 engine	1711
1.5 Position electronics box in plenum chamber V6/V8/V10 - petrol engines, right-hand drive	1712
1.6 Position electronics box in plenum chamber V6/V8 - TDI engines, right-hand drive	1713
1.7 Position electronics box in plenum chamber, W12 engine, right-hand drive	1714