

1.3	Removing and installing brake caliper .....	78
1.4	Removing and installing brake disc .....	88
1.5	Removing and installing splash plate .....	92
1.6	Renewing brake caliper .....	93
1.7	Removing and installing brake pad wear sender .....	104
<b>2</b>	<b>Rear brakes .....</b>	<b>108</b>
2.1	Exploded view - rear brakes .....	108
2.2	Removing and installing brake pads .....	110
2.3	Removing and installing brake caliper .....	116
2.4	Removing and installing brake disc .....	120
2.5	Removing and installing splash plate .....	121
2.6	Renewing brake caliper .....	121
2.7	Removing and installing brake pad wear sender .....	127
<b>3</b>	<b>Parking brake .....</b>	<b>129</b>
3.1	Overview of fitting locations - parking brake .....	129
3.2	Removing and installing control unit for electromechanical parking brake J540 .....	130
3.3	Removing and installing parking brake motor V282 / V283 .....	131
<b>4</b>	<b>Releasing parking brake manually .....</b>	<b>135</b>
<b>5</b>	<b>Brake pedal .....</b>	<b>136</b>
5.1	Exploded view - brake pedal .....	136
5.2	Removing and installing mounting bracket .....	137
5.3	Separating brake pedal from brake servo .....	139
5.4	Connecting brake pedal to brake servo .....	140
5.5	Removing and installing brake pedal .....	140
5.6	Removing and installing brake pedal position sender G100 - hybrid vehicles .....	141
<b>47 - Brakes - hydraulics</b>	<b>142</b>	
<b>1</b>	<b>Front brake caliper .....</b>	<b>142</b>
1.1	Exploded view - front brake caliper .....	142
1.2	Removing and installing brake caliper piston .....	144
<b>2</b>	<b>Rear brake caliper .....</b>	<b>150</b>
2.1	Exploded view - rear brake caliper .....	150
2.2	Removing and installing brake caliper piston .....	151
<b>3</b>	<b>Brake servo / brake master cylinder .....</b>	<b>155</b>
3.1	Exploded view - brake servo / brake master cylinder .....	155
3.2	Removing and installing brake servo .....	156
3.3	Removing and installing brake master cylinder .....	158
3.4	Removing and installing brake fluid reservoir .....	160
<b>4</b>	<b>Vacuum system .....</b>	<b>165</b>
4.1	Vacuum pumps .....	165
4.2	Exploded view - electric vacuum pump .....	165
4.3	Exploded view - vacuum pump .....	168
4.4	Checking non-return valve .....	171
4.5	Removing and installing non-return valve .....	172
4.6	Removing and installing brake servo pressure sensor .....	175
4.7	Removing and installing electric vacuum pump .....	175
4.8	Removing and installing vacuum pump .....	177
<b>5</b>	<b>Brake lines .....</b>	<b>182</b>
5.1	Connection points .....	182
5.2	Routing of brake lines .....	182
<b>6</b>	<b>Hydraulic system .....</b>	<b>183</b>
6.1	General notes on brake fluid .....	183
6.2	Pre-bleeding hydraulic system .....	185
6.3	Bleeding hydraulic system .....	185

6.4      Leak test .....	190
--------------------------	-----