

Contents

00 - Technical data	1
1 General notes	1
1.1 Running gear	1
1.2 Steering	2
1.3 Types of tyre	2
1.4 General notes on Tyre Pressure Loss Indicator (TPLI+)	2
1.5 General notes on dynamic steering	3
1.6 General notes on drive shaft	4
2 Safety information	5
2.1 Safety precautions when working on high-voltage vehicles	5
2.2 Safety precautions when working on vehicles with start/stop system	5
2.3 Safety precautions when working on the subframe	5
2.4 Safety precautions when using testers and measuring instruments during a road test	6
3 Repair instructions	7
3.1 Checking shock absorbers on shock tester	7
3.2 Maximum values "a" in mm	8
3.3 Rules for cleanliness	9
3.4 General notes	9
3.5 General repair instructions	10
3.6 Contact corrosion	10
3.7 Steering rack	10
3.8 Gaskets, seals	11
3.9 Nuts, bolts	11
3.10 Electrical components	11
3.11 Repairing damaged threads in longitudinal member (subframe to body)	12
3.12 Lifting suspension to reference position - vehicles with air suspension	12
3.13 Raising and lowering vehicle when air spring system has/has not been opened	16
4 Disposal	17
4.1 Discharging front suspension strut (air suspension)	17
4.2 Discharging accumulator	18
4.3 Draining power steering rack	18
40 - Front suspension	20
1 Front axle	20
1.1 Overview - front axle	20
2 Subframe	21
2.1 Assembly overview - subframe	21
2.2 Removing and installing subframe with steering rack	32
2.3 Removing and installing subframe cross brace	60
2.4 Removing and installing subframe shield	63
2.5 Removing and installing anti-roll bar	65
2.6 Removing and installing coupling rod	68
3 Suspension strut, upper suspension links	70
3.1 Assembly overview - suspension strut, upper suspension links	70
3.2 Removing and installing suspension strut	73
3.3 Removing and installing upper links	79
3.4 Renewing bush for upper suspension link	84
3.5 Renewing boot	86
3.6 Charging suspension strut	91
3.7 Removing and installing shock absorber fork	94
3.8 Removing and installing strut brace	99
4 Lower suspension links, swivel joint	103

4.1	Assembly overview - lower suspension links, swivel joint	103
4.2	Removing and installing track control link	105
4.3	Removing and installing guide link	110
4.4	Renewing bush for track control link	114
4.5	Removing and installing swivel joint	121
4.6	Removing and installing bonded rubber bush for guide link	123
5	Wheel bearing	128
5.1	Assembly overview - wheel bearing	128
5.2	Removing and installing wheel bearing housing	131
5.3	Removing and installing wheel bearing unit	135
5.4	Servicing wheel bearing unit	137
6	Drive shaft	144
6.1	Assembly overview - drive shaft	144
6.2	Removing and installing drive shaft	147
6.3	Loosening and tightening bolt securing drive shaft	150
6.4	Removing and installing heat shield for drive shaft	152
6.5	Dismantling and assembling drive shaft	153
6.6	Servicing constant velocity joint	170
6.7	Checking outer constant velocity joint	172
6.8	Tightening hose clip on triple roller joint and outer joint	173
42	Rear suspension	176
1	Rear axle	176
1.1	Overview - rear axle	176
2	Subframe	177
2.1	Assembly overview - subframe	177
2.2	Fixing subframe in position	179
2.3	Removing and installing subframe	181
2.4	Servicing subframe	189
3	Anti-roll bar	228
3.1	Assembly overview - anti-roll bar	228
3.2	Removing and installing anti-roll bar	228
3.3	Removing and installing coupling rod	231
4	Suspension links, track rod	233
4.1	Assembly overview - transverse links	233
4.2	Removing and installing upper transverse link	236
4.3	Removing and installing lower transverse links	239
4.4	Removing and installing track rod	245
5	Suspension strut/shock absorber, spring	247
5.1	Assembly overview - suspension strut/shock absorber, spring	247
5.2	Removing and installing shock absorber	249
5.3	Removing and installing boot	255
6	Wheel bearing, trailing arm	261
6.1	Assembly overview - wheel bearing	261
6.2	Removing and installing wheel bearing housing	264
6.3	Removing and installing wheel bearing unit	268
6.4	Servicing wheel bearing unit	272
6.5	Renewing bonded rubber bush for wheel bearing housing	278
7	Drive shaft	284
7.1	Assembly overview - drive shaft	284
7.2	Removing and installing drive shaft	287
7.3	Loosening and tightening bolt securing drive shaft	288
7.4	Renewing constant velocity joint	289
7.5	Checking outer constant velocity joint	299

7.6	Checking inner constant velocity joint	299
43	- Self-levelling suspension	303
1	Electronic damping control	303
1.1	Assembly overview - electronic damping control	303
1.2	Re-adapting reference position	305
1.3	Bleeding or charging system	306
2	Vehicle level senders	308
2.1	Removing and installing front vehicle level sender G78/G289	308
2.2	Removing and installing rear vehicle level sender G76/G77	309
3	Air suspension	310
3.1	Assembly overview - air pipes	310
3.2	Assembly overview - air supply unit and solenoid valve block	315
3.3	Removing and installing adaptive suspension control unit J197	317
3.4	Servicing air pipe	318
3.5	Renewing connection piece	322
3.6	Removing and installing air supply unit	324
3.7	Removing and installing intake pipe with filter	327
3.8	Removing and installing adaptive suspension drain valve N111	328
3.9	Removing and installing solenoid valve block	331
3.10	Removing and installing accumulator	333
44	- Wheels, tyres, vehicle geometry	335
1	Wheels, tyres	335
2	Wheel alignment	336
2.1	Notes on wheel alignment	336
2.2	Test requirements	337
2.3	Preparations for measurement	338
2.4	Wheel alignment specifications	339
2.5	Wheel alignment procedure	341
2.6	When does wheel alignment have to be checked?	342
2.7	Explanatory notes on production control numbers (PR nos.)	343
2.8	Centralising camber at front wheels	344
2.9	Adjusting camber at rear wheels	348
2.10	Adjusting toe setting at rear wheels	349
2.11	Adjusting toe setting at front wheels	349
2.12	Wheel runout compensation	350
2.13	Checking centre position of rack (mechanical method)	351
2.14	Checking maximum steering angle	352
2.15	Checking reference position for wheel alignment (vehicles with air suspension)	352
3	Dynamic steering	354
3.1	Assembly overview - dynamic steering	354
3.2	Removing and installing active steering control unit J792	355
3.3	Basic setting for dynamic steering	357
4	Adaptive cruise control	360
4.1	Calibrating adaptive cruise control	360
5	Front camera for driver assist systems	369
5.1	Calibrating front camera for driver assist systems	369
6	Night vision system	377
6.1	Calibrating night vision system	377
48	- Steering	386
1	Steering wheel	386
1.1	Assembly overview - steering wheel	386
1.2	Removing and installing steering wheel	386



2	Steering column	389
2.1	Assembly overview - steering column	389
2.2	Checking steering column for damage	391
2.3	Handling and transporting steering column	392
2.4	Removing and installing steering column	393
2.5	Removing and installing safety lock for active steering (locking solenoid)	398
2.6	Removing and installing intermediate steering shaft	402
2.7	Removing and installing control unit for electronic steering column lock J764	406
2.8	Removing and installing control unit for electrically adjustable steering column J866	408
3	Steering rack	410
3.1	Assembly overview - steering rack	410
3.2	Removing and installing steering rack	420
3.3	Removing and installing boot	433
3.4	Removing and installing track rod	445
3.5	Removing and installing track rod ball joint	455
3.6	Centralising steering	459
3.7	Adjusting steering rack	460
3.8	Removing and installing servotronic solenoid valve N119	461
4	Hydraulic power steering	463
4.1	Assembly overview - hydraulic lines, reservoir	463
4.2	Assembly overview - power steering vane pump	480
4.3	Checking fluid level in power steering system	492
4.4	Bleeding steering system after repairs	493
4.5	Checking steering system for leaks	494
4.6	Checking delivery pressure of power steering vane pump	495
4.7	Removing and installing power steering vane pump	511
4.8	Removing and installing hydraulic fluid cooler	550