

Contents

91 - Communication	1
1 Infotainment system	1
1.1 Layout - infotainment system	1
1.2 Overview of fitting locations - infotainment system	3
1.3 Removing and installing control unit 1 for information electronics J794	10
1.4 Removing and installing infotainment system display	14
1.5 Removing and installing multimedia system operating unit E380	18
1.6 Pin assignment	22
2 Sound system	45
2.1 Layout - sound system	45
2.2 Overview of fitting locations - sound system	49
2.3 Overview of fitting locations - ANC microphones	57
2.4 Removing and installing digital sound package control unit/amplifier	58
2.5 Removing and installing rear treble loudspeakers R14/R16	71
2.6 Removing and installing front treble loudspeakers R20/R22	72
2.7 Removing and installing rear mid-range loudspeakers	76
2.8 Removing and installing front mid-range loudspeakers	77
2.9 Removing and installing rear mid-range and bass loudspeakers	79
2.10 Removing and installing rear bass loudspeakers R15/R17	79
2.11 Removing and installing front bass loudspeakers R21/R23	80
2.12 Removing and installing subwoofer R211	82
2.13 Removing and installing effect loudspeakers	84
2.14 Removing and installing centre loudspeaker	86
2.15 Removing and installing ANC microphones R142/R143/R144/R145	88
2.16 Pin assignment	89
3 Aerial systems	96
3.1 Layout - aerial systems	96
3.2 Overview of fitting locations - aerial systems	97
3.3 Removing and installing aerial amplifier	99
3.4 Removing and installing traffic data aerial	103
3.5 Removing and installing dedicated short-range communication aerial	104
3.6 Removing and installing roof aerial	105
3.7 Removing and installing bumper aerials	106
3.8 Pin assignment for aerial amplifier	107
4 Radio	110
4.1 Removing and installing radio	110
4.2 Pin assignment	115
5 DVD/CD changer	122
5.1 Pin assignment	122
5.2 Removing and installing DVD changer	123
6 Telephone system	125
6.1 Layout - telephone	125
6.2 Overview of fitting locations - telephone system	134
6.3 Assembly overview - microphone unit	138
6.4 Removing and installing microphone unit in front roof module R164	139
6.5 Removing and installing aerial amplifier for mobile telephone R86	140
6.6 Removing and installing telephone bracket R126	143
6.7 Pin assignment	145
7 Navigation system	157
7.1 Layout - navigation system	157
7.2 Overview of fitting locations - navigation system	160
7.3 Pin assignment	162

7.4	Removing and installing chip card reader control unit	169
8	TV system	171
8.1	Layout - TV system	171
8.2	Overview of fitting locations - TV system	177
8.3	Pin assignment	181
8.4	Removing and installing TV tuner	186
8.5	Removing and installing TV card reader	190
9	Reversing camera system	192
9.1	Layout - reversing camera system	192
9.2	Overview of fitting locations - reversing camera system	193
9.3	Removing and installing reversing camera R189	195
9.4	Calibrating reversing camera system	196
9.5	Removing and installing reversing camera system control unit J772	203
9.6	Connectors on reversing camera system control unit J772	206
10	Multifunction steering wheel	209
10.1	Layout - multifunction steering wheel	209
10.2	Assembly overview - multi-function steering wheel	209
10.3	Removing and installing multifunction buttons in steering wheel E441/E440	210
10.4	Removing and installing tiptronic switches in steering wheel E439/E438	214
11	Voice control system	215
11.1	Layout - voice control system	215
11.2	Removing and installing speech dialogue system	216
12	Connection for external multimedia devices	218
12.1	Layout - external multimedia devices	218
12.2	Connectors on connection for external multimedia devices	219
12.3	Removing and installing connection for external audio sources R199	220
13	Rear Seat Entertainment system (RSE)	223
13.1	Layout - Rear Seat Entertainment system	223
13.2	Overview of fitting locations - Rear Seat Entertainment system	223
14	Night vision system	225
14.1	Overview of fitting locations - night vision system	225
14.2	Removing and installing camera for night vision system	227
14.3	Removing and installing control unit for night vision system	231
15	Overhead view camera	233
15.1	Layout - overhead view camera system	233
15.2	Overview of fitting locations - overhead view camera	235
15.3	Removing and installing control unit for overhead view camera J928	237
15.4	Removing and installing rear overhead view camera R246	240
15.5	Removing and installing front overhead view camera R243	241
15.6	Removing and installing left overhead view camera R244/right overhead view camera R245	242
15.7	Calibrating overhead view camera	243
15.8	Pin assignment for control unit for overhead view camera J928	263