

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with start/stop system	2
1.2 Safety precautions when working on high-voltage vehicles	3
1.3 Safety precautions when working on pyrotechnic components	4
1.4 Storing, transporting and disposing of airbag units, belt tensioner units and battery isolators (pyrotechnic components)	6
1.5 Additional safety regulations for side airbags	6
1.6 Additional safety regulations for curtain airbags	7
1.7 Safety regulations for crash sensors (pressure sensors) for front side airbag	8
1.8 Additional safety regulations for working on seat occupied sensor controlling deactivation of front passenger airbag - country-specific version	8
1.9 Procedure for dealing with seat occupied sensor controlling deactivation of front passenger airbag following an accident - country-specific version	9
1.10 Additional safety regulations for active head restraints	9
1.11 Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident	10
1.12 Checking airbag mounting components following an accident	11
1.13 Accident in which no airbag was triggered	12
1.14 Checking seat belts	12
1.15 Checking belt webbing	12
1.16 Checking automatic belt retractor (locking action)	13
1.17 Visual inspection of belt buckle	14
1.18 Functional check of belt buckle	14
1.19 Checking guide fittings and latch plate	14
1.20 Checking securing components and anchorage points following an accident	15
1.21 Checking child seat restraint function of seat belt for additional child seats (not for driver seat belt; country-specific version)	15
1.22 Checking child seat anchors following an accident	15
1.23 Safety regulations for automatic anti-dazzle interior mirror	16
2 Repair instructions	17
2.1 Contact corrosion	17
2.2 Routing and attachment of pipes, hoses and wiring	17
68 - Interior equipment	18
1 Storage compartments/covers/trim panels	18
1.1 Overview of fitting locations - storage compartments/covers/trim panels	18
1.2 Assembly overview - dash panel cover (driver side)	19
1.3 Assembly overview - steering column trim	20
1.4 Assembly overview - glove compartment	21
1.5 Removing and installing dash panel cover (driver side)	23
1.6 Removing and installing gap cover for dash panel insert	25
1.7 Removing and installing upper steering column trim	25
1.8 Removing and installing lower steering column trim	27
1.9 Removing and installing glove compartment opening mechanism	28
1.10 Removing and installing glove compartment	29
1.11 Manual release for glove compartment cover	34
1.12 Removing and installing glove compartment trim panel	35
1.13 Removing and installing glove compartment cover	36
1.14 Removing and installing restrictor for glove compartment cover	37
2 Equipment	38
2.1 Assembly overview - sun visors	38
2.2 Assembly overview - sun blind	38
2.3 Removing and installing sun visor	40



2.4	Removing and installing sun visor centre mount	40
2.5	Removing and installing sun blind	41
2.6	Removing and installing grab handle	44
3	Centre console	45
3.1	Assembly overview - centre console	45
3.2	Removing and installing rear centre console trim	57
3.3	Removing and installing cover for centre console	60
3.4	Removing and installing front centre console storage compartment	64
3.5	Removing and installing front centre console footwell trim	66
3.6	Removing and installing centre console footwell trim (rear)	67
3.7	Removing and installing centre console	68
3.8	Removing and installing trim panel for centre console	70
3.9	Removing and installing cup holders	72
3.10	Removing and installing rear centre console storage compartment	75
3.11	Removing and installing bracket for interface for external multimedia devices	76
3.12	Removing and installing brackets for centre console	77
3.13	Removing and installing folding table	81
3.14	Removing and installing rear centre armrest	83
4	Front centre armrest	85
4.1	Assembly overview - front centre armrest	85
4.2	Removing and installing front centre armrest	87
4.3	Removing and installing upper part of centre armrest	88
5	Interior mirror	92
5.1	Assembly overview - interior mirror	92
5.2	Removing and installing interior mirror	93
5.3	Switching automatic anti-dazzle function on and off	94
5.4	Switching compass display on and off	95
5.5	Setting magnetic deflection zone	95
5.6	Calibrating digital compass	96
5.7	Adjusting automatic anti-dazzle interior mirror for right-hand drive or left-hand drive vehicles	97
5.8	Selecting the applicable deflection zone from the map	97
5.9	Checking operation of automatic anti-dazzle interior mirror	103
69	Passenger protection	105
1	Seat belts	105
1.1	Overview of fitting locations - seat belts and anchorage points	105
1.2	Assembly overview - front three-point seat belt	107
1.3	Assembly overview - rear outer three-point seat belt	109
1.4	Assembly overview - rear centre three-point seat belt	110
1.5	Assembly overview - front belt buckle	111
1.6	Assembly overview - rear belt buckle	112
1.7	Removing and installing front three-point seat belt	115
1.8	Removing and installing rear three-point seat belt	118
1.9	Removing and installing front belt guide	122
1.10	Removing and installing rear belt guide	123
1.11	Removing and installing front belt end fitting	124
1.12	Removing and installing rear outer belt end fitting	125
1.13	Removing and installing rear belt guide fitting	126
1.14	Removing and installing belt height adjuster	127
1.15	Removing and installing front belt buckle	131
1.16	Removing and installing rear belt buckle	132
2	Child seat anchors	134
2.1	Removing and installing rear child seat anchor	134
3	Airbag system	135

3.1	Overview of fitting locations - airbag system	135
4	Airbag control unit	138
4.1	Assembly overview - airbag control unit	138
4.2	Removing and installing airbag control unit J234	138
5	Battery isolation igniter	141
5.1	Assembly overview - battery isolation igniter	141
5.2	Removing and installing battery isolation igniter	141
6	Airbag (driver side)	145
6.1	Assembly overview - driver airbag	145
6.2	Removing and installing airbag unit with igniters	147
6.3	Renewing connector at airbag	150
7	Front passenger airbag	153
7.1	Assembly overview - front passenger airbag	153
7.2	Removing and installing front passenger airbag unit with igniters	155
7.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	158
8	Side airbags	161
8.1	Assembly overview - front side airbag	161
8.2	Assembly overview - rear side airbag	161
8.3	Removing and installing front side airbag with igniter	163
8.4	Removing and installing rear side airbag with igniter	164
9	Curtain airbags	169
9.1	Assembly overview - curtain airbag	169
9.2	Removing and installing curtain airbag with igniter	170
10	Knee airbags	174
10.1	Assembly overview - knee airbag	174
10.2	Removing and installing knee airbag with igniter	177
11	Crash sensors for airbags	184
11.1	Overview of fitting locations - crash sensors for airbags	184
11.2	Removing and installing front airbag crash sensor G283/G284	186
11.3	Removing and installing front side airbag crash sensor G179/G180	188
11.4	Removing and installing rear side airbag crash sensor G256/G257	190
12	Seat position sensor	193
12.1	Assembly overview - seat position sensor	193
12.2	Removing and installing seat position sensor	194
13	Belt-fastened recognition system	200
13.1	Removing and installing seat occupied sensor on front passenger side G128	200
14	Seat occupied recognition system	203
14.1	Overview of fitting locations - seat occupied recognition system	203
14.2	Removing and installing seat occupied sensor	205
15	Pedestrian protection	210
15.1	Assembly overview - pedestrian protection	210
15.2	Removing and installing crash sensor for pedestrian protection G570/G571	211
15.3	Removing and installing centre crash sensor for pedestrian protection G693	213
70	Trim, insulation	216
1	Front door trim	216
1.1	Assembly overview - front door trim	216
1.2	Removing and installing bass loudspeaker trim	220
1.3	Removing and installing mid-range loudspeaker trim	221
1.4	Removing and installing trim panel	222
1.5	Removing and installing front door trim	223
1.6	Removing and installing front armrest	230
1.7	Removing and installing switch trim	232
1.8	Removing and installing interior door handle	233

1.9	Removing and installing window frame trim	233
2	Rear door trim	236
2.1	Assembly overview - rear door trim	236
2.2	Assembly overview - sun blind for door window	239
2.3	Removing and installing mid-range loudspeaker trim	239
2.4	Removing and installing interior door handle	241
2.5	Removing and installing rear door trim	242
2.6	Removing and installing rear armrest	246
2.7	Removing and installing window frame trim	248
2.8	Removing and installing sun blind for door window	249
3	Dash panel	254
3.1	Overview of fitting locations - dash panel	254
3.2	Assembly overview - dash panel	256
3.3	Removing and installing dash panel cover (side)	263
3.4	Removing and installing cover for MMI screen	263
3.5	Removing and installing loudspeaker trim	264
3.6	Removing and installing trim for entry and start authorisation switch	266
3.7	Removing and installing dash panel covers and trim panels	267
3.8	Removing and installing dash panel	278
3.9	Removing and installing dash panel vents	283
3.10	Removing and installing front centre defroster vent	285
4	Central tube for dash panel	287
4.1	Assembly overview - central tube for dash panel	287
4.2	Removing and installing central tube for dash panel	290
4.3	Removing and installing mounting bracket	295
4.4	Removing and installing retaining bracket for central tube for dash panel	296
4.5	Removing and installing glove compartment bracket	296
4.6	Removing and installing bracket for dash panel cover	298
4.7	Removing and installing brackets for head-up display	299
5	Passenger compartment trim panels	300
5.1	Overview of fitting locations - passenger compartment trim panels	300
5.2	Assembly overview - sill panel moulding	301
5.3	Assembly overview - A-pillar trim	303
5.4	Assembly overview - B-pillar trim	305
5.5	Assembly overview - C-pillar trim	307
5.6	Assembly overview - D-pillar trim	307
5.7	Assembly overview - roof frame trim	309
5.8	Assembly overview - foot rest and floor covering	310
5.9	Assembly overview - rear shelf	311
5.10	Removing and installing sill panel moulding	313
5.11	Removing and installing A-pillar trim	315
5.12	Removing and installing B-pillar trim	320
5.13	Removing and installing C-pillar trim	325
5.14	Removing and installing D-pillar trim	326
5.15	Removing and installing roof frame trim	329
5.16	Removing and installing foot rest	330
5.17	Removing and installing floor covering	331
5.18	Removing and installing rear shelf	334
5.19	Removing and installing loudspeaker trim	335
6	Luggage compartment trim panels	337
6.1	Overview of fitting locations - luggage compartment trim panels	337
6.2	Assembly overview - luggage compartment side trim	338
6.3	Assembly overview - luggage compartment back panel trim	341
6.4	Assembly overview - luggage compartment trim (top)	343
6.5	Assembly overview - luggage compartment floor	344

6.6	Assembly overview - lower rear lid trim	346
6.7	Assembly overview - lock carrier trim	347
6.8	Removing and installing lower rear lid trim	348
6.9	Removing and installing luggage compartment side trim	352
6.10	Removing and installing luggage compartment back panel trim	357
6.11	Removing and installing luggage compartment trim (top)	362
6.12	Removing and installing luggage compartment floor	364
6.13	Removing and installing cover for high-voltage battery unit	368
6.14	Removing and installing lock carrier trim	370
6.15	Removing and installing fastening ring	371
6.16	Removing and installing grip for rear luggage compartment floor	371
6.17	Removing and installing lining for spare wheel well	373
7	Roof trim panels	374
7.1	Overview of fitting locations - roof trim	374
7.2	Assembly overview - roof end strip	375
7.3	Assembly overview - moulded headliner	376
7.4	Removing and installing roof end strip	377
7.5	Removing and installing moulded headliner	378
7.6	Attaching roof reinforcement to body	382
72	Seat frames	384
1	Overview - seat versions	384
1.1	Overview of fitting locations - seat versions	384
1.2	Attaching front seat to seat repair stand	386
2	Front seats	388
2.1	Overview of fitting locations - electrical and electronic components	388
2.2	Assembly overview - front seat	395
2.3	Assembly overview - front seat backrest	402
2.4	Assembly overview - head restraint	412
2.5	Assembly overview - seat pan	419
2.6	Removing and installing front seat	438
2.7	Connecting and disconnecting airbag adapter	449
2.8	Removing and installing seat height adjustment unit	453
2.9	Removing and installing seat rake adjustment unit	456
2.10	Removing and installing backrest adjustment unit	458
2.11	Removing and installing front seat backrest	462
2.12	Removing and installing head restraint	485
2.13	Checking triggered active head restraint for damage	493
2.14	Reactivating triggered active head restraint	494
2.15	Removing and installing head restraint guide	495
2.16	Dismantling and assembling seat pan	498
2.17	Removing and installing lumbar support adjustment switch E176/E177	534
2.18	Removing and installing lumbar support adjustment motor V125/V126/V129/V130	535
3	Front seat pneumatic system	536
3.1	Assembly overview - pneumatic system	536
3.2	Connection diagram - pneumatic system	538
3.3	Assembly overview - compressor	539
3.4	Assembly overview - control unit/module carrier/backrest fan	540
3.5	Assembly overview - backrest padding with massage mat	542
3.6	Assembly overview - seat and backrest bolster adjusters	542
3.7	Checking pneumatic system	543
3.8	Severing and connecting pneumatic lines	556
3.9	Repairing pneumatic lines	557
3.10	Removing and installing compressor for multicontour seat V439/V440	558
3.11	Removing and installing non-return valve	561



3.12	Removing and installing control unit for front multicontour seat J873/J872	562
3.13	Removing and installing module carrier with air cushions	564
3.14	Removing and installing valve block for massage mat	566
3.15	Removing and installing massage function button E670/E671	568
3.16	Removing and installing seat bolster adjuster	568
3.17	Removing and installing backrest bolster adjuster	569
4	Rear seats	571
4.1	Overview of fitting locations - electrical and electronic components	571
4.2	Assembly overview - bench seat/individual seats	573
4.3	Assembly overview - head restraint and head restraint guide	578
4.4	Assembly overview - rear seat backrest	579
4.5	Assembly overview - centre armrest	582
4.6	Assembly overview - rear seat backrest storage compartment	584
4.7	Removing and installing bench seat/individual seats	587
4.8	Removing and installing head restraint	594
4.9	Removing and installing head restraint guide	595
4.10	Removing and installing rear seat backrest	595
4.11	Removing and installing seat longitudinal adjustment unit	598
4.12	Removing and installing seat rake adjustment unit	600
4.13	Removing and installing rear upper backrest adjustment motor V266/V267	601
4.14	Removing and installing seat heating control unit J882	602
4.15	Removing and installing rear seat adjustment control unit J876/J877	603
4.16	Removing and installing rear seat fan V271/V270	605
4.17	Removing and installing rear seat backrest fan V273 / V272	605
4.18	Removing and installing centre armrest	606
4.19	Removing and installing attachments for centre armrest	609
4.20	Removing and installing rear seat backrest storage compartment	617
4.21	Removing and installing attachments for rear seat backrest storage compartment	620
5	Rear seat pneumatic system	624
5.1	Assembly overview - pneumatic system	624
5.2	Connection diagram - pneumatic system	625
5.3	Assembly overview - compressor	626
5.4	Assembly overview - module carrier	627
5.5	Assembly overview - backrest padding with massage mat	629
5.6	Checking pneumatic system	629
5.7	Severing and connecting pneumatic lines	638
5.8	Repairing pneumatic lines	639
5.9	Removing and installing compressor for multicontour seat V441/V442	640
5.10	Removing and installing control unit for multicontour seat J875/J874	643
5.11	Removing and installing module carrier	645
5.12	Removing and installing valve block for massage mat N479 / N480 / N481 / N482	646
74	Seat - padding, covers	648
1	Covers and padding on front seats	648
1.1	Assembly overview - seat pan cover and padding	648
1.2	Assembly overview - backrest cover and padding	651
1.3	Assembly overview - seat heater elements	656
1.4	Removing and installing seat pan cover and padding	659
1.5	Removing and installing backrest cover and padding	663
1.6	Separating seat pan cover and padding	671
1.7	Separating backrest cover and padding	673
1.8	Removing and installing seat bolster padding	675
1.9	Removing and installing lateral support heater Z31/Z33	678
1.10	Removing and installing backrest lateral support heater Z32 / Z34	680
2	Covers and padding on rear seats	681

2.1	Assembly overview - cover and padding	681
2.2	Assembly overview - head restraint cover and padding	688
2.3	Assembly overview - seat heater elements	688
2.4	Removing and installing cover and padding	691
2.5	Detaching cover from padding	695
2.6	Removing and installing head restraint cover and padding	700
76	- Gas, water, electricity	702
1	Refrigerator box	702
1.1	Assembly overview - refrigerator box	702
1.2	Removing and installing refrigerator box	705
1.3	Removing and installing attachments	706