

Contents

00 - Technical data	1
1 Repair instructions	1
1.1 Routing and attachment of pipes, hoses and wiring	1
1.2 Contact corrosion	1
1.3 Bonding surfaces for adhesive strips	1
1.4 Self-locking bolts	2
50 - Body - front	3
1 Lock carrier	3
1.1 Exploded view - lock carrier	3
1.2 Removing and installing lock carrier	6
1.3 Setting service position and returning to normal position	14
2 Wing	18
2.1 Exploded view - wing	18
2.2 Removing and installing wing	20
3 Bulkhead	21
3.1 Exploded view - plenum chamber partition panel	21
3.2 Exploded view - plenum chamber cover	23
3.3 Removing and installing plenum chamber cover	23
55 - Bonnet, rear lid	26
1 Bonnet	26
1.1 Exploded view - bonnet	26
1.2 Exploded view - Bowden cable	32
1.3 Removing and installing bonnet	35
1.4 Adjusting bonnet	37
1.5 Removing and installing bonnet lock	38
1.6 Removing and installing operating lever for bonnet lock	39
1.7 Removing and installing striker	41
1.8 Removing and installing hinges	44
1.9 Removing and installing insulation	48
1.10 Removing and installing gas strut	49
1.11 Releasing gas from gas strut	50
1.12 Removing and installing Bowden cable	50
2 Rear lid	53
2.1 Exploded view - rear lid	53
2.2 Removing and installing rear lid	59
2.3 Adjusting rear lid	61
2.4 Removing and installing motor for rear lid	64
2.5 Removing and installing rear lid lock	65
2.6 Removing and installing hinges	66
2.7 Removing and installing rear lid seal	71
2.8 Removing and installing gas strut	72
2.9 Releasing gas from gas strut	72
3 Tank flap unit	74
3.1 Exploded view - tank flap unit	74
3.2 Removing and installing tank flap unit	76
3.3 Removing and installing actuator	80
57 - Front doors, door components, central locking	81
1 Door	81
1.1 Exploded view - door	81



1.2	Removing and installing inner door seal	82
1.3	Removing and installing outer door seal	84
1.4	Removing and installing door	91
1.5	Adjusting door	92
1.6	Adjusting striker	96
1.7	Removing and installing door arrester	97
2	Door components	99
2.1	Exploded view - window regulator	99
2.2	Exploded view - door handle and door lock	100
2.3	Exploded view - window guides and window slot trim strips	104
2.4	Removing and installing window regulator motor	106
2.5	Removing and installing window regulator	108
2.6	Removing and installing power latching motor	110
2.7	Removing and installing inner door cover	111
2.8	Removing and installing striker	113
2.9	Removing and installing door handle	114
2.10	Removing and installing mounting bracket	118
2.11	Removing and installing door lock	121
2.12	Removing and installing window guide	126
2.13	Removing and installing outer window slot trim strip	128
3	Central locking system	131
3.1	Overview of fitting locations - central locking system	131
3.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	132
3.3	Removing and installing rear left door control unit J388 and rear right door control unit J389	132
3.4	Removing and installing convenience system central control unit J393	133
3.5	Removing and installing interface control unit for vehicle location system J843	135
3.6	Removing and installing rear lid control unit J605	135
3.7	Removing and installing tank filler flap locking motor V155	135
58	Rear doors, door components	138
1	Door	138
1.1	Exploded view - door	138
1.2	Removing and installing inner door seal	139
1.3	Removing and installing outer door seal	140
1.4	Removing and installing door	149
1.5	Adjusting door	150
1.6	Adjusting striker	154
1.7	Removing and installing door arrester	155
2	Door components	157
2.1	Exploded view - window regulator	157
2.2	Exploded view - door handle and door lock	158
2.3	Exploded view - window guides and window slot trim strips	161
2.4	Removing and installing window regulator motor	163
2.5	Removing and installing window regulator	165
2.6	Removing and installing power latching motor	167
2.7	Removing and installing inner door cover	168
2.8	Removing and installing striker	170
2.9	Removing and installing door handle	171
2.10	Removing and installing mounting bracket	175
2.11	Removing and installing door lock	178
2.12	Removing and installing window guide	183
2.13	Removing and installing window slot trim strip	185
60	Sunroof	188

1	Sliding sunroof	188
1.1	Exploded view - sliding sunroof	188
1.2	Exploded view - sliding panoramic sunroof	190
1.3	Exploded view - sliding sunroof seals	191
1.4	Exploded view - guide rails and tilt mechanism	193
1.5	Exploded view - sunroof sun blind	196
1.6	Removing and installing sliding sunroof	198
1.7	Removing and installing sliding sunroof frame	206
1.8	Removing and installing wind deflector	212
1.9	Removing and installing glass panel	217
1.10	Adjusting glass panel	220
1.11	Removing and installing motor for sunroof sun blind	221
1.12	Removing and installing sliding sunroof seals	225
1.13	Removing and installing mounting frame for sunroof sun blind	225
1.14	Removing and installing sliding sunroof sun blind	226
2	Water drain hoses	233
2.1	Overview - water drain hoses	233
2.2	Cleaning water drain hoses	234
2.3	Removing and installing water drain hoses	236
63	- Bumpers	240
1	Bumper (front)	240
1.1	Exploded view - bumper cover	240
1.2	Exploded view - impact bar	246
1.3	Removing and installing bumper cover	249
1.4	Removing and installing impact bar	254
1.5	Removing and installing attachments	256
2	Bumper (rear)	266
2.1	Exploded view - bumper cover	266
2.2	Exploded view - impact bar	272
2.3	Removing and installing bumper cover	273
2.4	Removing and installing impact bar	277
2.5	Removing and installing attachments	281
64	- Glazing	289
1	Repair instructions	289
1.1	Minimum drying times for bonded windows	289
1.2	Repairing windows	289
1.3	Notes on installing flush-bonded windows	290
1.4	Preparing undamaged windows for installation	293
1.5	Preparing new windows for installation	293
1.6	Preparing body flange for installation	296
1.7	Cleaning off adhesive sealant	296
1.8	Re-sealing windows	296
2	Windscreen	298
2.1	Exploded view - windscreen	298
2.2	Removing and installing windscreen	300
3	Rear window	308
3.1	Exploded view - rear window	308
3.2	Removing and installing rear window	310
4	Side windows	316
4.1	Exploded view - side window	316
4.2	Removing and installing side window	316
5	Door windows	319
5.1	Exploded view - front door window	319



5.2	Exploded view - rear door window	319
5.3	Removing and installing front door window	320
5.4	Removing and installing rear door window	322
66	- Exterior equipment	325
1	Radiator grille/front trim panel	325
1.1	Exploded view - radiator grille	325
1.2	Removing and installing radiator grille	328
2	Spoiler	335
2.1	Removing and installing spoiler	335
3	Strips / trim panels / extensions	338
3.1	Exploded view - trim strip and covers	338
3.2	Exploded view - side member trim	341
3.3	Exploded view - water deflector strip	342
3.4	Exploded view - trim panel for B-pillar	343
3.5	Exploded view - trim panel for C-pillar	344
3.6	Exploded view - heat shield	345
3.7	Removing and installing trim strip	347
3.8	Removing and installing side member trim	362
3.9	Removing and installing trim panel for B-pillar on door	365
3.10	Removing and installing trim panel for C-pillar on door	367
3.11	Removing and installing heat shield for floor	369
4	Noise insulation	380
4.1	Exploded view - noise insulation	380
4.2	Removing and installing noise insulation	382
5	Underbody trim	384
5.1	Exploded view - underbody trim	384
5.2	Removing and installing underbody trim	387
5.3	Removing and installing tunnel cross-piece	393
6	Exterior mirrors	395
6.1	Exploded view - exterior mirror	395
6.2	Removing and installing exterior mirror	397
6.3	Removing and installing mirror glass	398
6.4	Removing and installing mirror adjustment unit	399
6.5	Removing and installing cover for mirror	400
6.6	Removing and installing mirror trim	401
6.7	Removing and installing cover (bottom) for exterior mirror	402
7	Wheel housing liners	403
7.1	Exploded view - wheel housing liner (front)	403
7.2	Exploded view - wheel housing liner (rear)	405
7.3	Removing and installing wheel housing liner (front)	406
7.4	Removing and installing wheel housing liner (rear)	410
8	Model badges and brand emblems	412
8.1	Dimensions - model badges and brand emblems	412
8.2	Removing and installing emblems	414
8.3	Removing and installing emblems	415