

Contents

00 - Technical data	1
1 Safety briefing/employee qualification	1
1.1 Qualification	1
2 Safety precautions	2
2.1 Safety precautions	2
2.2 Safety precautions when working on the cooling system	4
2.3 Safety precautions when using testers and measuring instruments during a road test	5
3 Repair instructions	6
3.1 Important notes	6
3.2 General notes	6
3.3 Information on handling fine dust, aluminium dust and steel dust	7
3.4 Routing and attachment of pipes, hoses and wiring	8
3.5 Contact corrosion	8
3.6 Bonding surfaces for adhesive strips	8
3.7 Self-locking bolts	8
3.8 Identification plates	8
3.9 Impact wrenches	8
3.10 Moulded foam inserts	9
3.11 Body construction	11
3.12 Matching the surface contour	16
3.13 Surface treatment	17
3.14 Dent removal	17
3.15 Repairing joints with flow-drill screws	18
4 Processing body structure adhesive D 180 004 M2	20
4.1 Preparing bonding surfaces	21
5 Extraction systems for steel/aluminium body repair station VAS 6673 ("multi-material-mix" workplace)	35
6 Vehicle identification data	37
6.1 Vehicle identification number	37
6.2 Vehicle data sticker	38
7 Overview of riveting attachments (pairs of tools)	39
8 Overview of rivets and tools	40
8.1 Overview of rivets used for repair measures	45
8.2 Rivets accessible from one side only	45
8.3 Thread repair for M6 pop rivet nut	46
9 Body dimensions	47
9.1 Body - front	47
9.2 Body - centre	54
9.3 Body - rear	58
9.4 Floor group, front	61
9.5 Floor group, centre	63
9.6 Floor group, rear	64
10 Body panel gaps/shut lines	67
10.1 Body - front	67
10.2 Body - rear	68
11 Tools	69
11.1 Using edge milling unit -VAS 882 005-	73
12 Straightening jig	106
12.1 Procedure for repairing structural body damage on Audi vehicles	106
50 - Body - front	107

1	Safety precautions	107
2	Wing mounting flange - Renewal	108
2.1	Tools	108
2.2	Procedure	109
3	Suspension turret - Renewal	115
3.1	Tools	115
3.2	Procedure	116
4	Repairing threads for attachment of subframe	130
4.1	Contents of thread repair kit	131
4.2	Repairing thread	132
5	Front longitudinal member - Renewal	138
5.1	Tools	138
5.2	Procedure	139
6	Longitudinal member - Renewal	147
6.1	Tools	147
6.2	Procedure	148
7	Front longitudinal member - Partial renewal	155
7.1	Tools	155
7.2	Procedure	156
51 - Body - centre		160
1	Safety precautions	160
2	Permitted separating cuts on complete side panel	161
3	Roof - Renewal (normal roof version)	162
3.1	Tools	162
3.2	Procedure	163
4	Roof (long version, 130 mm longer) - Renewal	178
4.1	Tools	178
4.2	Procedure	179
5	Front roof cross member - Renewal	187
5.1	Tools	187
5.2	Procedure	188
6	Roof cross member (rear) - Renewal	191
6.1	Tools	191
6.2	Procedure	192
7	Outer A-pillar - Renewal	195
7.1	Tools	195
7.2	Procedure	196
8	Inner A-pillar - Renewal	203
8.1	Tools	203
8.2	Procedure	204
9	Outer B-pillar - Renewal	209
9.1	Tools	209
9.2	Procedure	210
10	Inner B-pillar - Renewal	219
10.1	Tools	219
10.2	Procedure	220
11	Outer side member - Renewal	229
11.1	Tools	229
11.2	Procedure	230
12	Inner side member - Partial renewal	236
12.1	Tools	236

12.2	Procedure	237
53	Body - rear	249
1	Safety precautions	249
2	Permitted separating cuts on complete side panel	250
3	Tail light mounting - Renewal	251
3.1	Tools	251
3.2	Procedure	252
4	Rear cross panel - Renewal	255
4.1	Tools	255
4.2	Procedure	256
5	Inner cross panel - Renewal	261
5.1	Tools	261
5.2	Procedure	262
6	Rear cross member - Renewal	267
6.1	Tools	267
6.2	Procedure	268
7	Rear longitudinal member - Partial renewal	271
7.1	Tools	271
7.2	Procedure	272
8	Rear longitudinal member - Renewal	278
8.1	Tools	278
8.2	Procedure	279
9	Side panel - Renewal	289
9.1	Tools	289
9.2	Procedure	290
10	Rear wheel housing - Renewal	300
10.1	Tools	300
10.2	Procedure	301
11	Spare wheel well - Renewal	305
11.1	Tools	305
11.2	Procedure	306