

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 Gearbox identification .....	1
<b>2 Safety information</b> .....	<b>2</b>
2.1 Safety precautions when working on vehicle .....	2
2.2 Safety precautions when working on vehicles with start/stop system .....	3
2.3 Safety precautions when using testers and measuring instruments during a road test .....	3
2.4 Safety precautions when working on the subframe .....	3
2.5 Notes on tow-starting and towing .....	4
<b>3 Repair instructions</b> .....	<b>5</b>
3.1 Rules for cleanliness .....	5
3.2 General notes .....	5
3.3 General repair instructions .....	6
3.4 Contact corrosion .....	8
3.5 Routing and attachment of pipes, hoses and wiring .....	9
<b>4 Technical data</b> .....	<b>10</b>
4.1 Capacities .....	10
4.2 Oil distribution .....	12
4.3 Allocation of gearbox to engine .....	12
4.4 Clutch logic .....	15
<b>5 Overview - power transmission</b> .....	<b>16</b>
<b>32 - Torque converter</b> .....	<b>17</b>
<b>1 Torque converter</b> .....	<b>17</b>
<b>37 - Controls, housing</b> .....	<b>18</b>
<b>1 Selector mechanism</b> .....	<b>18</b>
1.1 Assembly overview - selector mechanism .....	18
1.2 Assembly overview - manual release mechanism for parking lock .....	20
1.3 Checking selector mechanism .....	21
1.4 Manual release from position P .....	26
1.5 Removing and installing selector lever handle .....	28
1.6 Removing and installing selector mechanism .....	30
1.7 Dismantling and assembling selector mechanism .....	31
1.8 Removing and installing manual release cable for parking lock .....	36
1.9 Renewing selector shaft oil seal .....	41
<b>2 Removing and installing gearbox</b> .....	<b>44</b>
2.1 Removing gearbox .....	44
2.2 Installing gearbox .....	99
2.3 Tightening torques for gearbox .....	105
<b>3 Assembly mountings</b> .....	<b>108</b>
3.1 Assembly overview - assembly mountings .....	108
3.2 Removing and installing tunnel cross member .....	111
<b>4 Transporting gearbox</b> .....	<b>117</b>
<b>5 Securing to engine and gearbox support</b> .....	<b>118</b>
<b>6 ATF circuit</b> .....	<b>119</b>
6.1 Assembly overview - ATF circuit .....	119
6.2 Removing and installing ATF cooler .....	122
6.3 Removing and installing ATF filter .....	125
6.4 Removing and installing ATF lines .....	126
<b>7 ATF</b> .....	<b>132</b>



7.1	Checking ATF level	132
7.2	Draining and filling ATF	144
<b>38</b>	<b>- Gears, control</b>	<b>150</b>
<b>1</b>	<b>ATF system</b>	<b>150</b>
1.1	Removing and installing oil pan	150
<b>2</b>	<b>Mechatronic unit</b>	<b>153</b>
<b>39</b>	<b>- Final drive - front differential</b>	<b>154</b>
<b>1</b>	<b>Final drive</b>	<b>154</b>
1.1	Assembly overview - final drive	154
1.2	Assembly overview - gearbox end cover on vehicles with front-wheel drive	156
1.3	Removing and installing O-ring on cover for front final drive	158
1.4	Removing and installing gearbox end cover	159
<b>2</b>	<b>Gear oil</b>	<b>160</b>
2.1	Checking gear oil level	160
2.2	Draining and filling gear oil	166
<b>3</b>	<b>Oil seals</b>	<b>177</b>
3.1	Renewing left oil seal	177
3.2	Renewing right oil seal	180
<b>4</b>	<b>Differential</b>	<b>182</b>
4.1	Removing and installing left flange shaft	182
4.2	Removing and installing right flange shaft	183
<b>5</b>	<b>Centre differential</b>	<b>187</b>
<b>6</b>	<b>Transfer box</b>	<b>188</b>
<b>7</b>	<b>Gearbox control system</b>	<b>189</b>
7.1	Overview of fitting locations - gearbox control system	189