

Contents

00	Technical data	1
1	Identification	1
1.1	Gearbox identification	1
2	Safety precautions	2
2.1	Safety precautions when working on vehicle	2
2.2	Safety precautions when working on vehicles with start/stop system	3
2.3	Safety precautions when using testers and measuring instruments during a road test	3
2.4	Safety precautions when working on subframe	3
2.5	Notes on tow-starting and towing	4
3	Repair instructions	5
3.1	Rules for cleanliness	5
3.2	General notes	5
3.3	General repair instructions	6
3.4	Contact corrosion	8
3.5	Routing and attaching lines and wiring	9
4	Technical data	10
4.1	Capacities	10
4.2	Oil distribution	11
4.3	Allocation of gearbox to engine	11
4.4	Clutch logic	12
5	Transmission layout	13
32	Torque converter	14
1	Torque converter	14
37	Controls, housing	15
1	Selector mechanism	15
1.1	Exploded view - selector mechanism	15
1.2	Exploded view - manual release mechanism for parking lock	17
1.3	Checking selector mechanism	18
1.4	Manual release from position P	23
1.5	Removing and installing selector lever handle	25
1.6	Removing and installing selector mechanism	27
1.7	Dismantling and assembling selector mechanism	28
1.8	Removing and installing manual release cable for parking lock	33
1.9	Renewing selector shaft oil seal	38
2	Removing and installing gearbox	41
2.1	Removing gearbox	41
2.2	Installing gearbox	51
2.3	Tightening torques for gearbox	56
3	Assembly mountings	58
3.1	Exploded view - assembly mountings	58
3.2	Removing and installing tunnel cross member	59
4	Transporting gearbox	62
5	Securing to engine and gearbox support	63
6	ATF circuit	64
6.1	Exploded view - ATF circuit	64
6.2	Removing and installing ATF cooler	66
6.3	Removing and installing ATF filter	69
6.4	Removing and installing ATF lines	70
7	ATF	76



7.1	Checking ATF level	76
7.2	Draining and filling ATF	79
38	Gears, control	83
1	ATF system	83
1.1	Removing and installing oil pan	83
2	Mechatronic unit	86
39	Final drive - differential	87
1	Final drive	87
1.1	Exploded view - final drive	87
1.2	Renewing O-ring on cover for front final drive	88
2	Gear oil	90
2.1	Checking gear oil level	90
2.2	Draining and filling gear oil	92
3	Oil seals	95
3.1	Renewing oil seal (left-side)	95
3.2	Renewing oil seal (right-side)	97
4	Differential	100
4.1	Removing and installing flange shaft (left-side)	100
4.2	Removing and installing flange shaft (right-side)	101
5	Centre differential	105
6	Transfer box	106
7	Gearbox control system	107
7.1	Overview of fitting locations - gearbox control system	107