

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 Gearbox identification .....	1
<b>2 Safety precautions</b> .....	<b>2</b>
2.1 Safety precautions when working on high-voltage vehicles .....	2
2.2 Safety precautions when working on vehicle .....	6
2.3 Safety precautions when working on vehicles with start/stop system .....	7
2.4 Safety precautions when using testers and measuring instruments during a road test .....	7
2.5 Safety precautions when working on subframe .....	8
2.6 Notes on tow-starting and towing .....	8
<b>3 Repair instructions</b> .....	<b>9</b>
3.1 Rules for cleanliness .....	9
3.2 General notes .....	9
3.3 General repair instructions .....	10
3.4 Contact corrosion .....	12
3.5 Routing and attaching lines and wiring .....	13
<b>4 Technical data</b> .....	<b>14</b>
4.1 Capacities .....	14
4.2 Allocation of gearbox to engine .....	14
<b>32 - Torque converter</b> .....	<b>16</b>
<b>1 Torque converter</b> .....	<b>16</b>
<b>37 - Controls, housing</b> .....	<b>17</b>
<b>1 Selector mechanism</b> .....	<b>17</b>
1.1 Exploded view - selector mechanism .....	17
1.2 Exploded view - manual release mechanism for parking lock .....	19
1.3 Checking selector mechanism .....	20
1.4 Manual release from position P .....	24
1.5 Removing and installing selector lever handle .....	26
1.6 Removing and installing selector mechanism .....	28
1.7 Dismantling and assembling selector mechanism .....	29
1.8 Removing and installing manual release cable for parking lock .....	34
1.9 Renewing selector shaft oil seal .....	39
<b>2 Removing and installing gearbox</b> .....	<b>42</b>
2.1 Removing gearbox .....	42
2.2 Installing gearbox .....	54
2.3 Tightening torques for gearbox .....	61
<b>3 Assembly mountings</b> .....	<b>63</b>
3.1 Exploded view - assembly mountings .....	63
3.2 Removing and installing tunnel cross member .....	64
<b>4 Transporting gearbox</b> .....	<b>66</b>
<b>5 Securing to engine and gearbox support</b> .....	<b>68</b>
<b>6 ATF circuit</b> .....	<b>69</b>
6.1 Exploded view - ATF circuit .....	69
6.2 Removing and installing ATF cooler .....	74
6.3 Removing and installing ATF filter .....	76
6.4 Removing and installing ATF lines .....	78
<b>7 ATF</b> .....	<b>82</b>
7.1 Checking ATF level .....	82
7.2 Draining and filling ATF .....	85



<b>38 - Gears, control</b>	<b>90</b>
<b>1 ATF system</b>	<b>90</b>
1.1 Removing and installing oil pan	90
<b>2 Mechatronic unit</b>	<b>93</b>
<b>39 - Final drive - differential</b>	<b>94</b>
<b>1 Final drive</b>	<b>94</b>
1.1 Exploded view - final drive	94
1.2 Removing and installing gearbox end cover	97
<b>2 Gear oil</b>	<b>98</b>
2.1 Checking gear oil level	98
2.2 Draining and filling gear oil	101
<b>3 Oil seals</b>	<b>111</b>
3.1 Renewing oil seal (left-side)	111
3.2 Renewing oil seal (right-side)	114
3.3 Renewing O-ring on cover for front final drive	115
<b>4 Differential</b>	<b>117</b>
4.1 Removing and installing flange shaft (left-side)	117
4.2 Removing and installing flange shaft (right-side)	118
4.3 Renewing ball bearing and mounting bracket for flange shaft (left-side)	121
<b>5 Gearbox control system</b>	<b>124</b>
5.1 Overview of fitting locations - gearbox control system	124