

Contents

00 - Technical data	1
1 Identification	1
2 Safety precautions	2
2.1 Safety precautions when working on vehicles with high-voltage system	2
2.2 Safety precautions when working in the vicinity of high-voltage components	2
2.3 Safety precautions for all vehicles	3
3 Repair instructions	4
10 - Removing and installing engine	5
1 Removing and installing engine	5
1.1 Removing engine	5
1.2 Securing engine to engine and gearbox support	19
1.3 Installing engine	19
2 Assembly mountings	23
2.1 Exploded view - assembly mountings	23
2.2 Supporting engine in installation position	26
2.3 Removing and installing engine mountings	27
2.4 Removing and installing torque reaction support and cross member	28
2.5 Removing and installing gearbox mounting	30
3 Engine cover panel	35
13 - Crankshaft group	36
1 Cylinder block (pulley end)	36
1.1 Exploded view - cylinder block (pulley end)	36
1.2 Removing and installing vibration damper	36
1.3 Removing and installing bracket for ancillaries	36
2 Cylinder block (gearbox end)	38
3 Crankshaft	39
4 Balance shaft	40
5 Pistons and conrods	41
15 - Cylinder head, valve gear	42
1 Timing chain cover	42
2 Chain drive	43
2.1 Exploded view - camshaft timing chains	43
2.2 Exploded view - drive chain for balance shaft	43
2.3 Removing and installing bearing saddle	43
2.4 Removing and installing camshaft timing chain	43
2.5 Removing and installing drive chain for balance shaft	43
2.6 Checking valve timing	43
3 Cylinder head	44
3.1 Exploded view - cylinder head	44
3.2 Removing and installing cylinder head	44
3.3 Checking compression	46
4 Valve gear	47
4.1 Exploded view - valve gear	47
4.2 Installing ball for slider	47
4.3 Removing and installing actuators for camshaft adjustment	47
4.4 Removing and installing camshaft	47
4.5 Removing and installing camshaft control valve 1 N205	47
4.6 Removing and installing valve stem oil seals	48



5	Inlet and exhaust valves	49
17	- Lubrication	50
1	Sump/oil pump	50
1.1	Exploded view - sump/oil pump	50
1.2	Engine oil	50
1.3	Removing and installing sump (bottom section)	50
1.4	Removing and installing oil pump	50
1.5	Removing and installing sump (top section)	50
1.6	Removing and installing oil level and oil temperature sender G266	51
2	Engine oil cooler	52
3	Crankcase breather	53
3.1	Removing and installing oil separator	53
4	Oil filter/oil pressure switches	55
19	- Cooling	56
1	Cooling system/coolant	56
1.1	Connection diagram - coolant hoses	56
1.2	Checking cooling system for leaks	58
1.3	Draining and filling cooling system	58
2	Coolant pump/thermostat assembly	65
2.1	Exploded view - coolant pump/thermostat	65
2.2	Exploded view - electric coolant pump	65
2.3	Removing and installing electric coolant pump	68
2.4	Removing and installing coolant pump	73
2.5	Removing and installing toothed belt for coolant pump	73
2.6	Removing and installing thermostat	73
2.7	Checking thermostat	73
2.8	Removing and installing coolant temperature sender G62	73
2.9	Removing and installing coolant valves	74
3	Coolant pipes	77
3.1	Exploded view - coolant pipes	77
3.2	Removing and installing coolant pipes	78
4	Radiators/radiator fans	81
4.1	Exploded view - radiators/radiator fans	81
4.2	Removing and installing radiator	83
4.3	Removing and installing radiator cowl	88
4.4	Removing and installing radiator fan V7	90
4.5	Removing and installing auxiliary radiator	91
21	- Turbocharging/supercharging	93
1	Turbocharger	93
1.1	Exploded view - turbocharger	93
1.2	Removing and installing turbocharger	93
1.3	Checking vacuum unit for turbocharger	94
2	Charge air system	95
2.1	Exploded view - charge air system	95
2.2	Exploded view - hose connections for charge air system	96
2.3	Removing and installing charge air cooler	96
2.4	Removing and installing charge pressure sender G31	98
2.5	Checking charge air system for leaks	98
24	- Mixture preparation - injection	99
1	Injection system	99
1.1	Overview of fitting locations - injection system	99

1.2	Checking fuel system for leaks	106
2	Vacuum system	107
3	Air cleaner	108
3.1	Exploded view - air cleaner housing	108
3.2	Removing and installing air cleaner housing	109
4	Intake manifold	111
4.1	Exploded view - intake manifold	111
4.2	Removing and installing intake manifold	111
4.3	Removing and installing throttle valve module J338	116
4.4	Cleaning throttle valve module	116
4.5	Checking intake manifold change-over function	116
5	Injectors	117
6	Senders and sensors	118
6.1	Removing and installing intake air temperature sender G42	118
6.2	Removing and installing air mass meter G70	118
6.3	Removing and installing fuel pressure sender G247	118
6.4	Checking fuel pressure sender G247	118
7	High-pressure pump	119
8	Lambda probe	120
8.1	Exploded view - Lambda probe	120
8.2	Removing and installing Lambda probe	120
9	Engine control unit	123
9.1	Removing and installing engine control unit J623	123
9.2	Wiring and component check	123
26	- Exhaust system	124
1	Exhaust pipes/silencers	124
1.1	Exploded view - silencers	124
1.2	Separating exhaust pipes/silencers	126
1.3	Removing and installing front silencers	127
1.4	Removing and installing silencers	128
1.5	Stress-free alignment of exhaust system	129
1.6	Checking exhaust system for leaks	130
2	Emission control system	131
2.1	Exploded view - emission control system	131
2.2	Removing and installing catalytic converter	131
2.3	Removing and installing exhaust flap control unit J883	132
3	Secondary air system	134
3.1	Exploded view - secondary air system	134
3.2	Removing and installing secondary air pump motor V101	135
3.3	Removing and installing secondary air inlet valve N112	135
3.4	Removing and installing sender 1 for secondary air pressure G609	136
4	Exhaust manifold	138
28	- Ignition system	139
1	Ignition system	139
1.1	Exploded view - ignition system	139
1.2	Removing and installing ignition coils with output stages	139
1.3	Removing and installing knock sensor 1 G61	139
1.4	Removing and installing Hall sender	139
1.5	Removing and installing engine speed sender G28	139