

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety precautions	2
2.1 Safety precautions when working on the fuel supply system	2
2.2 Safety precautions when working on vehicles with start/stop system	2
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on the cooling system	3
2.5 Safety precautions when working on the ignition system	3
2.6 Safety precautions when working on the subframe	4
2.7 Safety precautions when working on the exhaust system	4
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 Foreign particles in engine	5
3.3 Contact corrosion	5
3.4 Routing and attachment of pipes, hoses and wiring	6
3.5 Installing radiators and condensers	6
10 - Removing and installing engine	7
1 Removing and installing engine	7
1.1 Removing engine	7
1.2 Separating engine and gearbox	26
1.3 Securing engine to engine and gearbox support	32
1.4 Installing engine	36
2 Assembly mountings	45
2.1 Exploded view - assembly mountings	45
2.2 Supporting engine in installation position	46
2.3 Removing and installing engine mountings	48
2.4 Removing and installing gearbox mounting	50
3 Engine cover panel	52
3.1 Removing and installing engine cover panel	52
13 - Crankshaft group	53
1 Cylinder block (pulley end)	53
1.1 Exploded view - poly V-belt drive	53
1.2 Removing and installing poly V-belts	57
1.3 Removing and installing poly V-belt tensioner	61
1.4 Removing and installing vibration damper	64
1.5 Removing and installing sealing flange (pulley end)	65
2 Cylinder block (gearbox end)	70
2.1 Exploded view - cylinder block (gearbox end)	70
2.2 Removing and installing drive plate	70
2.3 Removing and installing sender wheel	72
2.4 Checking sender wheel	72
2.5 Renewing crankshaft oil seal (gearbox end)	73
3 Crankshaft	76
3.1 Exploded view - crankshaft	76
3.2 Crankshaft dimensions	81
3.3 Measuring axial clearance of crankshaft	82
3.4 Measuring radial clearance of crankshaft	82
4 Balance shaft	84
4.1 Exploded view - balance shaft	84



4.2	Removing and installing balance shaft	84
5	Pistons and conrods	87
5.1	Exploded view - pistons and conrods	87
5.2	Removing and installing pistons	90
5.3	Checking pistons and cylinder bores	91
5.4	Checking radial clearance of conrod bearings	93
15	Cylinder head, valve gear	95
1	Timing chain cover	95
1.1	Exploded view - timing chain cover	95
1.2	Removing and installing timing chain cover	99
2	Chain drive	115
2.1	Exploded view - camshaft timing chains	115
2.2	Exploded view - drive chain for valve gear	118
2.3	Exploded view - drive chain for oil pump	120
2.4	Removing camshaft timing chain from camshafts	121
2.5	Removing and installing camshaft timing chain	135
2.6	Removing and installing drive chain for valve gear	139
2.7	Removing and installing drive chain for oil pump	142
3	Cylinder head	144
3.1	Exploded view - cylinder head	144
3.2	Removing and installing cylinder head	147
3.3	Removing and installing cylinder head cover	157
3.4	Checking compression	158
4	Valve gear	161
4.1	Exploded view - valve gear	161
4.2	Measuring axial clearance of camshaft	165
4.3	Measuring radial clearance of camshaft	166
4.4	Removing and installing camshaft	167
4.5	Removing and installing camshaft control valves	176
4.6	Checking hydraulic compensation elements	177
4.7	Removing and installing valve stem oil seals	179
5	Inlet and exhaust valves	189
5.1	Checking valve guides	189
5.2	Checking valves	190
5.3	Valve dimensions	190
17	Lubrication	192
1	Sump/oil pump	192
1.1	Exploded view - sump/oil pump	192
1.2	Engine oil	195
1.3	Removing and installing sump (bottom section)	196
1.4	Removing and installing sump (top section)	198
1.5	Removing and installing oil pump	202
1.6	Removing and installing oil level and oil temperature sender G266	204
2	Engine oil cooler	205
2.1	Exploded view - engine oil cooler	205
2.2	Removing and installing engine oil cooler	205
3	Crankcase breather	209
3.1	Exploded view - crankcase breather system	209
3.2	Removing and installing oil separator	211
3.3	Removing and installing pressure control valve	213
3.4	Removing and installing oil drain valve	215
3.5	Removing and installing hose for crankcase breather system	217
3.6	Removing and installing crankcase breather shut-off valve N548	217

4	Oil filter/oil pressure switches	220
4.1	Exploded view - oil filter	220
4.2	Exploded view - oil pressure switches/oil pressure control	220
4.3	Removing and installing oil pressure switch F22	221
4.4	Removing and installing oil pressure switch for reduced oil pressure F378	223
4.5	Checking oil pressure	224
4.6	Removing and installing valve for oil pressure control N428	224
19	Cooling	226
1	Cooling system/coolant	226
1.1	Connection diagram - coolant hoses	226
1.2	Checking cooling system for leaks	230
1.3	Draining and filling cooling system	233
2	Coolant pump/thermostat assembly	245
2.1	Exploded view - coolant pump/thermostat	245
2.2	Exploded view - electric coolant pump	247
2.3	Exploded view - coolant temperature senders	248
2.4	Removing and installing electric coolant pump	249
2.5	Removing and installing coolant pump	252
2.6	Removing and installing thermostat	254
2.7	Removing and installing coolant temperature sender G62	255
2.8	Removing and installing temperature sender for engine temperature regulation G694	256
2.9	Removing and installing coolant valves	257
3	Coolant pipes	259
3.1	Exploded view - coolant pipes	259
3.2	Removing and installing coolant pipes	262
4	Radiator/radiator fans	277
4.1	Exploded view - radiator/radiator fans	277
4.2	Exploded view - auxiliary radiator	280
4.3	Removing and installing radiator	281
4.4	Removing and installing water radiator for charge air cooling circuit	288
4.5	Removing and installing radiator cowl	293
4.6	Removing and installing radiator fans	295
21	Turbocharging/supercharging	297
1	Supercharger	297
1.1	Exploded view - supercharger	297
1.2	Exploded view - magnetic clutch	300
1.3	Exploded view - rotor assembly	301
1.4	Removing and installing supercharger	302
1.5	Checking supercharger for leaks	310
1.6	Removing and installing magnetic clutch	313
1.7	Removing and installing pulley for supercharger	321
1.8	Removing and installing drive unit	322
1.9	Removing and installing rotor assembly	326
1.10	Renewing input shaft oil seal	332
1.11	Securing supercharger to engine and gearbox support	334
1.12	Removing and installing sender 1 for turbocharger speed G688	338
2	Charge air system	341
2.1	Exploded view - charge air system	341
2.2	Removing and installing charge air cooler	342
2.3	Removing and installing charge pressure sender G31/G447	347
24	Mixture preparation - injection	349
1	Injection system	349



1.1	Overview of fitting locations - injection system	349
1.2	Checking fuel system for leaks	358
2	Vacuum system	359
2.1	Connection diagram - vacuum system	359
2.2	Checking vacuum system	360
3	Air cleaner	362
3.1	Exploded view - air cleaner housing	362
3.2	Removing and installing air cleaner housing	363
4	Intake manifold	365
4.1	Exploded view - intake manifold (bottom section) with fuel rail	365
4.2	Removing and installing intake manifold (bottom section) with fuel rail	368
4.3	Removing and installing throttle valve module J338	372
4.4	Removing and installing regulating flap control unit J808	374
4.5	Removing and installing fuel line	375
5	Injectors	377
5.1	Exploded view - fuel rail with injectors	377
5.2	Removing and installing fuel rail	381
5.3	Removing and installing injectors	383
5.4	Cleaning FSI injectors - vehicles with FSI engine	391
6	Senders and sensors	394
6.1	Removing and installing intake air temperature sender G42/intake manifold pressure sender G71	394
6.2	Removing and installing fuel pressure sender G247	396
6.3	Removing and installing fuel pressure sender for low pressure G410	397
7	High-pressure pump	398
7.1	Exploded view - high-pressure pump	398
7.2	Removing and installing high-pressure pump	400
7.3	Removing and installing high-pressure pipe	404
8	Lambda probe	407
8.1	Exploded view - Lambda probe	407
8.2	Removing and installing Lambda probe	408
9	Engine control unit	414
9.1	Removing and installing engine/motor control unit J623	414
26	- Exhaust system	415
1	Exhaust pipes/silencers	415
1.1	Exploded view - silencers	415
1.2	Separating exhaust pipes/silencers	419
1.3	Removing and installing front silencers	421
1.4	Removing and installing silencers	422
1.5	Stress-free alignment of exhaust system	423
1.6	Checking exhaust system for leaks	424
2	Emission control system	425
2.1	Removing and installing catalytic converter	425
2.2	Removing and installing exhaust flap control unit J883/J945	428
3	Secondary air system	430
3.1	Exploded view - secondary air system	430
3.2	Removing and installing secondary air pump motor V101	433
3.3	Checking combination valve	433
3.4	Removing and installing combination valve	435
4	Exhaust manifolds	440
4.1	Exploded view - exhaust manifold	440
4.2	Removing and installing exhaust manifolds	443

28 - Ignition system	450
1 Ignition system	450
1.1 Exploded view - ignition system	450
1.2 Test data - spark plugs	452
1.3 Removing and installing ignition coils with output stages	452
1.4 Removing and installing knock sensor	455
1.5 Removing and installing Hall senders	456
1.6 Removing and installing engine speed sender G28	457