

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety precautions when working on the fuel supply system	2
2.2 Safety precautions when working on vehicles with start/stop system	2
2.3 Safety precautions after working in the engine compartment	3
2.4 Safety precautions when using testers and measuring instruments during a road test	3
2.5 Safety precautions when working on the cooling system	3
2.6 Safety precautions when working on the exhaust system	3
2.7 Safety precautions when working on the ignition system	4
2.8 Safety precautions when working on the subframe	4
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 Foreign material in engine	5
3.3 Contact corrosion	6
3.4 Routing and attachment of pipes, hoses and wiring	6
3.5 Nuts, bolts	6
3.6 Identification plates	6
3.7 Use of impact wrenches	7
3.8 Installing radiators and condensers	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Separating engine and gearbox	35
1.3 Removing engine from scissor-type assembly platform	46
1.4 Securing engine to engine and gearbox support	49
1.5 Installing engine	51
2 Assembly mountings	56
2.1 Assembly overview - assembly mountings	56
2.2 Supporting engine in installation position	60
2.3 Removing and installing engine mountings	63
2.4 Calibrating electrohydraulic engine mounting	78
2.5 Removing and installing gearbox mountings	79
3 Engine cover panel	85
3.1 Removing and installing engine cover panel	85
13 - Crankshaft group	87
1 Cylinder block (pulley end)	87
1.1 Assembly overview - poly V-belt drive	87
1.2 Removing and installing poly V-belt	89
1.3 Removing and installing poly V-belt tensioner	91
1.4 Removing and installing vibration damper	92
1.5 Renewing crankshaft oil seal (pulley end)	93
2 Cylinder block (gearbox end)	96
2.1 Assembly overview - cylinder block (gearbox end)	96
2.2 Removing and installing drive plate	96
2.3 Renewing crankshaft oil seal (gearbox end)	98
3 Crankshaft	101
3.1 Assembly overview - crankshaft	101
3.2 Crankshaft dimensions	106



3.3	Allocation of main bearing shells	107
3.4	Measuring axial clearance of crankshaft	110
3.5	Measuring radial clearance of crankshaft	111
3.6	Removing and installing sender wheel	111
3.7	Checking sender wheel	112
4	Auxiliary drive	114
4.1	Assembly overview - auxiliary drive	114
4.2	Removing and installing spur gear drive	117
4.3	Renewing oil seal for power steering vane pump drive	124
4.4	Renewing oil seal for AC compressor drive	125
5	Pistons and conrods	129
5.1	Assembly overview - pistons and conrods	129
5.2	Removing and installing pistons	132
5.3	Checking pistons and cylinder bores	134
5.4	Checking radial clearance of conrod bearings	136
15	Cylinder head, valve gear	138
1	Timing chain cover	138
1.1	Assembly overview - timing chain cover	138
1.2	Removing and installing timing chain cover	142
2	Chain drive	160
2.1	Assembly overview - camshaft timing chains	160
2.2	Assembly overview - drive chain for valve gear	164
2.3	Assembly overview - drive chain for auxiliary drive	166
2.4	Removing camshaft timing chain from camshafts	166
2.5	Removing and installing camshaft timing chain	183
2.6	Removing and installing chain tensioner for camshaft timing chain	183
2.7	Removing and installing drive chain for valve gear	185
2.8	Removing and installing drive chain for auxiliary drive	187
3	Cylinder head	189
3.1	Assembly overview - cylinder head	189
3.2	Removing and installing cylinder head	192
3.3	Checking compression	206
4	Valve gear	208
4.1	Assembly overview - valve gear	208
4.2	Measuring axial clearance of camshaft	213
4.3	Measuring radial clearance of camshaft	214
4.4	Removing and installing camshaft	214
4.5	Removing and installing cam actuators	236
4.6	Removing and installing camshaft control valves	238
4.7	Removing and installing valve stem oil seals	241
5	Inlet and exhaust valves	253
5.1	Checking valve guides	253
5.2	Checking valves	254
5.3	Valve dimensions	254
17	Lubrication	256
1	Sump/oil pump	256
1.1	Assembly overview - sump/oil pump	256
1.2	Engine oil	260
1.3	Removing and installing lower part of sump	261
1.4	Removing and installing upper part of sump	264
1.5	Removing and installing oil pump	270
1.6	Removing and installing oil level and oil temperature sender G266	272
2	Engine oil cooler	274

2.1	Assembly overview - engine oil cooler	274
2.2	Removing and installing engine oil cooler	276
3	Crankcase breather	282
3.1	Assembly overview - crankcase breather system	282
3.2	Removing and installing oil separator	283
4	Oil filter/oil pressure switches	284
4.1	Assembly overview - oil filter	284
4.2	Assembly overview - oil pressure switches/oil pressure control	284
4.3	Removing and installing oil pressure switch F22/F378	286
4.4	Removing and installing stage 3 oil pressure switch F447	287
4.5	Removing and installing oil temperature sender 2 G664	288
4.6	Checking oil pressure	289
4.7	Removing and installing valve for oil pressure control N428	289
4.8	Removing and installing piston cooling jet control valve N522	290
5	Oil circuit	292
5.1	Assembly overview - mechanical switching valve, non-return valve, cover in inner V of engine	292
5.2	Removing and installing cover in inner V of engine	294
5.3	Removing and installing non-return valve	296
5.4	Removing and installing mechanical switching valve	296
19 - Cooling		298
1	Cooling system/coolant	298
1.1	Connection diagram - coolant hoses	298
1.2	Checking cooling system for leaks	306
1.3	Draining and filling cooling system	309
2	Coolant pump/thermostat assembly	322
2.1	Assembly overview - coolant pump/thermostat	322
2.2	Assembly overview - electric coolant pump	324
2.3	Assembly overview - coolant temperature senders	325
2.4	Removing and installing electric coolant pump	326
2.5	Removing and installing coolant pump	332
2.6	Checking thermostat	334
2.7	Removing and installing map-controlled engine cooling system thermostat F265	334
2.8	Removing and installing coolant temperature sender G62	336
2.9	Removing and installing radiator outlet coolant temperature sender G83	337
2.10	Removing and installing temperature sender for engine temperature regulation G694	338
2.11	Removing and installing coolant valves	340
3	Coolant pipes	345
3.1	Assembly overview - coolant pipes	345
3.2	Removing and installing coolant pipes	347
4	Radiators/radiator fans	374
4.1	Assembly overview - radiators/radiator fans	374
4.2	Assembly overview - auxiliary radiator	377
4.3	Removing and installing radiator	379
4.4	Removing and installing water radiator for charge air cooling circuit	386
4.5	Removing and installing radiator cowl	394
4.6	Removing and installing radiator fan V7	398
21 - Turbocharging/supercharging		400
1	Turbochargers	400
1.1	Assembly overview - turbocharger	400
1.2	Removing and installing turbocharger	404
1.3	Removing and installing temperature sender for engine cover panel G765	412
2	Charge air system	414



2.1	Assembly overview - charge air system	414
2.2	Assembly overview - hose connections for charge air system	416
2.3	Removing and installing charge air cooler housing	417
2.4	Removing and installing charge air cooler	421
2.5	Removing and installing charge pressure sender G31	422
2.6	Removing and installing charge pressure sender 2 G447	423
2.7	Removing and installing turbocharger air recirculation valve N249	424
2.8	Turbocharger air recirculation valve, cylinder bank 2 N427	425
24	Mixture preparation - injection	427
1	Injection system	427
1.1	Overview of fitting locations - injection system	427
1.2	Checking fuel system for leaks	440
2	Vacuum system	441
2.1	Connection diagram - vacuum system	441
2.2	Checking vacuum system	442
2.3	Removing and installing vacuum unit for intake manifold flap	443
2.4	Removing and installing charge pressure control solenoid valve N75	450
2.5	Removing and installing secondary air inlet valve N112/N320	450
2.6	Removing and installing intake manifold flap valve N316	459
2.7	Removing and installing coolant valve for cylinder head N489	460
3	Air filter	461
3.1	Assembly overview - air filter housing	461
3.2	Removing and installing air filter housing	463
4	Intake manifold	466
4.1	Assembly overview - intake manifold	466
4.2	Assembly overview - throttle valve module	468
4.3	Removing and installing intake manifold with fuel rail	470
4.4	Removing and installing throttle valve module J338	478
4.5	Removing and installing intake manifold flap potentiometer G336	481
4.6	Removing and installing intake manifold flap potentiometer 2 G512	482
5	Injectors	484
5.1	Removing and installing injectors	484
5.2	Cleaning injectors	489
6	Senders and sensors	491
6.1	Removing and installing actuator for structure-borne sound	491
6.2	Removing and installing control unit for structure-borne sound	492
6.3	Removing and installing fuel pressure sender G247	492
6.4	Removing and installing fuel pressure sender 2 G624	494
6.5	Removing and installing fuel pressure sender for low pressure G410	495
6.6	Removing and installing temperature sender for charge air cooler G763/G764	496
6.7	Removing and installing intake air temperature sender G42	497
6.8	Removing and installing intake manifold pressure sender G71	498
7	High-pressure pump	499
7.1	Assembly overview - high-pressure pump	499
7.2	Assembly overview - fuel pipes and fuel rail	500
7.3	Removing and installing high-pressure pump	503
7.4	Removing and installing high-pressure pipe	508
8	Lambda probe	515
8.1	Assembly overview - Lambda probe	515
8.2	Removing and installing Lambda probe	515
9	Engine control unit	521
9.1	Wiring and component check	521
9.2	Removing and installing engine control unit J623	522

26	- Exhaust system	524
1	Exhaust pipes/silencers	524
1.1	Assembly overview - silencers	524
1.2	Separating exhaust pipes/silencers	528
1.3	Removing and installing front silencers	530
1.4	Stress-free alignment of exhaust system	531
1.5	Checking exhaust system for leaks	532
2	Emission control system	533
2.1	Removing and installing catalytic converter	533
2.2	Removing and installing exhaust flap control unit J883 / exhaust flap control unit 2 J945 ..	536
3	Secondary air system	538
3.1	Assembly overview - secondary air system	538
3.2	Removing and installing secondary air pump motor V101	540
3.3	Checking combination valve	541
3.4	Removing and installing combination valve	542
3.5	Removing and installing sender 1 for secondary air pressure G609	543
28	- Ignition system	544
1	Ignition system	544
1.1	Assembly overview - ignition system	544
1.2	Test data - spark plugs	546
1.3	Removing and installing ignition coils with output stages	546
1.4	Removing and installing knock sensor	554
1.5	Removing and installing Hall senders	565
1.6	Removing and installing engine speed sender G28	571