

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine identification number/engine data	2
<b>2 Safety precautions</b>	<b>4</b>
2.1 Safety precautions when working on the fuel supply system	4
2.2 Safety precautions when working on vehicles with start/stop system	5
2.3 Safety precautions when using testers and measuring instruments during a road test	5
2.4 Safety precautions when working on the subframe	6
2.5 Safety precautions when working on the cooling system	6
2.6 Safety precautions when working on the ignition system	6
<b>3 Repair instructions</b>	<b>8</b>
3.1 Rules for cleanliness	8
3.2 Foreign particles in engine	8
3.3 Contact corrosion	8
3.4 Routing and attachment of pipes, hoses and wiring	9
3.5 Installing radiators and condensers	9
<b>10 - Removing and installing engine</b>	<b>10</b>
<b>1 Removing and installing engine</b>	<b>10</b>
1.1 Removing engine	10
1.2 Separating engine and gearbox	26
1.3 Securing engine to engine and gearbox support	34
1.4 Installing engine	37
<b>2 Assembly mountings</b>	<b>45</b>
2.1 Exploded view - assembly mountings	45
2.2 Removing and installing engine mountings	47
2.3 Removing and installing gearbox mounting	58
<b>3 Engine cover panel</b>	<b>63</b>
3.1 Removing and installing engine cover panel	63
<b>13 - Crankshaft group</b>	<b>64</b>
<b>1 Cylinder block (pulley end)</b>	<b>64</b>
1.1 Exploded view - poly V-belt drive	64
1.2 Removing and installing poly V-belt	66
1.3 Removing and installing tensioner for poly V-belt	66
1.4 Removing and installing vibration damper	67
1.5 Removing and installing bracket for ancillaries	68
1.6 Renewing crankshaft oil seal (pulley end)	68
<b>2 Cylinder block (gearbox end)</b>	<b>70</b>
2.1 Exploded view - cylinder block (gearbox end)	70
2.2 Removing and installing drive plate	71
2.3 Removing and installing sender wheel	72
2.4 Checking sender wheel	73
2.5 Renewing crankshaft oil seal (gearbox end)	74
<b>3 Crankshaft</b>	<b>76</b>
3.1 Exploded view - crankshaft	76
3.2 Crankshaft dimensions	79
3.3 Allocation of main bearing shells	80
3.4 Measuring axial clearance of crankshaft	81
3.5 Measuring radial clearance of crankshaft	82
<b>4 Auxiliary drive</b>	<b>84</b>
4.1 Exploded view - auxiliary drive	84

4.2	Removing and installing spur gear drive . . . . .	85
4.3	Renewing oil seal for power steering pump drive . . . . .	88
4.4	Renewing oil seal for AC compressor drive . . . . .	89
<b>5</b>	<b>Pistons and conrods . . . . .</b>	<b>92</b>
5.1	Exploded view - pistons and conrods . . . . .	92
5.2	Removing and installing pistons . . . . .	94
5.3	Checking pistons and cylinder bores . . . . .	95
5.4	Checking radial clearance of conrod bearings . . . . .	96
<b>15 - Cylinder head, valve gear . . . . .</b>	<b>98</b>	
<b>1</b>	<b>Timing chain cover . . . . .</b>	<b>98</b>
1.1	Exploded view - timing chain cover . . . . .	98
1.2	Removing and installing timing chain cover . . . . .	100
<b>2</b>	<b>Chain drive . . . . .</b>	<b>111</b>
2.1	Exploded view - camshaft timing chains . . . . .	111
2.2	Exploded view - drive chain for valve gear . . . . .	114
2.3	Exploded view - drive chain for auxiliary drive . . . . .	116
2.4	Removing and installing camshaft timing chain . . . . .	116
2.5	Removing camshaft timing chain from camshafts . . . . .	118
2.6	Removing and installing drive chain for valve gear . . . . .	126
2.7	Removing and installing drive chain for auxiliary drive . . . . .	127
<b>3</b>	<b>Cylinder head . . . . .</b>	<b>129</b>
3.1	Exploded view - cylinder head . . . . .	129
3.2	Removing and installing cylinder head . . . . .	132
3.3	Removing and installing cylinder head cover . . . . .	140
3.4	Checking compression . . . . .	142
<b>4</b>	<b>Valve gear . . . . .</b>	<b>144</b>
4.1	Exploded view - valve gear . . . . .	144
4.2	Measuring axial clearance of camshaft . . . . .	146
4.3	Measuring radial clearance of camshaft . . . . .	147
4.4	Removing and installing camshaft . . . . .	148
4.5	Checking hydraulic valve compensation elements . . . . .	155
4.6	Removing and installing valve stem oil seals . . . . .	157
<b>5</b>	<b>Inlet and exhaust valves . . . . .</b>	<b>165</b>
5.1	Checking valve guides . . . . .	165
5.2	Checking valves . . . . .	166
5.3	Valve dimensions . . . . .	166
<b>17 - Lubrication . . . . .</b>	<b>167</b>	
<b>1</b>	<b>Sump/oil pump . . . . .</b>	<b>167</b>
1.1	Exploded view - sump/oil pump . . . . .	167
1.2	Engine oil . . . . .	170
1.3	Removing and installing sump (bottom section) . . . . .	171
1.4	Removing and installing sump (top section) . . . . .	173
1.5	Removing and installing oil pump . . . . .	176
1.6	Removing and installing oil level and oil temperature sender G266 . . . . .	178
<b>2</b>	<b>Engine oil cooler . . . . .</b>	<b>179</b>
2.1	Removing and installing engine oil cooler . . . . .	179
<b>3</b>	<b>Crankcase breather . . . . .</b>	<b>181</b>
3.1	Removing and installing hose for crankcase breather system . . . . .	181
<b>4</b>	<b>Oil filter/oil pressure switches . . . . .</b>	<b>182</b>
4.1	Exploded view - oil filter housing/oil pressure switches . . . . .	182
4.2	Removing and installing oil pressure switch F22 . . . . .	184
4.3	Removing and installing oil pressure switch for reduced oil pressure F378 . . . . .	184

4.4	Checking oil pressure .....	185
4.5	Removing and installing oil filter housing .....	186
4.6	Removing and installing valve for oil pressure control N428 .....	187
4.7	Removing and installing spray nozzle valve .....	187
<b>19 - Cooling</b>	.....	<b>189</b>
1	<b>Cooling system/coolant</b> .....	189
1.1	Connection diagram - coolant hoses .....	189
1.2	Checking cooling system for leaks .....	192
1.3	Draining and filling cooling system .....	194
2	<b>Coolant pump/thermostat assembly</b> .....	202
2.1	Exploded view - coolant pump and thermostat .....	202
2.2	Removing and installing electric coolant pump .....	203
2.3	Removing and installing coolant pump .....	205
2.4	Checking thermostat .....	207
2.5	Removing and installing map-controlled engine cooling system thermostat F265 .....	207
2.6	Removing and installing coolant temperature sender G62 .....	209
2.7	Removing and installing temperature sender for engine temperature regulation G694 .....	210
2.8	Removing and installing coolant valves .....	210
3	<b>Coolant pipes</b> .....	214
3.1	Exploded view - coolant pipes .....	214
3.2	Removing and installing coolant pipes .....	217
3.3	Removing and installing coolant pipes for gearbox .....	233
4	<b>Radiator/radiator fans</b> .....	236
4.1	Exploded view - radiator/radiator fans .....	236
4.2	Removing and installing radiator .....	238
4.3	Removing and installing radiator cowl .....	242
4.4	Removing and installing radiator fans .....	245
<b>24 - Mixture preparation - injection</b>	.....	<b>246</b>
1	<b>Injection system</b> .....	246
1.1	Overview of fitting locations - injection system .....	246
1.2	Reducing pressure in high-pressure section of injection system .....	255
1.3	Filling and bleeding fuel system .....	256
1.4	Checking fuel system for leaks .....	257
2	<b>Vacuum system</b> .....	258
2.1	Connection diagram - vacuum system .....	258
2.2	Checking vacuum system .....	259
3	<b>Air cleaner</b> .....	260
3.1	Exploded view - air cleaner housing .....	260
3.2	Removing and installing air cleaner housing .....	261
4	<b>Intake manifold</b> .....	263
4.1	Exploded view - intake manifold .....	263
4.2	Exploded view - intake manifold (bottom section) with fuel rail .....	265
4.3	Removing and installing intake manifold (top section) .....	266
4.4	Removing and installing intake manifold (bottom section) with fuel rail .....	269
4.5	Removing and installing throttle valve module J338 .....	271
5	<b>Injectors</b> .....	274
5.1	Exploded view - fuel rail with injectors .....	274
5.2	Removing and installing injectors .....	275
5.3	Cleaning injectors .....	277
6	<b>Senders and sensors</b> .....	279
6.1	Removing and installing fuel pressure sender G247 .....	279
7	<b>High-pressure pump</b> .....	280

7.1	Exploded view - high-pressure pump .....	280
7.2	Removing and installing high-pressure pump .....	281
7.3	Removing and installing high-pressure pipe .....	283
<b>8</b>	<b>Lambda probe .....</b>	<b>285</b>
8.1	Exploded view - Lambda probe .....	285
8.2	Removing and installing Lambda probe .....	286
<b>9</b>	<b>Engine control unit .....</b>	<b>294</b>
9.1	Wiring and component check .....	294
9.2	Removing and installing engine control unit J623 .....	295
<b>26 - Exhaust system .....</b>		<b>297</b>
1	<b>Exhaust pipes/silencers .....</b>	<b>297</b>
1.1	Exploded view - silencers .....	297
1.2	Disconnecting exhaust pipes/silencers .....	299
1.3	Removing and installing front silencer .....	300
1.4	Stress-free alignment of exhaust system .....	302
1.5	Checking exhaust system for leaks .....	303
<b>2</b>	<b>Emission control system .....</b>	<b>304</b>
2.1	Removing and installing catalytic converter .....	304
<b>3</b>	<b>Secondary air system .....</b>	<b>309</b>
3.1	Exploded view - secondary air system .....	309
3.2	Removing and installing secondary air pump motor V101 .....	311
3.3	Checking combination valve .....	311
3.4	Removing and installing combination valve .....	313
3.5	Removing and installing sender 1 for secondary air pressure G609 .....	313
<b>4</b>	<b>Exhaust manifolds .....</b>	<b>314</b>
4.1	Exploded view - exhaust manifold .....	314
4.2	Removing and installing exhaust manifold .....	316
<b>28 - Ignition system .....</b>		<b>322</b>
1	<b>Ignition system .....</b>	<b>322</b>
1.1	Exploded view - ignition system .....	322
1.2	Test data, spark plugs .....	323
1.3	Removing and installing ignition coils with output stages .....	323
1.4	Removing and installing knock sensor .....	325
1.5	Removing and installing Hall senders .....	326
1.6	Removing and installing engine speed sender G28 .....	327