

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 General notes	2
2.1 Numbering of cylinders	2
3 Safety precautions	3
3.1 Safety precautions when working on the fuel supply system	3
3.2 Safety precautions when working on vehicles with start/stop system	3
3.3 Safety precautions when using testers and measuring instruments during a road test	4
3.4 Safety precautions when working on the cooling system	4
3.5 Safety precautions when working on the ignition system	4
3.6 Safety precautions when working on the subframe	5
3.7 Safety precautions when working on the exhaust system	5
4 Repair instructions	6
4.1 Rules for cleanliness	6
4.2 Foreign particles in engine	6
4.3 Contact corrosion	6
4.4 Routing and attachment of pipes, hoses and wiring	7
4.5 Installing radiators and condensers	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Separating engine and gearbox	30
1.3 Securing engine to engine and gearbox support	36
1.4 Installing engine	40
2 Assembly mountings	47
2.1 Exploded view - assembly mountings	47
2.2 Supporting engine in installation position	49
2.3 Removing and installing engine mountings	51
2.4 Removing and installing gearbox mounting	58
3 Engine cover panel	61
3.1 Removing and installing engine cover panel	61
13 - Crankshaft group	62
1 Cylinder block (pulley end)	62
1.1 Exploded view - poly V-belt drive	62
1.2 Removing and installing poly V-belt	66
1.3 Checking alignment of pulley	68
1.4 Removing and installing vibration damper	69
1.5 Removing and installing bracket for ancillaries	70
1.6 Renewing crankshaft oil seal (pulley end)	74
2 Cylinder block (gearbox end)	76
2.1 Exploded view - cylinder block (gearbox end)	76
2.2 Removing and installing drive plate	76
2.3 Removing and installing sender wheel	78
2.4 Checking sender wheel	78
2.5 Renewing crankshaft oil seal (gearbox end)	79
15 - Cylinder head, valve gear	82
1 Timing chain cover	82
1.1 Exploded view - timing chain cover	82



1.2	Renewing seals for studs	84
1.3	Removing and installing timing chain cover	85
2	Chain drive	93
2.1	Exploded view - camshaft timing chains	93
2.2	Exploded view - drive chain for valve gear	96
2.3	Removing camshaft timing chain from camshafts	96
2.4	Removing and installing camshaft timing chain	105
2.5	Removing and installing drive chain for valve gear	114
3	Cylinder head	117
3.1	Exploded view - cylinder head	117
3.2	Removing and installing cylinder head	120
3.3	Removing and installing cylinder head cover	129
3.4	Checking compression	134
4	Valve gear	136
4.1	Exploded view - valve gear	136
4.2	Measuring axial clearance of camshaft	140
4.3	Measuring radial clearance of camshaft	141
4.4	Removing and installing camshaft	142
4.5	Removing and installing camshaft adjuster	150
4.6	Removing and installing valve stem oil seals	152
5	Inlet and exhaust valves	160
5.1	Checking valve guides	160
5.2	Checking valves	161
5.3	Valve dimensions	161
17	- Lubrication	162
1	Sump/oil pump	162
1.1	Exploded view - sump/oil pump	162
1.2	Engine oil	165
1.3	Removing and installing sump (bottom section)	165
1.4	Removing and installing sump (top section)	168
1.5	Removing and installing oil pump	178
1.6	Removing and installing oil level and oil temperature sender G266	181
2	Engine oil cooler	182
2.1	Removing and installing engine oil cooler	182
3	Oil filter/oil pressure switches	184
3.1	Exploded view - oil pressure switches/crankcase breather system	184
3.2	Removing and installing oil pressure switch F22	185
3.3	Removing and installing oil pressure switch for reduced oil pressure F378	186
3.4	Checking oil pressure	187
19	- Cooling	189
1	Cooling system/coolant	189
1.1	Connection diagram - coolant hoses	189
1.2	Checking cooling system for leaks	193
1.3	Draining and filling cooling system	194
2	Coolant pump/thermostat assembly	202
2.1	Exploded view - coolant pump	202
2.2	Exploded view - thermostat	203
2.3	Removing and installing electric coolant pump	203
2.4	Removing and installing coolant pump	204
2.5	Removing and installing thermostat	206
2.6	Checking thermostat	210
2.7	Removing and installing coolant temperature sender G62	211

3	Coolant pipes	212
3.1	Exploded view - coolant pipes	212
3.2	Removing and installing coolant pipes	213
4	Radiator/radiator fans	226
4.1	Exploded view - radiator/radiator fans	226
4.2	Exploded view - auxiliary radiator	229
4.3	Removing and installing radiator	229
4.4	Removing and installing radiator fans	234
4.5	Removing and installing auxiliary radiator	235
24	Mixture preparation - injection	238
1	Injection system	238
1.1	Overview of fitting locations - injection system	238
1.2	Filling and bleeding fuel system	247
1.3	Checking fuel system for leaks	248
2	Air cleaner	249
2.1	Exploded view - air cleaner housing	249
2.2	Removing and installing air cleaner housing	250
3	Intake manifold	253
3.1	Exploded view - intake manifold	253
3.2	Removing and installing intake manifold	254
3.3	Removing and installing throttle valve module J338 / J544	255
4	Injectors	257
4.1	Exploded view - fuel rail with injectors	257
4.2	Removing and installing injectors	258
4.3	Cleaning injectors	264
5	Senders and sensors	266
5.1	Removing and installing fuel pressure sender G247 / G624	266
5.2	Removing and installing air mass meter	267
5.3	Removing and installing fuel pressure sender for low pressure G410	267
6	High-pressure pump	269
6.1	Exploded view - high-pressure pump	269
6.2	Removing and installing high-pressure pump	270
6.3	Removing and installing high-pressure pipe	275
7	Lambda probe	280
7.1	Exploded view - Lambda probe	280
7.2	Removing and installing Lambda probe	281
8	Engine control unit	287
8.1	Wiring and component check	287
8.2	Removing and installing engine control unit J623 / J624	289
26	Exhaust system	291
1	Exhaust pipes/silencers	291
1.1	Exploded view - silencers	291
1.2	Separating exhaust pipes/silencers	293
1.3	Removing and installing front silencer	294
1.4	Removing and installing silencers	295
1.5	Stress-free alignment of exhaust system	296
1.6	Checking exhaust system for leaks	297
1.7	Checking vacuum unit for exhaust flap	297
1.8	Removing and installing exhaust flap control unit J883 / J945	298
2	Secondary air system	300
2.1	Exploded view - secondary air system	300
2.2	Removing and installing secondary air pump motor V101 / V189	303

2.3	Checking combination valve	303
2.4	Removing and installing combination valve	305
2.5	Removing and installing senders for secondary air pressure G609 / G610	305
3	Exhaust manifolds	307
3.1	Exploded view - exhaust manifolds	307
3.2	Renewing exhaust manifold gaskets	308
3.3	Removing and installing exhaust manifolds	310
28 - Ignition system	319	
1	Ignition system	319
1.1	Exploded view - ignition system	319
1.2	Test data, spark plugs	320
1.3	Removing and installing ignition coils with output stages	320
1.4	Removing and installing knock sensor	321
1.5	Removing and installing Hall senders	323
1.6	Removing and installing engine speed sender G28	324