

Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 General notes on self-diagnosis	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
1.3 Safety precautions for vehicles with start/stop system	2
1.4 Safety precautions when working on the fuel system	2
1.5 Safety precautions when working on the ignition system	3
1.6 Warning instructions when working on vehicles with high-voltage system	4
1.7 Reducing pressure in high-pressure section of injection system	8
1.8 Checking vacuum system	9
2 Injection system	10
2.1 Technical data	10
2.2 Injection system - overview of fitting locations	11
3 Air cleaner	20
3.1 Air cleaner housing - exploded view	20
3.2 Removing and installing engine cover panel	21
3.3 Removing and installing air filter element	22
3.4 Removing and installing air cleaner housing	24
4 Intake manifold	26
4.1 Intake manifold - exploded view	26
4.2 Removing and installing intake manifold	27
4.3 Fuel rail - exploded view	34
4.4 Removing and installing fuel rail	35
4.5 Removing and installing throttle valve module J338	36
4.6 Cleaning throttle valve module J338	37
4.7 Checking intake manifold change-over function	38
5 Injectors	40
5.1 Removing and installing injectors	40
5.2 Cleaning injectors	44
6 High-pressure pump	46
6.1 High-pressure pump - exploded view	46
6.2 Removing and installing high-pressure pump	47
7 Senders and sensors	50
7.1 Removing and installing air mass meter G70	50
7.2 Removing and installing fuel pressure sender G247	50
7.3 Checking fuel pressure sender G247	52
7.4 Checking dual non-return valve	54
8 Lambda probe	56
8.1 Lambda probe - exploded view	56
8.2 Removing and installing Lambda probe G39 and Lambda probe heater Z19 before catalytic converter	57
8.3 Removing and installing Lambda probe after catalytic converter G130 and Lambda probe 1 heater after catalytic converter Z29	57
9 Engine control unit	59
9.1 Checking wiring and components with isolator box, 198-pin VAS 6606	59
9.2 Removing and installing engine control unit J623	60
28 - Ignition system	63
1 General notes and safety precautions	63
1.1 General notes on ignition system	63
1.2 Safety precautions	63
2 Ignition system	65

2.1	Test data	65
2.2	Ignition system - exploded view	66
2.3	Removing and installing ignition coils with output stages	66
2.4	Removing knock sensor 1 G61	68
2.5	Removing and installing engine speed sender G28	69