

## Contents

<b>24 - Mixture preparation - injection</b>	<b>1</b>
<b>1 Safety precautions and rules for cleanliness</b>	<b>1</b>
1.1 General notes on self-diagnosis	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
1.3 Safety precautions	2
1.4 Safety precautions when working on vehicles with start/stop system	3
1.5 Rules for cleanliness when working on the injection system	3
1.6 Reducing pressure in high-pressure section of injection system	4
1.7 Checking for leaks in the fuel system	5
1.8 Checking vacuum system	5
<b>2 Technical data</b>	<b>6</b>
<b>3 Overview of fitting locations</b>	<b>7</b>
<b>4 Air cleaner</b>	<b>13</b>
4.1 Air cleaner - exploded view	13
4.2 Removing and installing air cleaner housing	14
<b>5 Intake manifold, fuel rail and injectors</b>	<b>16</b>
5.1 Exploded view - intake manifold	16
5.2 Exploded view - fuel rail with injectors	17
5.3 Removing and installing throttle valve module J338	19
5.4 Removing and installing intake manifold	20
5.5 Removing and installing fuel rail	21
5.6 Removing and installing injectors	22
5.7 Removing and installing fuel pressure sender G247	26
<b>6 High-pressure pump</b>	<b>27</b>
6.1 Exploded view - high-pressure pump	27
6.2 Removing and installing high-pressure pipes	29
6.3 Removing and installing high-pressure pump	30
<b>7 Lambda probes</b>	<b>35</b>
7.1 Overview - Lambda probes	35
7.2 Removing and installing Lambda probes G39 / G130	36
7.3 Removing and installing Lambda probes G108 / G131	37
<b>8 Engine control unit</b>	<b>39</b>
8.1 Wiring and component check with test box V.A.G 1598/42	39
8.2 Removing and installing engine control unit J623	40
<b>28 - Ignition system</b>	<b>43</b>
<b>1 General notes and safety precautions</b>	<b>43</b>
1.1 General notes on ignition system	43
1.2 Safety precautions when working on the injection and ignition system	43
1.3 Safety precautions when working on vehicles with start/stop system	44
1.4 Safety precautions when using testers and measuring instruments during a road test	44
<b>2 Servicing ignition system</b>	<b>45</b>
2.1 Test data	45
2.2 Exploded view - ignition system	46
2.3 Removing and installing ignition coils	47
2.4 Removing and installing knock sensors G61 / G66	48
2.5 Removing and installing Hall senders G40 / G163 / G300 / G301	49
2.6 Removing and installing engine speed sender G28	50