

Contents

24	Mixture preparation - injection	1
1	Safety precautions and rules for cleanliness	1
1.1	General notes on self-diagnosis	1
1.2	Safety precautions when using testers and measuring instruments during a road test	1
1.3	Safety precautions when working on vehicles with start/stop system	2
1.4	Safety precautions when working on the fuel system	2
1.5	Safety precautions when working on the injection system	3
1.6	Reducing pressure in high-pressure section of injection system	3
1.7	Checking fuel system for leaks	4
1.8	Checking vacuum system	5
2	Injection system	6
2.1	Test data	6
2.2	Overview of fitting locations	6
2.3	Air cleaner - exploded view	17
2.4	Removing and installing engine cover panels	18
2.5	Removing and installing air filter element	18
2.6	Removing and installing air cleaner housing	20
2.7	Intake manifold (bottom section), fuel rail, injector - exploded view	22
2.8	Removing and installing intake air temperature sender G42 / intake manifold pressure sender G71	25
2.9	Removing and installing throttle valve module J338	25
2.10	Removing and installing regulating flap control unit J808	27
2.11	Removing and installing intake manifold (bottom section) with fuel rail	27
2.12	Removing and installing injectors	30
2.13	Checking fuel pressure and residual pressure (up to high-pressure pump)	33
2.14	High-pressure pump - exploded view	36
2.15	Removing and installing high-pressure pipe	37
2.16	Removing and installing high-pressure pump	39
2.17	Lambda probes - overview	42
2.18	Removing and installing Lambda probe G39 and Lambda probe after catalytic converter G130	42
2.19	Removing and installing Lambda probe 2 G108 and Lambda probe 2 after catalytic converter G131	44
3	Engine control unit	46
3.1	Wiring and component check with test box V.A.G 1598/42	46
3.2	Removing and installing engine control unit J623	48
28	Ignition system	50
1	General notes and safety precautions	50
1.1	General notes on ignition system	50
1.2	Safety precautions when working on the injection and ignition system	50
1.3	Safety precautions when working on vehicles with start/stop system	51
1.4	Safety precautions when using testers and measuring instruments during a road test	51
2	Servicing ignition system	52
2.1	Test data	52
2.2	Ignition system - exploded view	52
2.3	Removing and installing ignition coils	53
2.4	Removing and installing knock sensors G61 / G66	54
2.5	Removing and installing Hall senders G40 / G163	55
2.6	Removing and installing engine speed sender G28	56