

Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 General notes on self-diagnosis	1
1.2 Safety precautions when working on vehicles with start/stop system	1
1.3 Safety precautions	2
1.4 Rules for cleanliness when working on the injection system	3
1.5 Important: Required procedure prior to opening high-pressure injection system	3
1.6 Checking vacuum system	4
2 Technical data	6
3 Overview of fitting locations	7
4 Air cleaner	17
4.1 Air cleaner - exploded view	17
4.2 Removing and installing engine cover panel	18
4.3 Removing and installing air filter element	18
4.4 Removing and installing air cleaner housing	20
5 Intake manifold and injectors	22
5.1 Intake manifold - exploded view	22
5.2 Removing and installing intake manifold	23
5.3 Removing and installing throttle valve module J338	27
5.4 Intake manifold (bottom section) with fuel rail - exploded view	30
5.5 Injectors and fuel rail - exploded view	31
5.6 Removing and installing intake manifold (bottom section) with fuel rail	32
5.7 Removing and installing injectors	35
5.8 Diagram of vacuum hose connections at intake manifold	40
6 High-pressure pump	41
6.1 High-pressure pump - exploded view	41
6.2 Removing and installing high-pressure pump	43
7 Components of injection system	46
7.1 Removing and installing fuel pressure sender G247	46
7.2 Checking fuel pressure and residual pressure (up to high-pressure pump)	46
8 Lambda probes	51
8.1 Lambda probes - overview	51
8.2 Removing and installing Lambda probe G39 (before catalytic converter)	51
8.3 Removing and installing Lambda probe after catalytic converter G130	54
8.4 Removing and installing Lambda probe 2 G108 (before catalytic converter)	56
8.5 Removing and installing Lambda probe after catalytic converter G131	58
9 Engine control unit	60
9.1 Wiring and component check with break-out box VAS 6606	60
9.2 Removing and installing engine control unit J623	61
28 - Ignition system	64
1 General notes and safety precautions	64
1.1 General notes on ignition system	64
1.2 Safety precautions	64
2 Servicing ignition system	66
2.1 Test data	66
2.2 Ignition system - exploded view	66
2.3 Removing and installing ignition coils	67
2.4 Removing and installing knock sensors G61 , G66 , G198 , G199	69
2.5 Removing and installing Hall senders	70
2.6 Removing and installing engine speed sender G28	71