

Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 General notes on self-diagnosis	1
1.2 Safety precautions when working on the fuel system	2
1.3 Safety precautions when working on the injection and ignition system	2
1.4 Safety precautions when working on vehicles with start/stop system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	3
1.6 Rules for cleanliness and instructions for working on fuel system	4
1.7 Procedure before opening high-pressure section of injection system	4
1.8 Checking for leaks in the fuel system	5
1.9 Checking vacuum system	5
2 Test data	6
3 Overview of fitting locations	7
4 Air cleaner	16
4.1 Air cleaner - exploded view	16
4.2 Removing and installing engine cover panel	17
4.3 Removing and installing air filter element	18
4.4 Removing and installing air cleaner housing	20
4.5 Removing and installing air mass meter G70 / G246	21
5 Intake manifold, fuel rail and injectors	23
5.1 Intake manifold - exploded view	23
5.2 Removing and installing intake manifolds	24
5.3 Removing and installing throttle valve module J338 / J544	25
5.4 Fuel rail and injectors - exploded view	27
5.5 Removing and installing injectors	29
5.6 Removing and installing fuel pressure sender G247 / G624	35
5.7 Checking fuel pressure and residual pressure (up to high-pressure pump)	36
6 High-pressure pump	39
6.1 High-pressure pump - exploded view	39
6.2 Removing and installing high-pressure pump (right-side) on cylinder bank 1	40
6.3 Removing and installing high-pressure pump (left-side) on cylinder bank 2	42
6.4 Removing and installing high-pressure pipes	45
6.5 Removing and installing fuel pressure sender for low pressure G410	49
7 Lambda probes	50
7.1 Lambda probes - overview	50
7.2 Removing and installing Lambda probe G39 / G108 (before catalytic converter)	51
7.3 Removing and installing Lambda probe G285 / G286 (before catalytic converter)	52
7.4 Removing and installing Lambda probe after catalytic converter G130 / G131 / G287 / G288	54
8 Engine control unit	56
8.1 Wiring and component check with test box V.A.G 1598/42	56
8.2 Removing and installing engine control unit J623 (master) / J624 (slave)	58
28 - Ignition system	60
1 General notes and safety precautions	60
1.1 General notes on ignition system	60
1.2 Safety precautions when working on the injection and ignition system	60
1.3 Safety precautions when working on vehicles with start/stop system	61
1.4 Safety precautions when using testers and measuring instruments during a road test	61
2 Servicing ignition system	62
2.1 Test data	62
2.2 Ignition system - exploded view	63



2.3	Removing and installing ignition coils	64
2.4	Removing and installing knock sensors G61 / G66 / G198 / G199	64
2.5	Removing and installing Hall senders G40 / G163 / G301 / G300	66
2.6	Removing and installing engine speed sender G28	68